

FORM 32563
REPLACES
FORM 32163

No. 955
TRAXCAVATOR
No. 955A ^{AND} **BULLDOZER**

PARTS
Catalog

SERIAL NUMBERS
TRAXCAVATOR
12A1—UP
BULLDOZER
42D1—UP

CATERPILLAR TRACTOR CO.



FORM 32563
REPLACES
FORM 32163

No. 955
TRAXCAVATOR
No. 955A ^{AND} **BULLDOZER**

PARTS
Catalog

SERIAL NUMBERS
TRAXCAVATOR
12A1 - UP
BULLDOZER
42D1 - UP

CATERPILLAR TRACTOR CO.



CATERPILLAR

Reg. U. S. Pat. Off.

PRINTED IN U. S. A.

FORM 32563

143 rue du Thivierge Atelier

Bvd Royal,
Bureau

Tel. 29358

NO. 955 TRAXCAVATOR
and
NO. 955A BULLDOZER

Robert de Muyser & Cie
25, Avenue de la Liberté
Luxembourg
Téléphone 39-30

HOW TO ORDER PARTS

Please be sure to furnish the quantity, part number and name of each part wanted. It is also important to give the serial number of the machine for which the parts are intended. Location of serial number plates may be determined by referring to the "Specifications" page of this parts catalog. It is suggested that you write the serial number of your machine in this space so that it will be readily available when you need it.

to buyer

THIS PARTS CATALOG FOR
MACHINE SERIAL NUMBER

Typ. 955 Seri 12.9.77.28

Bergersat-Dutry

To insure prompt delivery, please don't overlook furnishing the correct name of the consignee, also the street address, town, county and state to which the parts are to be shipped, and indicate whether shipment is to be made by freight, express, parcel post or by other means.

WHERE TO ORDER PARTS

25241 h. Ugen Acces

Caterpillar dealers maintain over 400 stores in the United States, and similar establishments are located strategically in nearly all countries throughout the world. These organizations are backed by the extensive facilities and resources of Caterpillar Tractor Co.

Dealer personnel are factory trained in the stocking and issuing of parts, and large stocks are constantly maintained to insure prompt service. Contact your nearest Caterpillar dealer to make sure that he has your name and address, the correct serial number of your machine, and an accurate list of accessories and attachments. This record will facilitate the issuance of parts when you need them in a hurry.

WHAT THE CATERPILLAR DEALER CAN DO FOR YOU

Caterpillar dealers are in the business of making it economical and profitable for you to own and operate Caterpillar machinery. They are in constant touch with the factory for new developments in repair and maintenance methods, operating procedures, and parts requirements. Their parts stocks are active and up-to-date, including all parts normally required to protect your investment in Caterpillar machinery.

Nearly all Caterpillar dealers offer 24-hour emergency service. For quick reference, write the name and address of the local dealer on your desk pad or the front of your phone book.

ONLY CATERPILLAR PARTS GIVE CATERPILLAR PERFORMANCE

The same quality and craftsmanship that has made Caterpillar products famous throughout the world is built into all Caterpillar replacement parts.

INDEX

Diesel Engine (Page 12)

Name	Page	Name	Page
Accessory Shaft	18	Gauge—Oil	17
Air Cleaner	16	Governor—Basic	28
Balancer	24	Governor—Complete	27
Breather	17	Heat Indicator	17
Camshaft	25	Hour Meter	32
Connecting Rod	25	Idler Gear	18
Control—Compression Release	18	Manifolds	15
Control—Fuel Pump	27	Numerical Parts Index	156
Control—Governor	27	Oil Cooler	39
Control—Governor—Positive Locking	26	Oil Filler	17
Crankshaft	23	Oil Lines	36
Crankshaft Bearings	24	Piston	25
Cylinder Block and Covers	20	Pump—Fuel Transfer	32
Cylinder Head	19	Pump—Oil	38
Fan	14	Pump—Water	14
Filter—Fuel	31	Radiator	12
Filter—Oil	36	Tools	151
Fuel Injection System	33	Transfers	155
Fuel System	30	Valve Mechanism	19
Gauge—Fuel	17	Specifications	168
		Water Lines	15

Starting Engine

(Page 40)

Air Cleaner	46	Cylinder Block	42
Battery	60	Cylinder Head	42
Breather	46	Fuel System	48
Camshaft	46	Generator	54
Carburetor	44	Governor	40
Clutch	47	Ignition System	48
Clutch Housing	50	Magneto	49
Connecting Rod	54	Piston	45
Controls—Carburetor	45	Starter Pinion	50
Control—Clutch	53	Starting System—Electric	58
Control—Starter Pinion	53	Valve Mechanism	42
Crankshaft	44		

Clutch, Transmission and Chassis

(Page 61)

Brakes	75
Clutch—Flywheel	62

Clutch, Transmission and Chassis—Continued

Name	Page	Name	Page
Clutch—Steering	74	Hood and Guard	86
Control—Flywheel Clutch	64	Idler—Front	78
Control—Gear Shift	64	Roller—Track	81
Control—Steering Clutch	72	Roller—Track Carrier	82
Dash	87	Seat Cushions	83
Drawbar	88	Support—Engine	89
Final Drive	76	Support—Fuel Tank and Seat	84
Floor Plate	87	Track	83
Frame—Track Roller	79	Transmission	66
Guards—Track Roller Frame	80	Transmission Case and Covers	68

Hydraulic Controls

(Page 90)

Hand Control—Hydraulic Valve	108	Pump and Lines	102
Lines	109	Valve and Tank	90

Traxcavator

(Page 110)

Bucket	112	Frame	114
Control—Bucket	113	Guard—Crankcase	115
Cylinder—Lift	111	Kickout—Bucket	
Cylinder—Tilt	110	Lift Control	112

Attachments

(Page 115)

Aid—Ether Starting	143	Lighting System—24 Volt	134
Arrester—Spark	121	Logging Fork	120
Battery and Wiring	137	Muffler	122
Bucket	116	Pin and Bushing—Track	147
Bulldozer—Straight Blade	147	Pump—Fuel Priming	145
Counterweight	121	Rain Trap—Exhaust	122
Extension—Spill Plate	120	Starter—Electric	140
Generator	123	Starting System—Electric	138
Glow Plug	142	Teeth—Bucket	118
Hook—Front Pull	115	Lighting System—6 Volt	146

No. 955A Bulldozer

(Page 148)

Bulldozer—Angling Blade	148
Trunnion	150

INDEX ALPHABÉTIQUE

Moteur diesel (Page 12)

Désignation	Page	Désignation	Page
Accélérateur (timonerie)	27	Instructions sur décalcomanies	155
Alimentation en carburant	30	Manomètre de pression de carburant	17
Arbre à cames	25	Manomètre de pression d'huile	17
Arbre des entraînements secondaires	18	Outilage	151
Bielles	25	Pistons	25
Bloc-cylindres	20	Pompe à eau	14
Canalisation de graissage	36	Pompe à huile de graissage	38
Caractéristiques	168	Pompe d'alimentation	32
Collecteurs	15	Pompe d'injection	33
Compteur d'entretien	32	Radiateur	12
Coude de remplissage d'huile	17	Réfrigérant d'huile de graissage	39
Coussinets de vilebrequin	24	Régulateur (complet)	27
Culasse	19	Régulateur (groupe de base)	28
Décompressseur (commande)	18	Régulateur (verrouillage anti-retour)	26
Engrenage intermédiaire (distribution)	18	Reniflard	17
ÉquilibrEUR dynamique	24	Soupapes	19
Filtre à air	16	Thermomètre	17
Filtre à carburant	31	Tuyauterie d'eau	15
Filtre à huile de graissage	36	Ventilateur	14
Index numérique des pièces	156	Vilebrequin	23

Groupe de lancement

(Page 40)

Allumage	48	Dynamo	54
Arbre à cames	44	Embrayage de lancement	50
Batterie	60	Filtre à air	46
Bielles	45	Magnéto	49
Bloc-cylindres	42	Pignon de lancement	50
Boîtier d'embrayage de lancement	54	Pistons	45
Carburateur	47	Régulateur	40
Carburateur (commandes)	45	Reniflard	46
Commandes de lancement	53	Soupapes	42
Culasses	42	Tuyauterie d'essence	48
Démarrage électrique	58	Vilebrequin	44

Bâti et organes de transmission

(Page 61)

Barre d'attelage	88
Bâti arrière	68

Bâti et organes de transmission—Continued

Désignation	Page	Désignation	Page
Boîte de vitesses	66	Embrayages de direction (commande)	72
Boîte de vitesses (commande et sélecteur)	64	Freins	75
Capot et protège-radiateur	86	Galets inférieurs	81
Chaîne de roulement	83	Galets supérieurs	82
Châssis porteurs latéraux	79	Plate-forme	87
Commandes finales	76	Protège-galets	80
Embrayage principal	62	Roue AV	78
Embrayage principal (commande)	64	Siège (coussin)	83
Embrayages de direction	74	Support—Siège et réservoir	84
		Tablier	87
		Traverse-support du moteur	89

Commande hydraulique

(Page 90)

Canalisations	109
Leviers et tringlerie	108
Pompe hydraulique et tuyauterie	102
Réservoir et vannes de distribution	90

Traxcavator

(Page 110)

Bâti de l'appareil de levage	114
Bras et bielles de levage	113
Godet	112
Mécanisme de rappel de levage	112
Protège-carter-moteur	115
Vérins de levage	111
Vérins de vidage	110

Accessoires


(Page 115)

Batterie et installation électrique	137
Bougies de départ	142
Bulldozer—Lame droite	147
Chaîne de roulement	146
Chaîne de roulement (axes et bagues)	147
Contrepoids	121
Crochet avant	115
Déflecteur de pluie sur échappement	122
Démarrage électrique direct	138
Démarrreur électrique	140
Dents (pour godet)	118
Dispositif d'injection d'éther	143
Dynamo	123
Fourche de manutention	120
Godet	116
Installation électrique—6 volts	132
Installation électrique—24 volts	134
Pare-étincelles	121
Pompe d'amorçage	145
Pot d'échappement	122
Rehausse de godet	120

Bulldozer N° 955A


(Page 148)

Bulldozer—Lame orientable	148
Tourillons	150

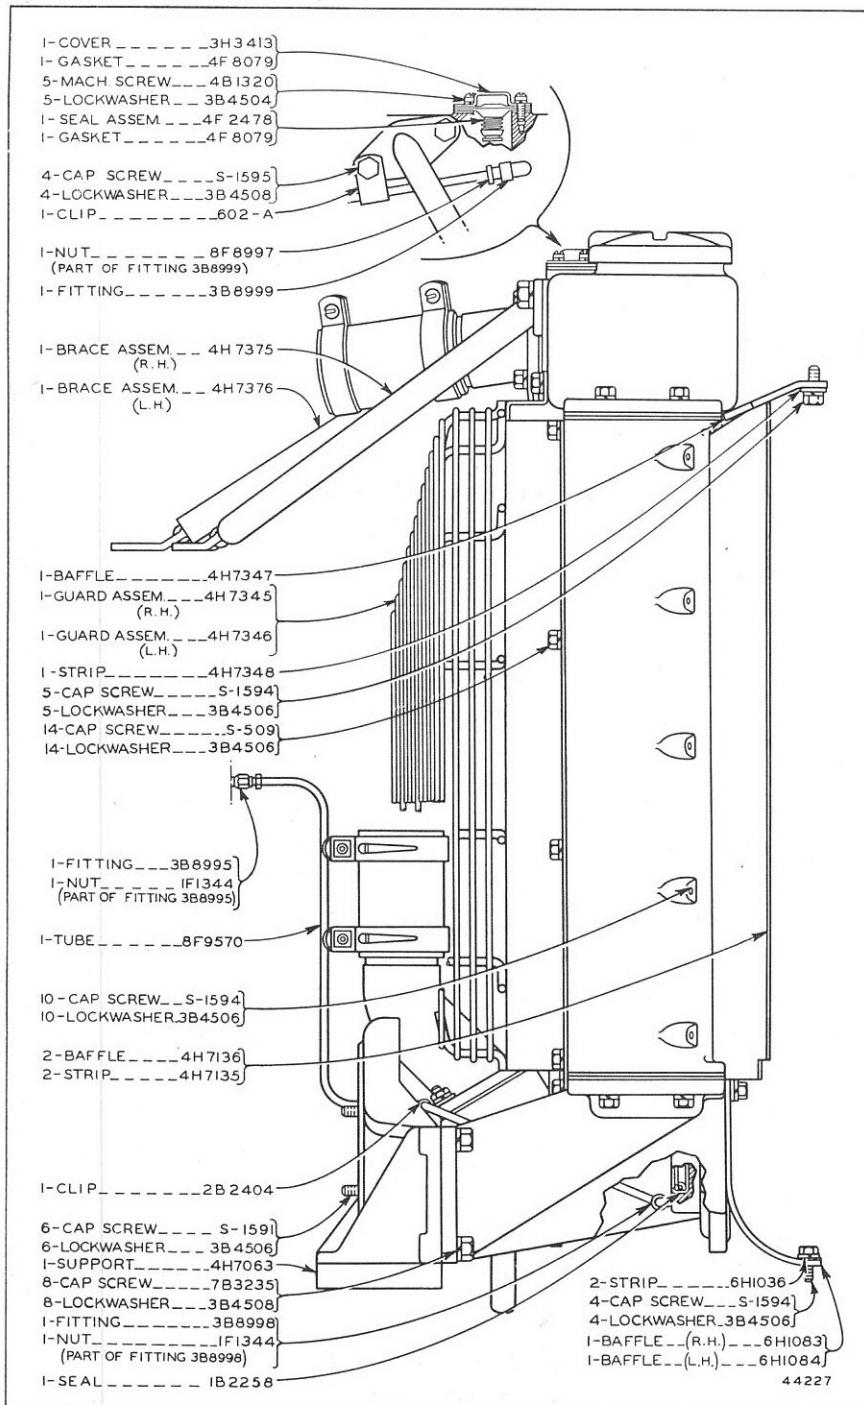


4H7374 RADIATOR GROUP—Part One
Note: 6F6041 Rust Inhibitor is available

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

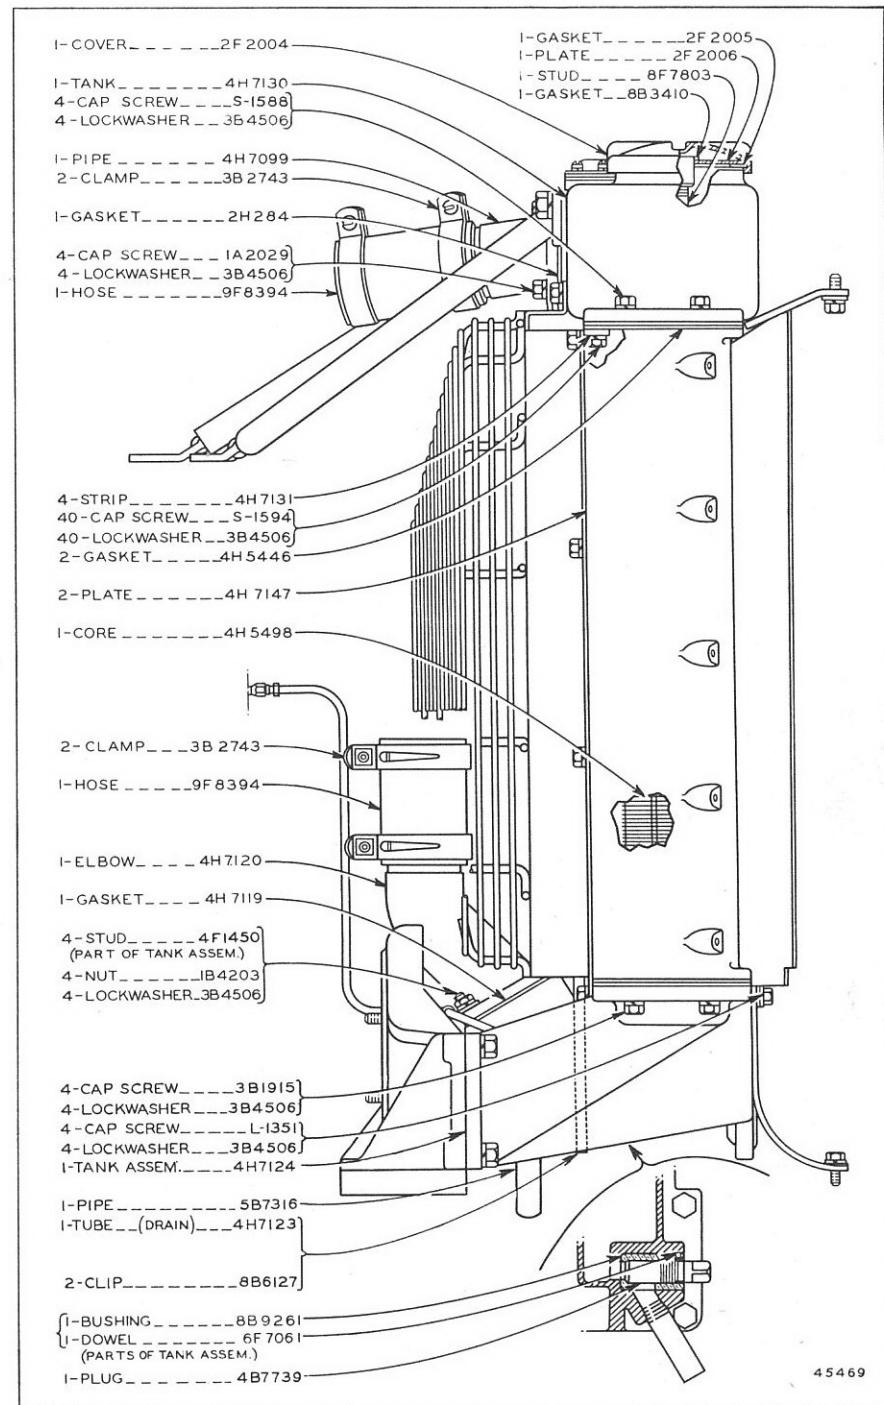


4H7374 RADIATOR GROUP—Part Two
Note: 6F6041 Rust Inhibitor is available

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

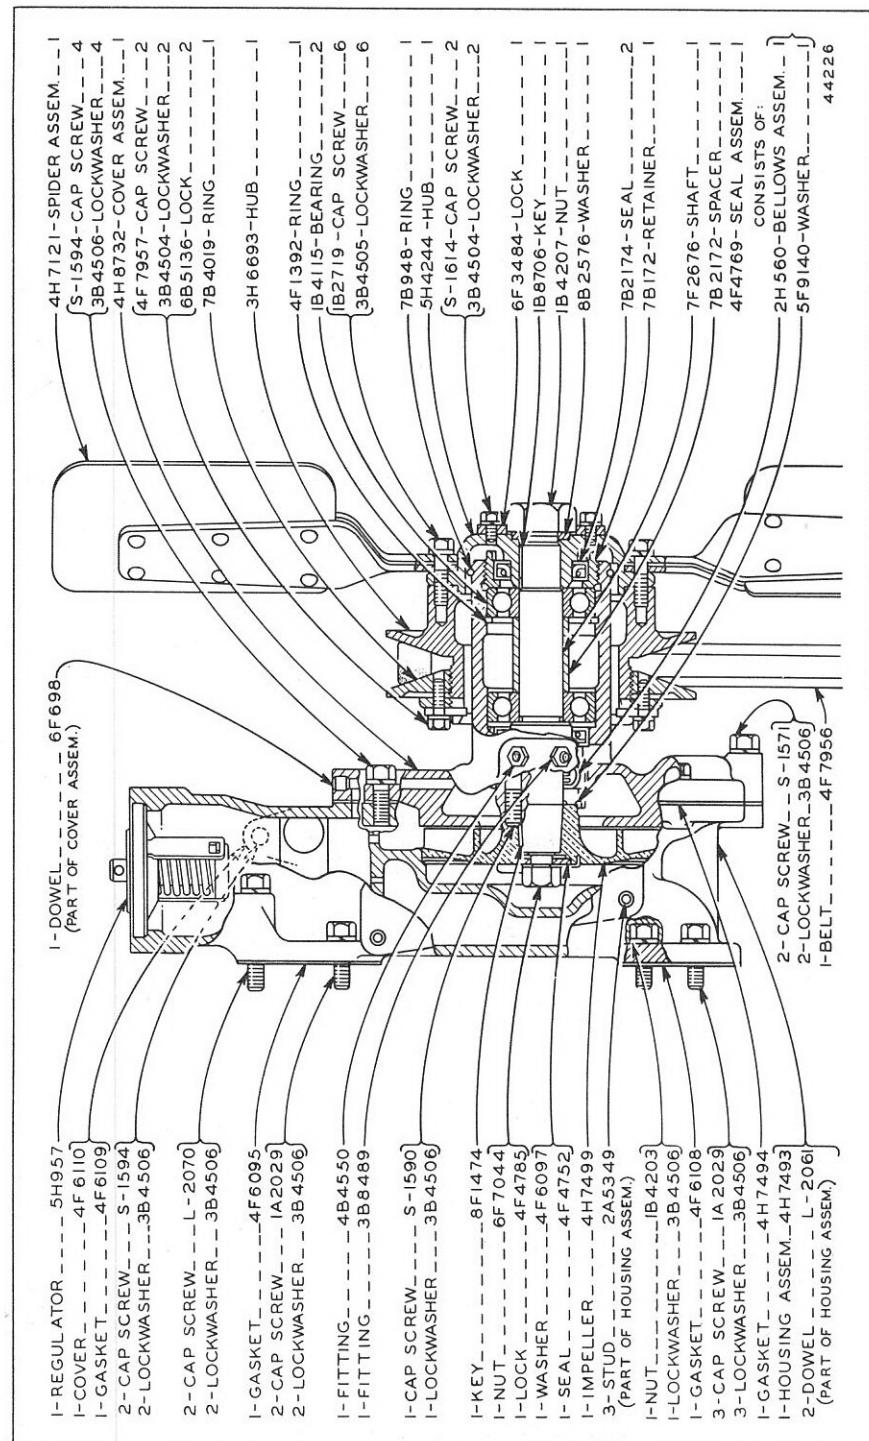

4H7500 FAN AND WATER PUMP GROUP
Serial No. 12A1 to 12A2696, 12A2698 to 12A2700, 12A2705, 12A2707, 12A2709, 12A2713 and 12A2730 inclusive
Note: 2H5099 Water Pump Gasket Group is available




ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

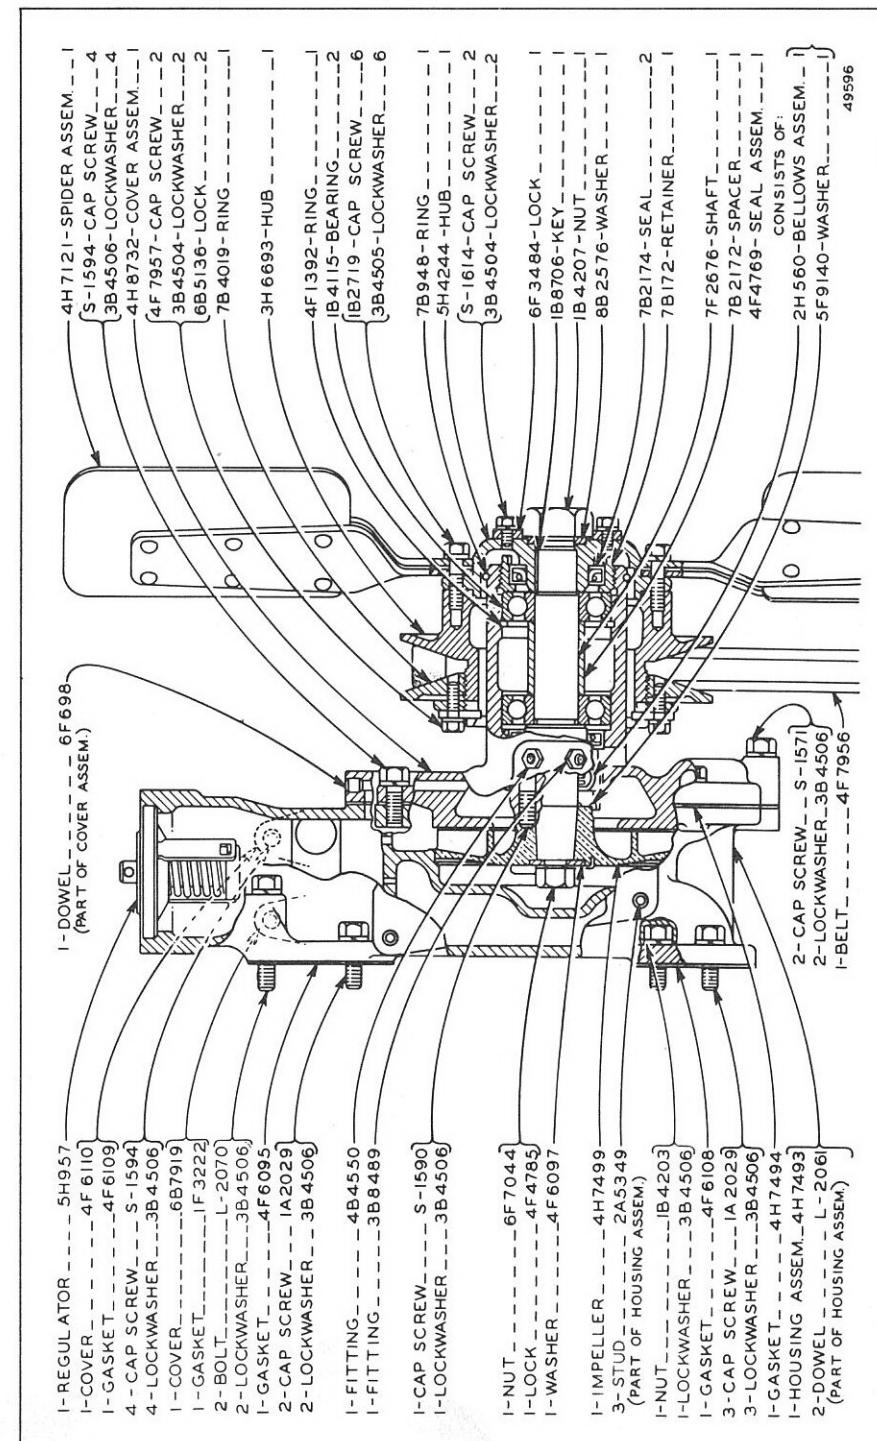

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE


4H7500 FAN AND WATER PUMP GROUP
Serial No. 12A2697, 12A2701, 12A2703, 12A2704, 12A2706, 12A2708, 12A2710 to 12A2712, 12A2714 to 12A2729 and 12A2731-U
Note: 2H5099 Water Pump Gasket Group is available

DIESEL ENGINE

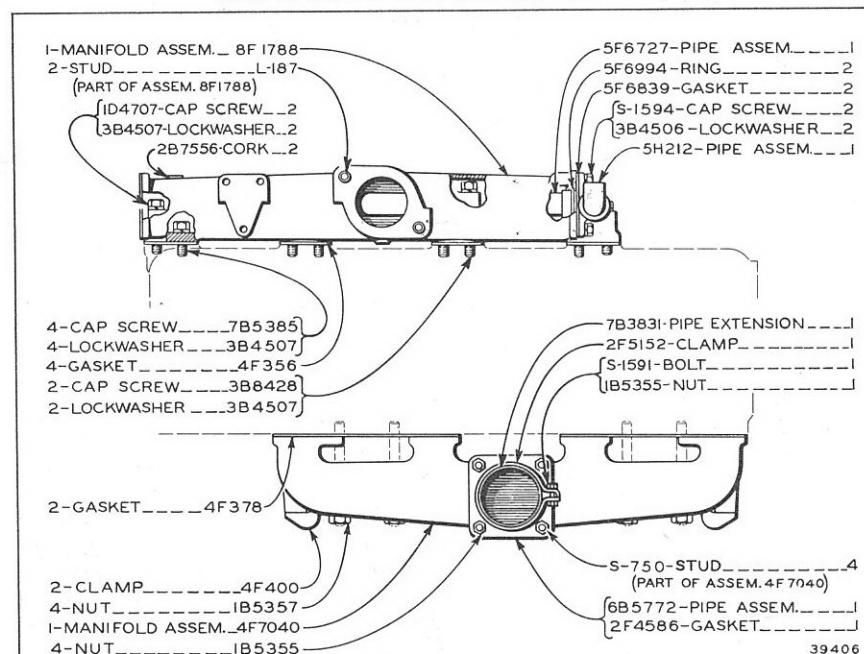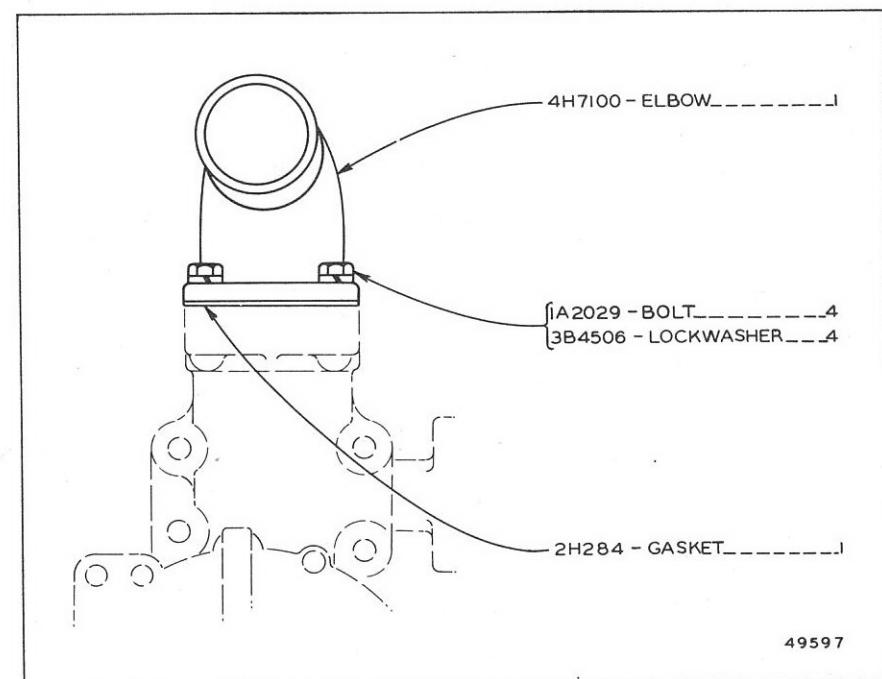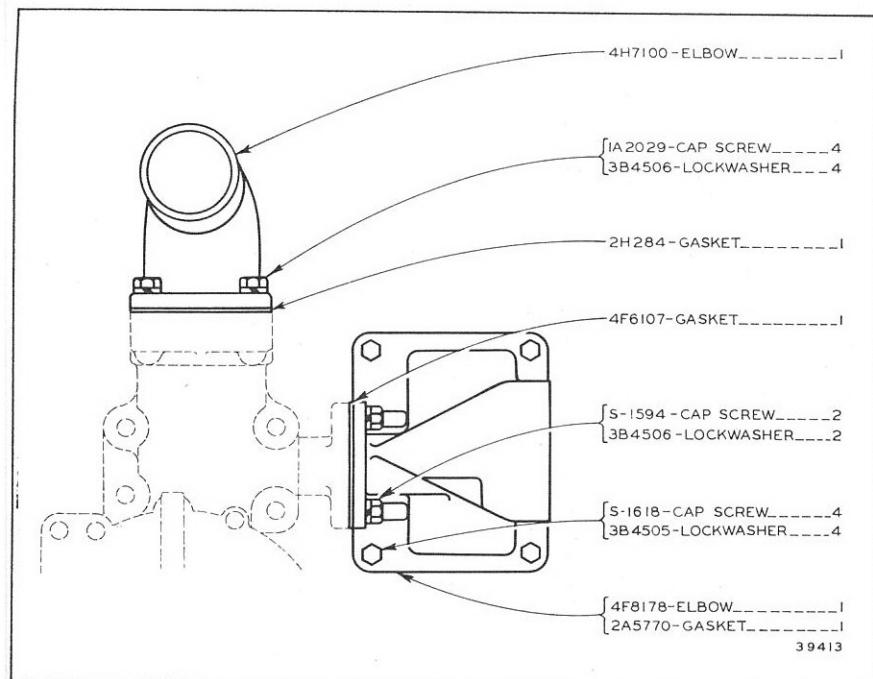


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

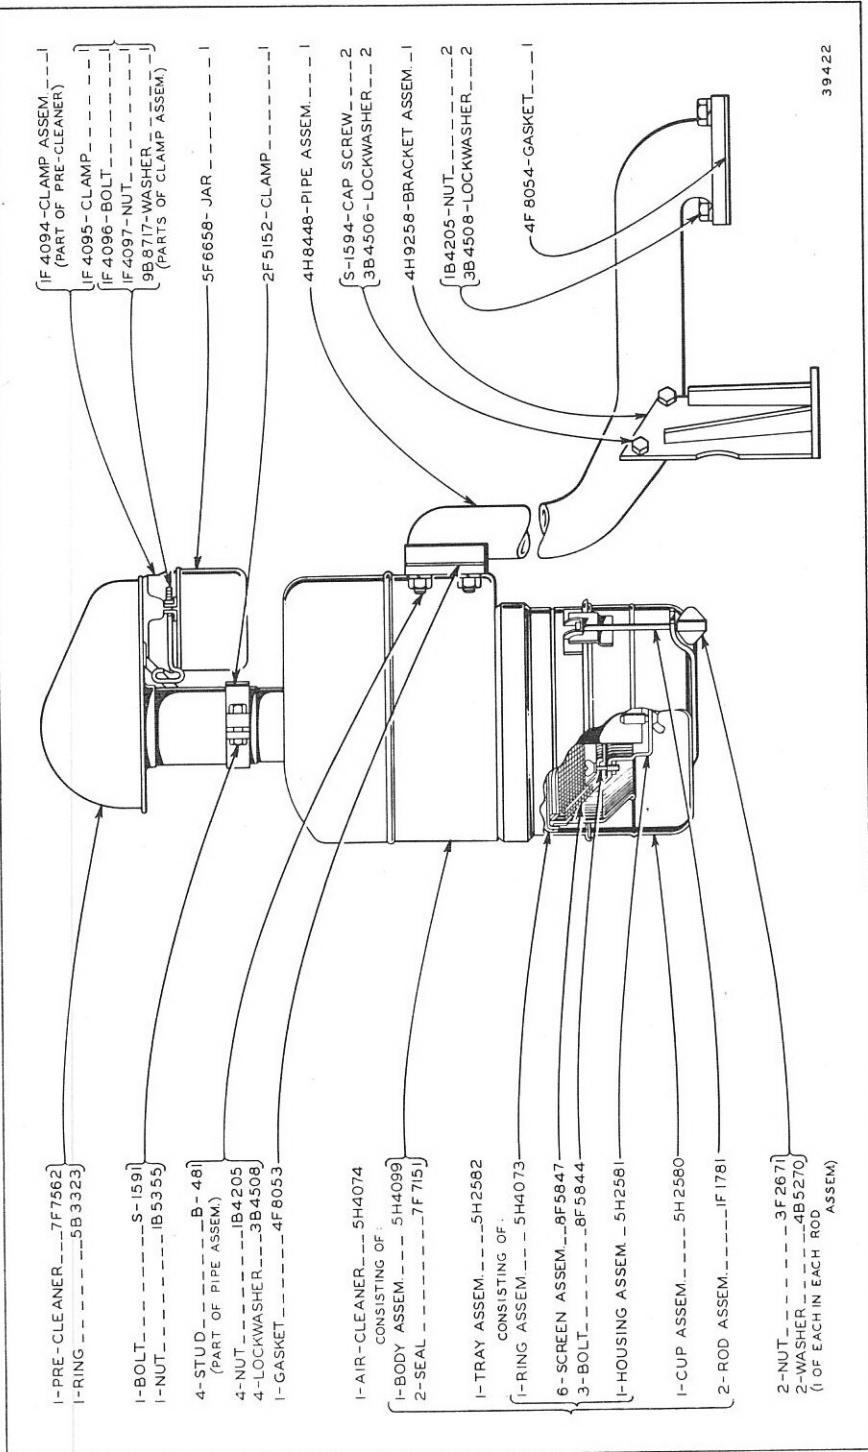


Note: 8F6118 Precleaner is available. For use on[™] operations where there is a possibility of foreign material other than dust being drawn into the Air Cleaner

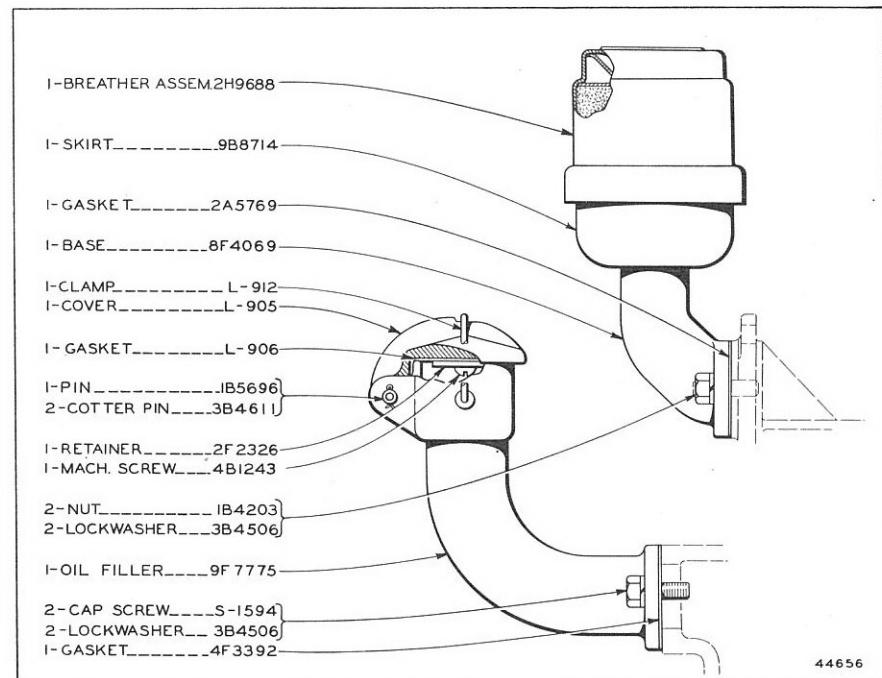


BREATHER AND OIL FILLER

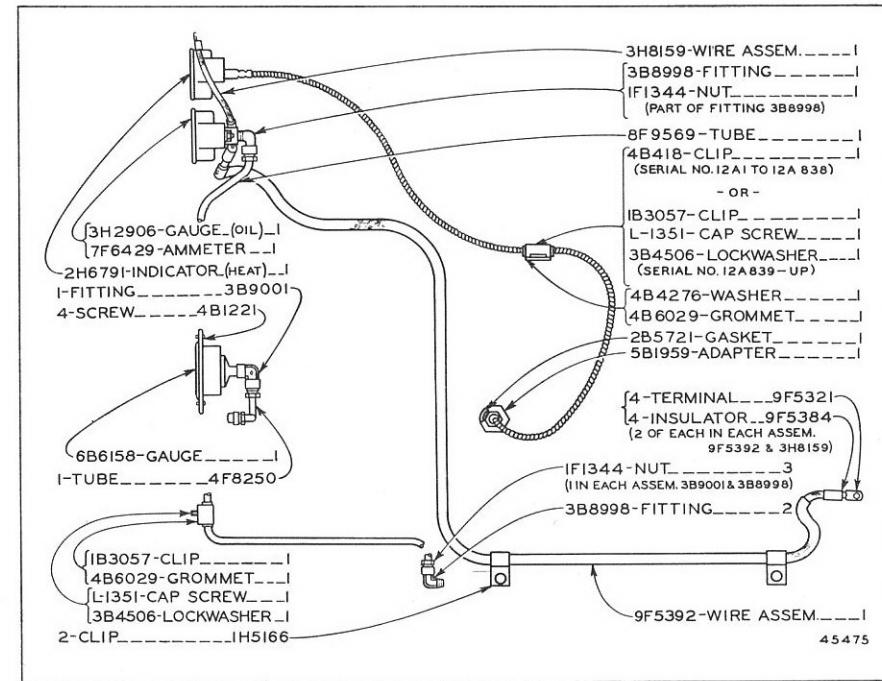

OIL GAUGE, FUEL GAUGE AND HEAT INDICATOR

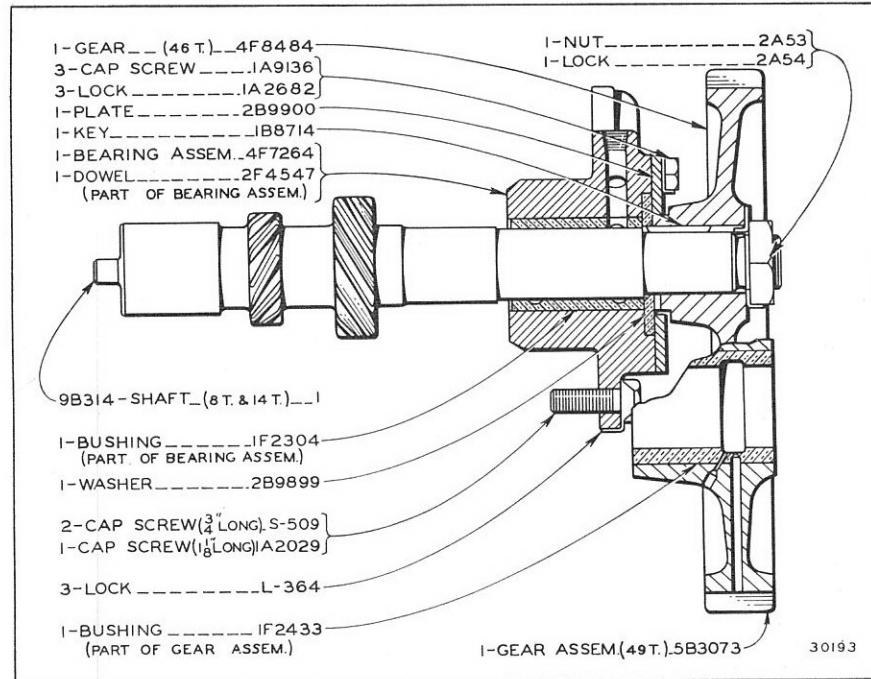


ACCESSORY SHAFT AND IDLER GEAR

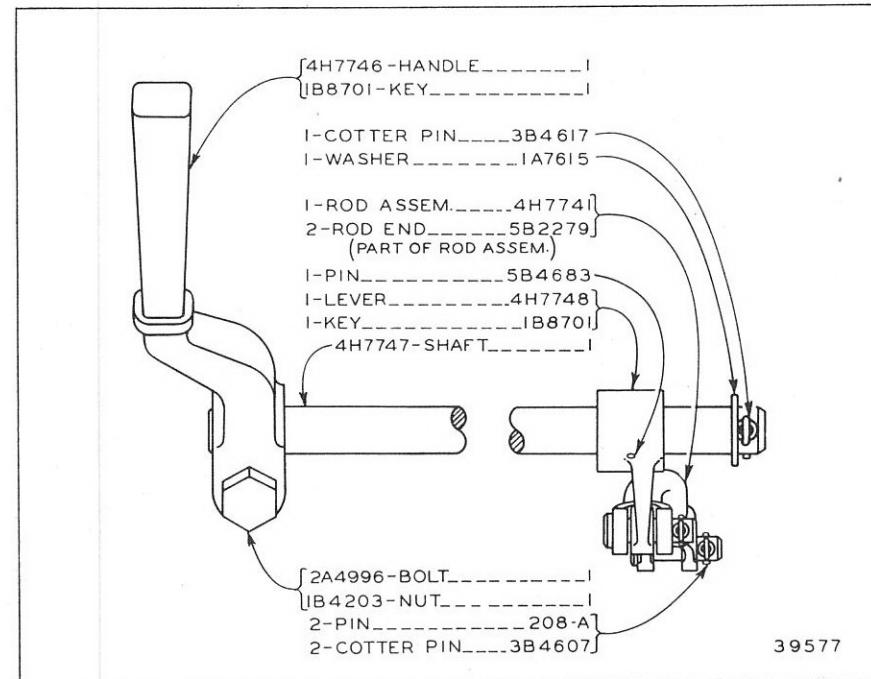


COMPRESSION RELEASE CONTROL

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

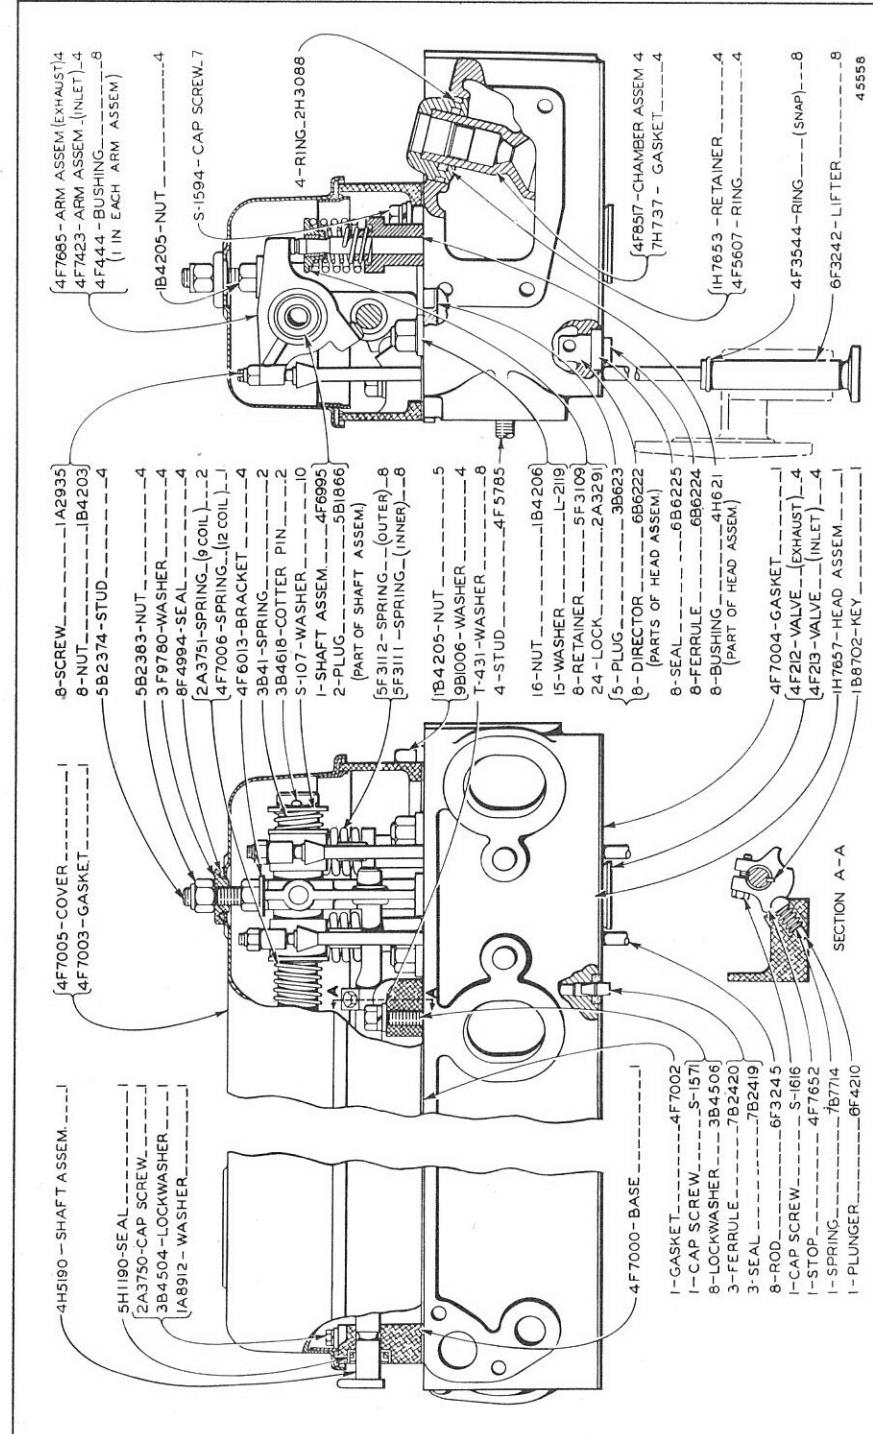

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE


CYLINDER HEAD AND VALVE MECHANISM
Note: 2H5080 Valve Grinding Gasket Group is available
Refer also to Page 142 for special parts

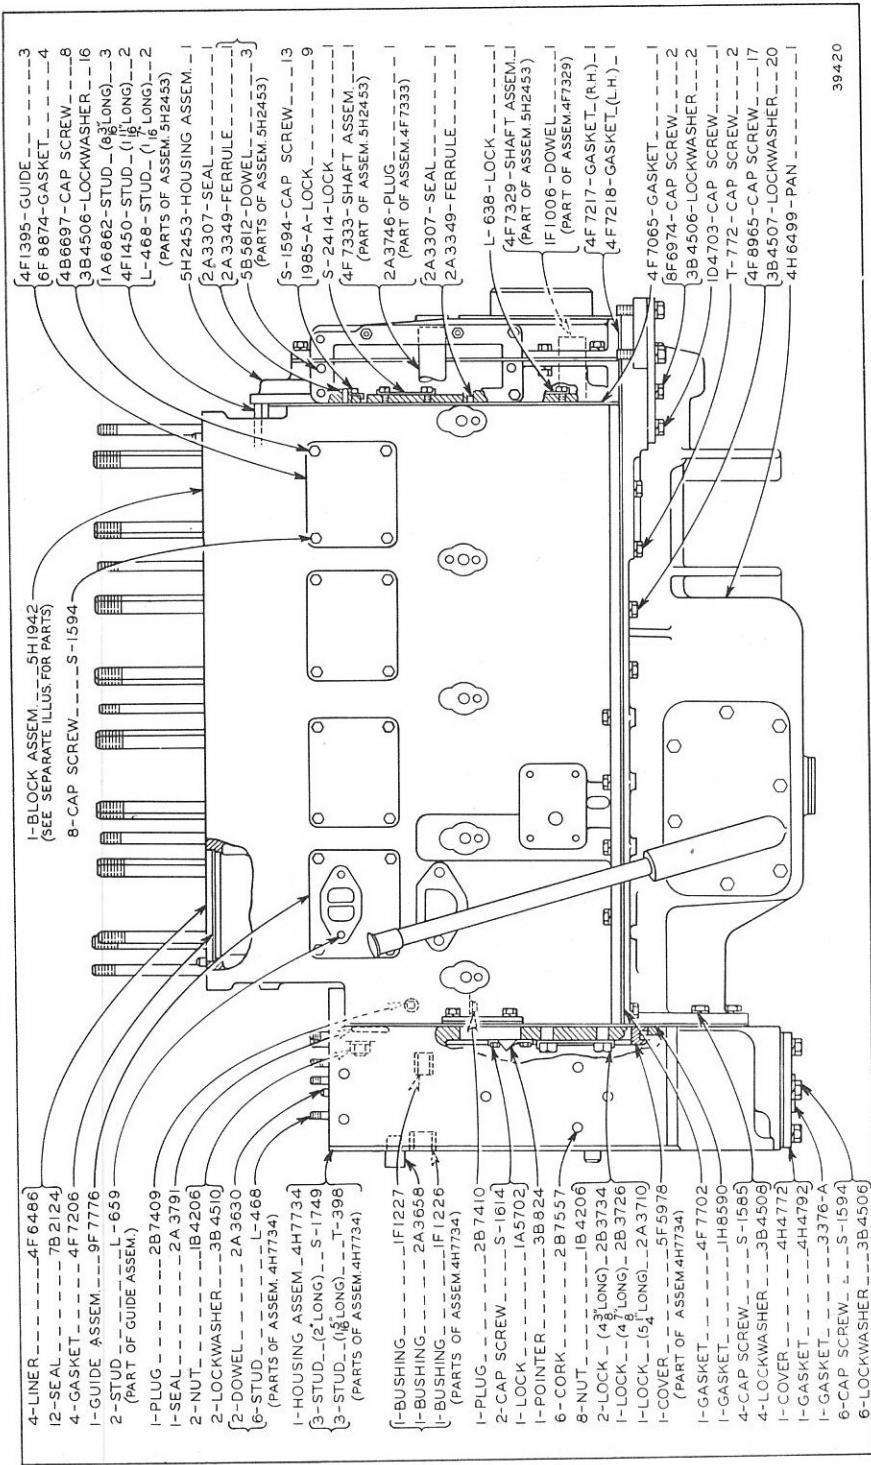

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


CYLINDER BLOCK AND COVERS—Side View

5H1942 Cylinder Block Assembly parts are shown on Page 22
5H1941 Cylinder Liner and Piston Replacement Gasket Group
are available. Piston and Liner replacement require the use of 2H5091 and 2H5080 Gasket Groups

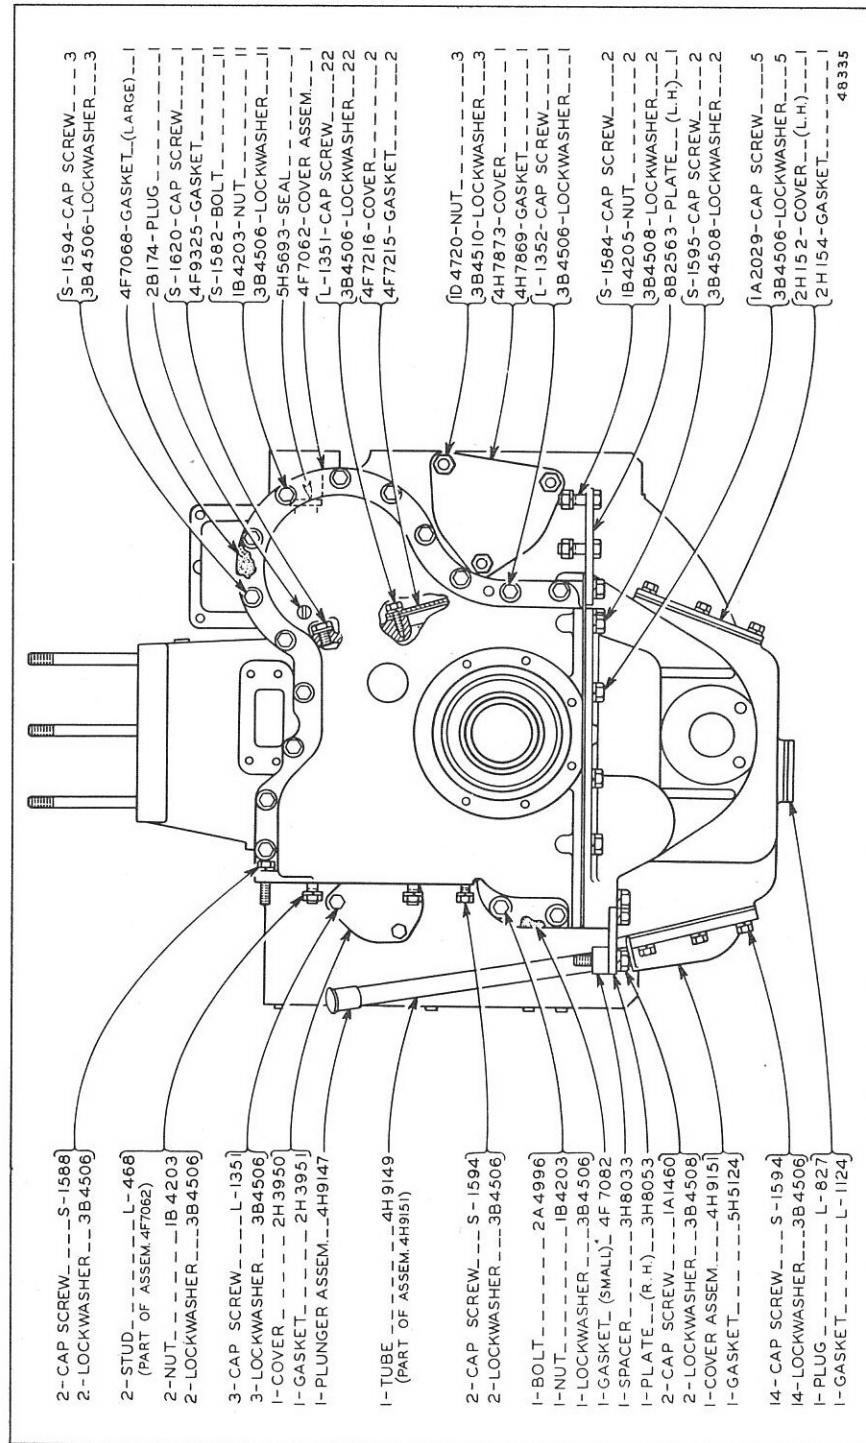


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

CYLINDER BLOCK AND COVERS—Front View

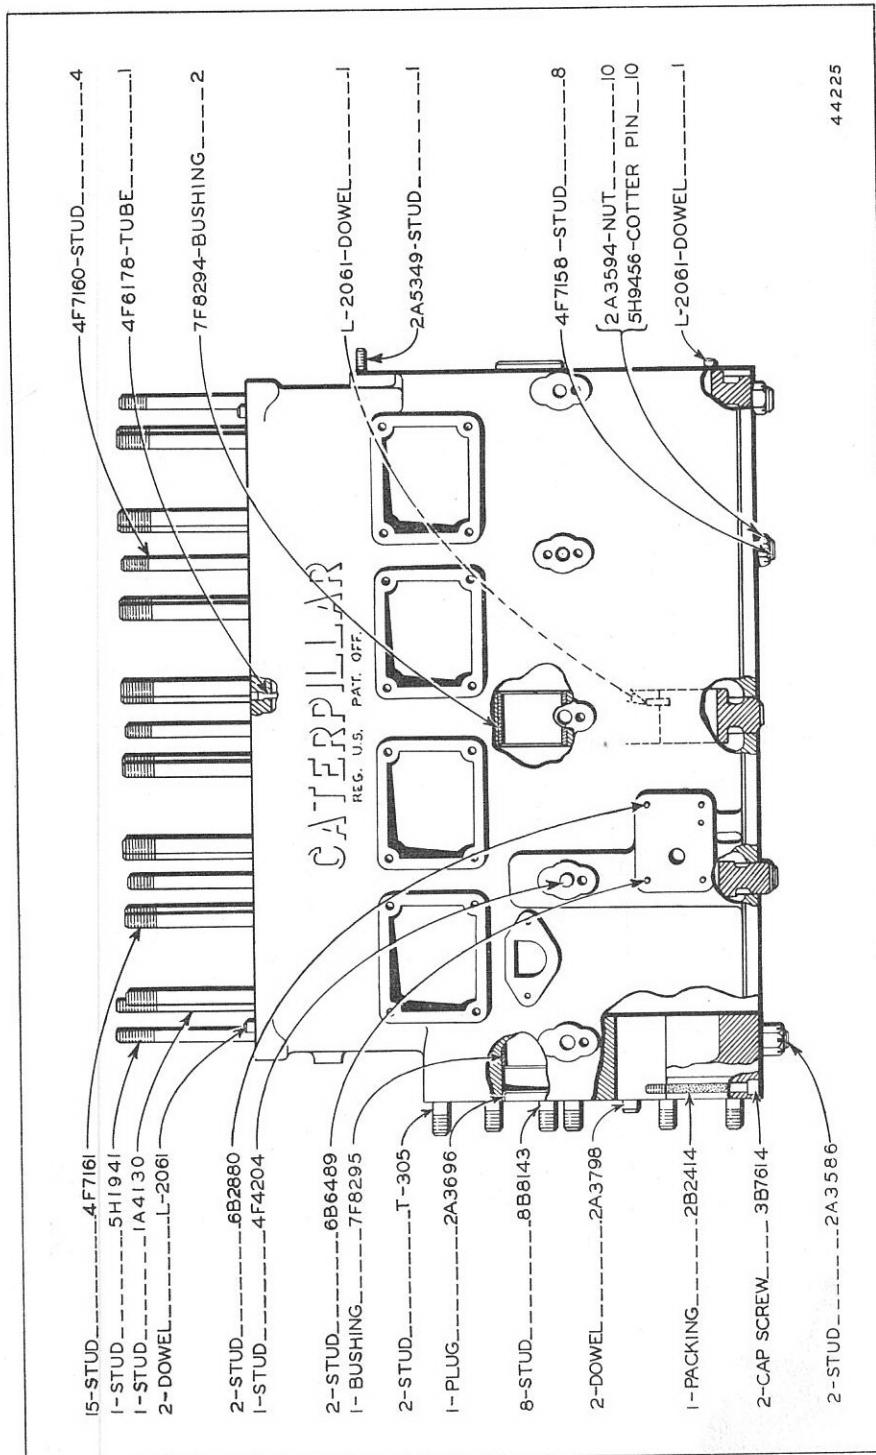

5H1942 CYLINDER BLOCK ASSEMBLY
Part of Cylinder Block and Covers Group shown on Page 20

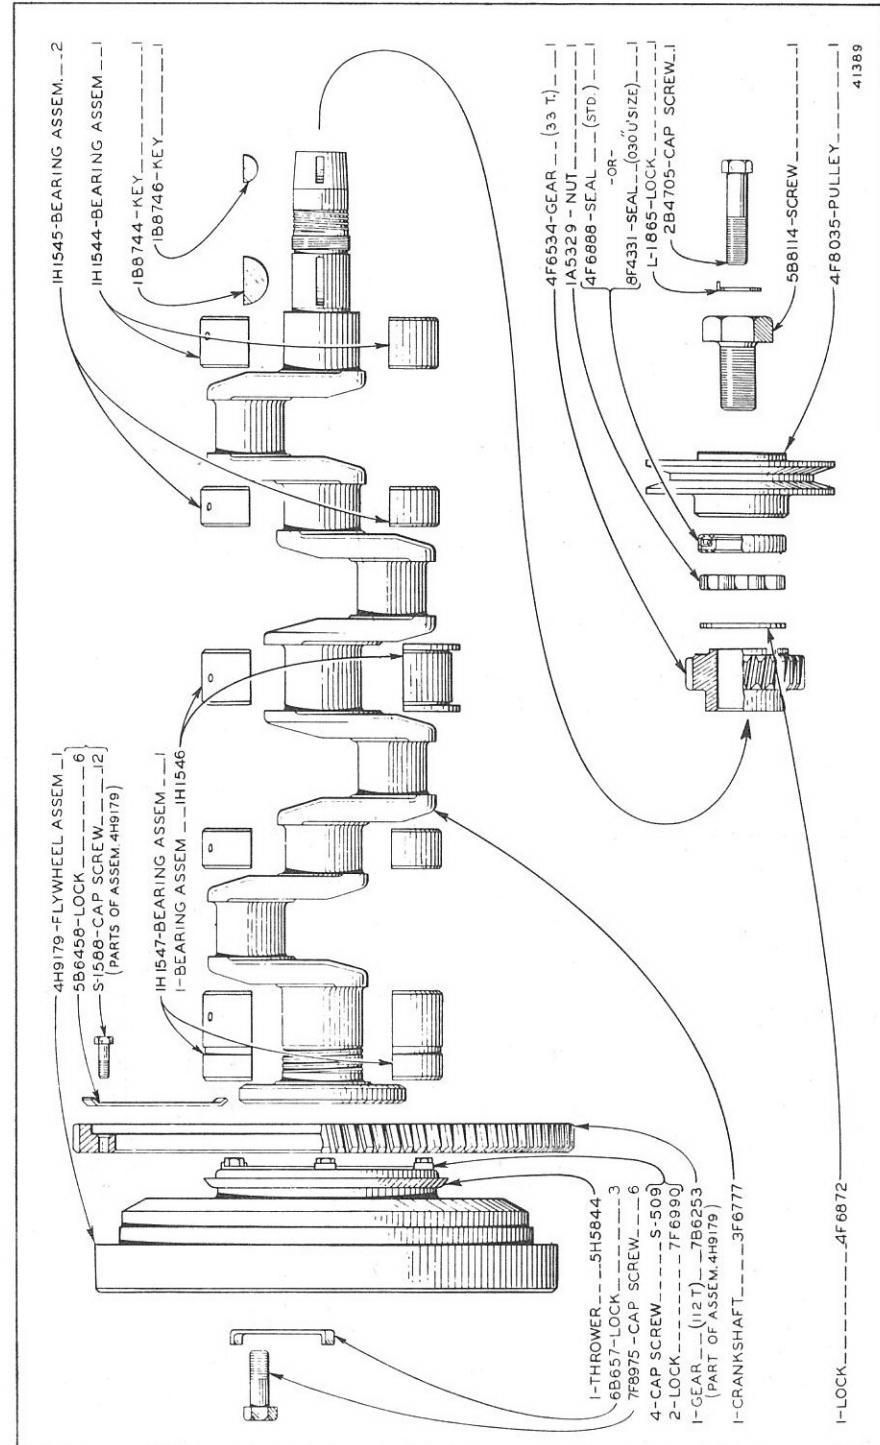

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

IH5811 Crankshaft Bearing Replacement Group

For use with Standard Crankshaft

Consists of:


Complete set of Bearing Assemblies as shown with Standard Crankshaft

IH5809 Crankshaft Bearing Replacement Group


For use with .030 Undersize Crankshaft

Consists of:


- 1 IH3729 Bearing Assembly—Front
- 2 IH3730 Bearing Assembly—Intermediate
- 1 IH3728 Bearing Assembly—Center
- 1 IH3731 Bearing Assembly—Rear

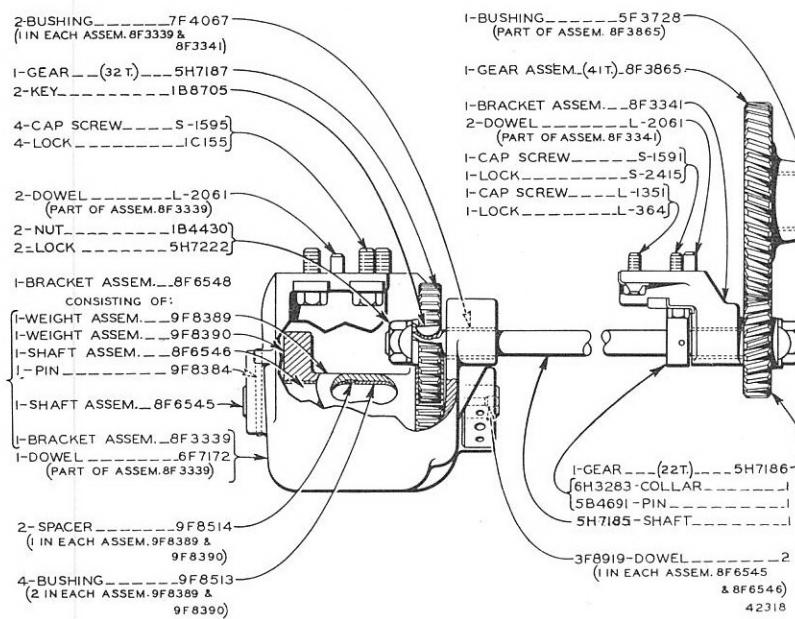CRANKSHAFT BEARING REPLACEMENT**BALANCER**


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

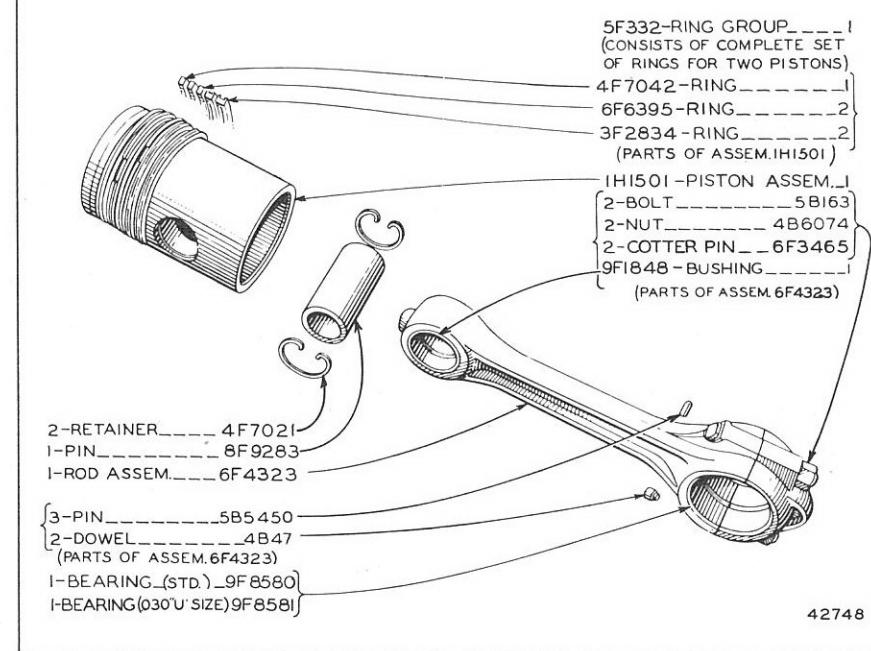**CONNECTING ROD AND PISTON (4 Groups Required)**


Note: 4H7073 Piston and Liner Group, consisting of: 1—Piston Assembly, 1—Liner, 3—Seal and 1—Gasket is available

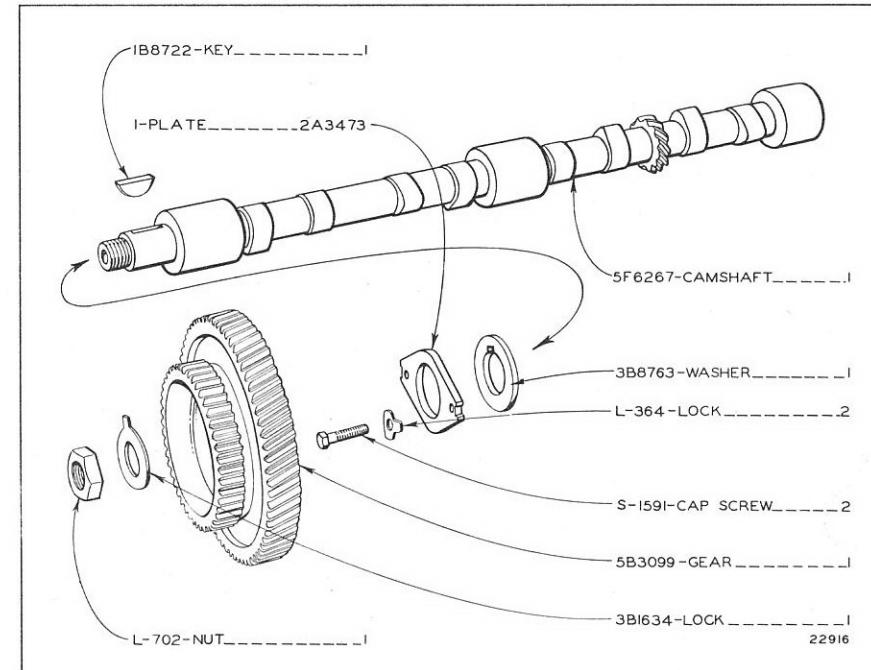**CAMSHAFT**

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

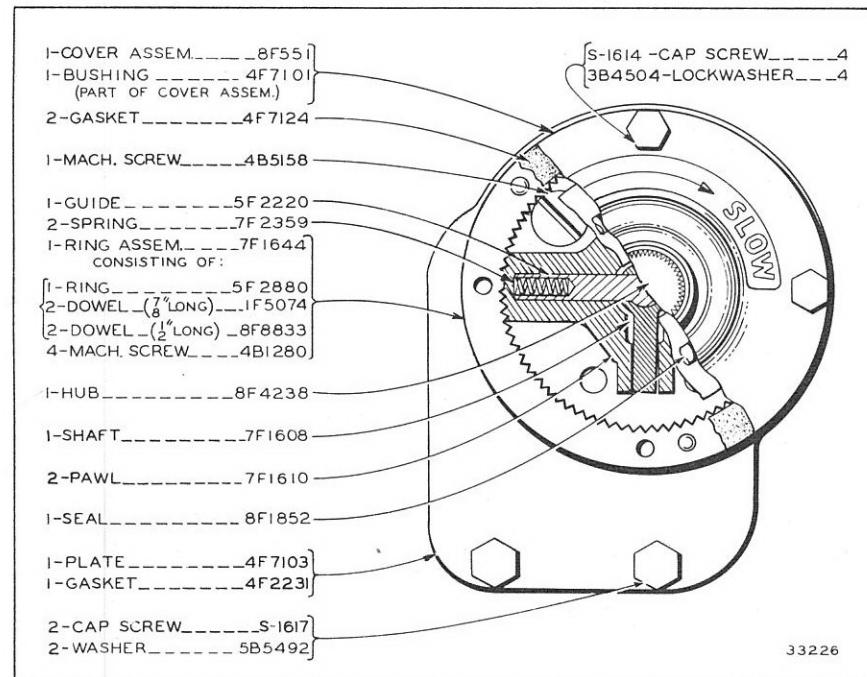


5F8592 GOVERNOR POSITIVE LOCKING CONTROL
Serial No. 12A1 to 12A1274 inclusive

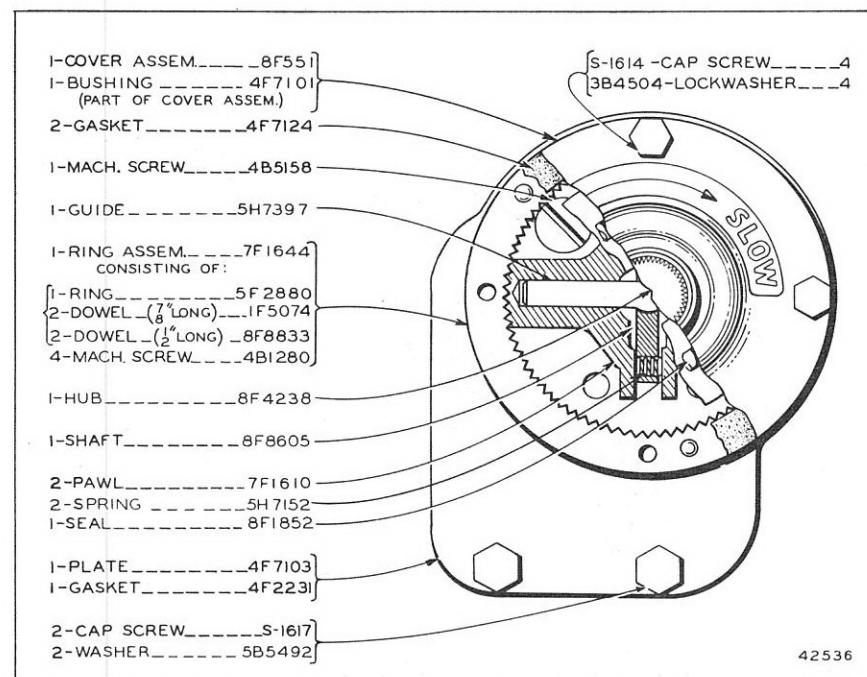


5H8033 GOVERNOR POSITIVE LOCKING CONTROL
Effective with Serial No. 12A1275

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

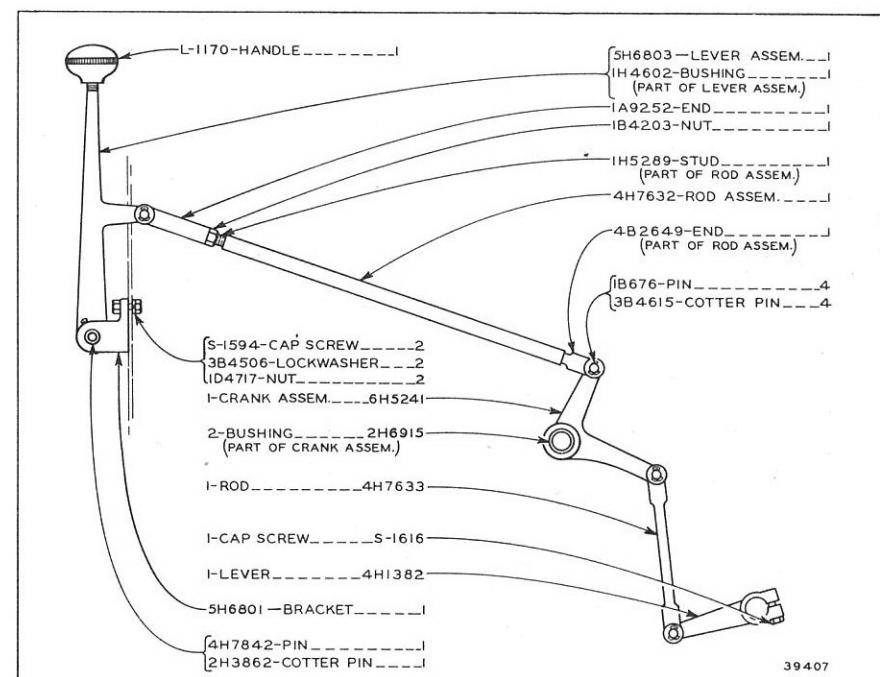


FUEL PUMP AND GOVERNOR CONTROL

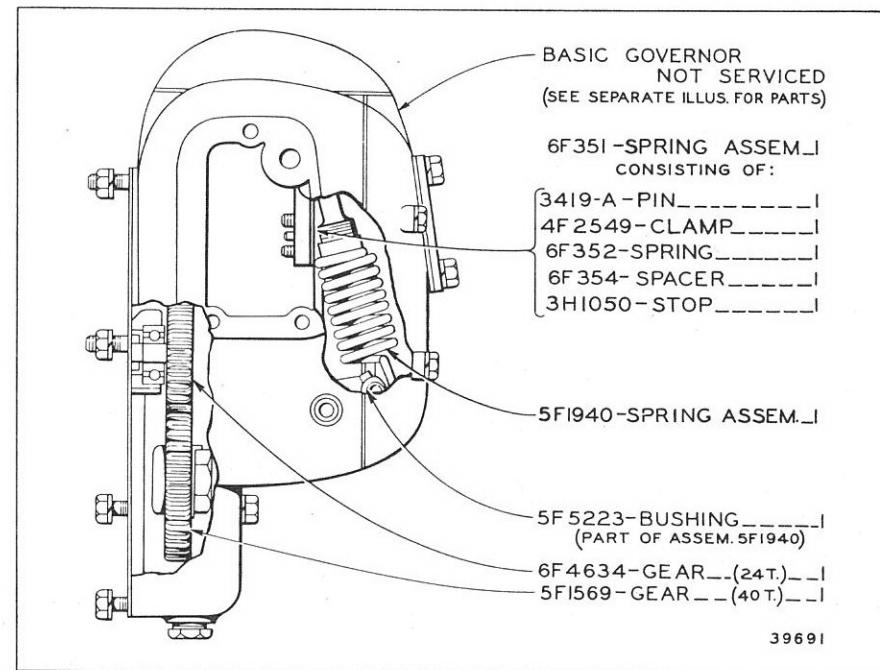


5H2634 COMPLETE GOVERNOR GROUP
8% Regulation at 1400 R.P.M.

Basic Governor Group parts are shown on Pages 28 and 29

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

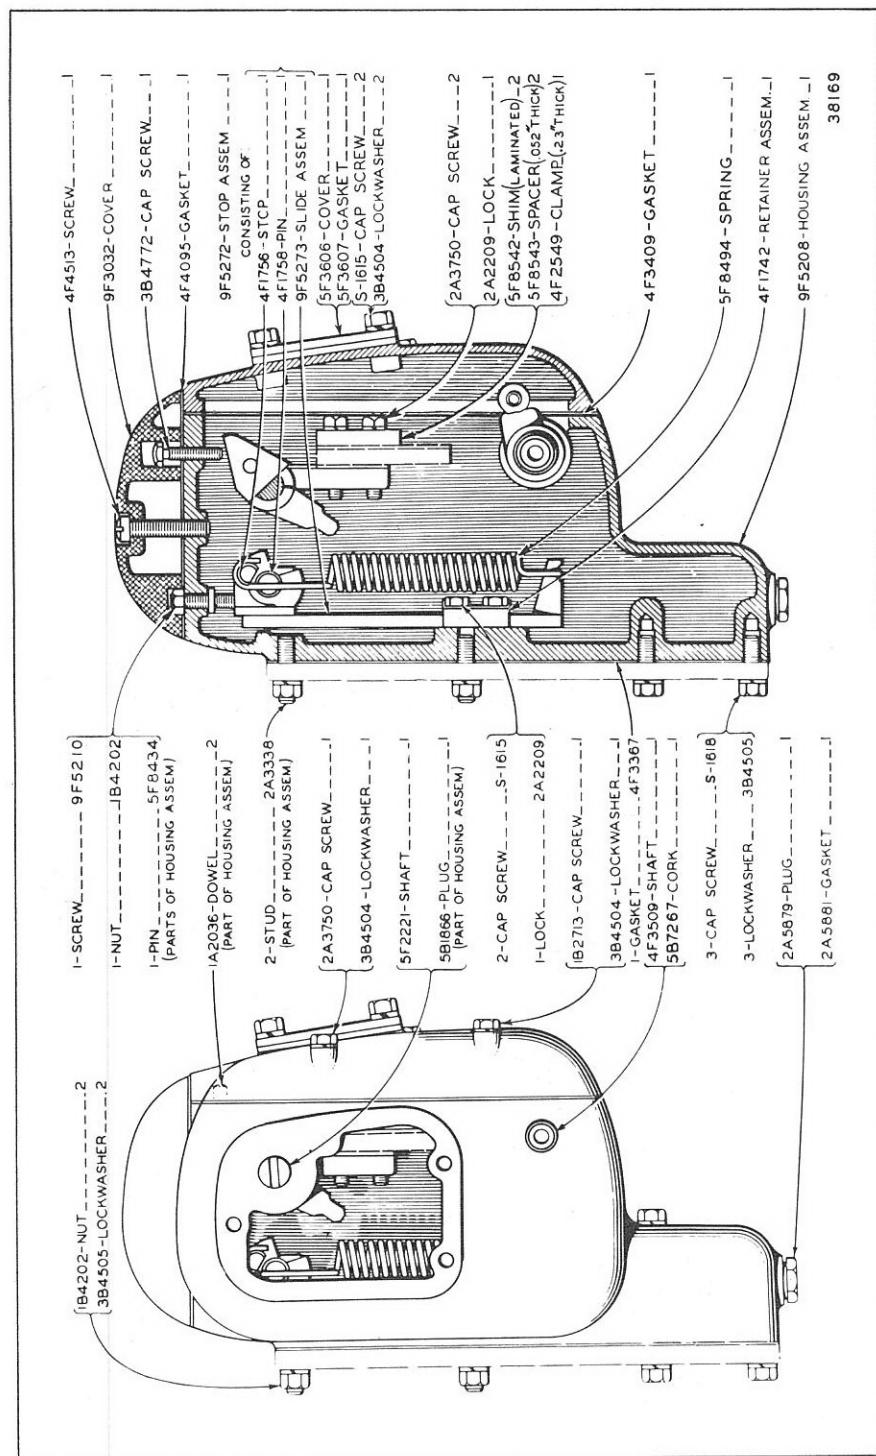


BASIC GOVERNOR—Part One
Part of 5H2634 Complete Governor Group shown on Page 27

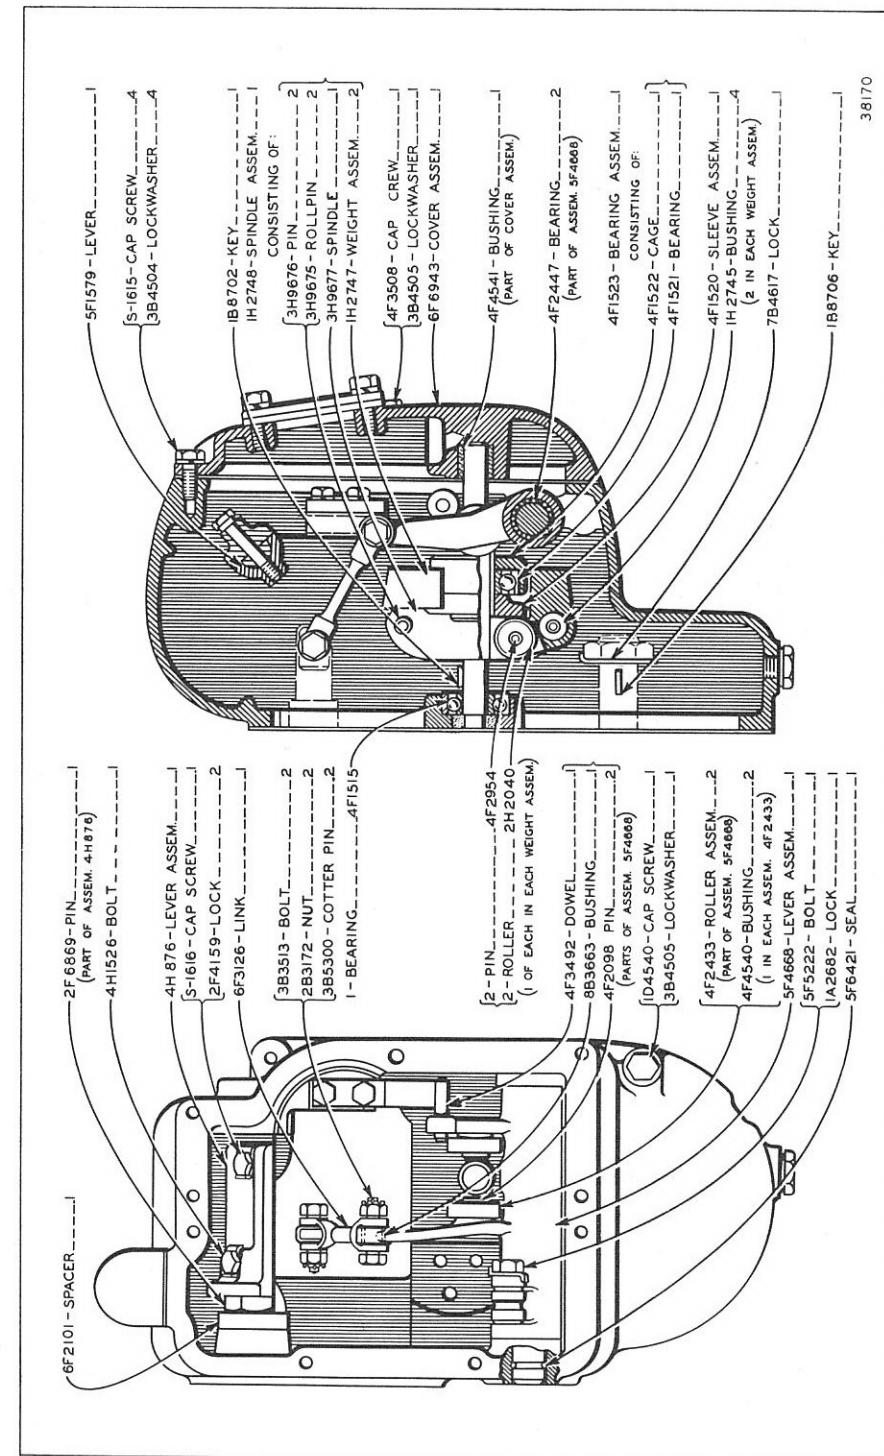


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

BASIC GOVERNOR—Part Two
Part of 5H2634 Complete Governor Group shown on Page 27

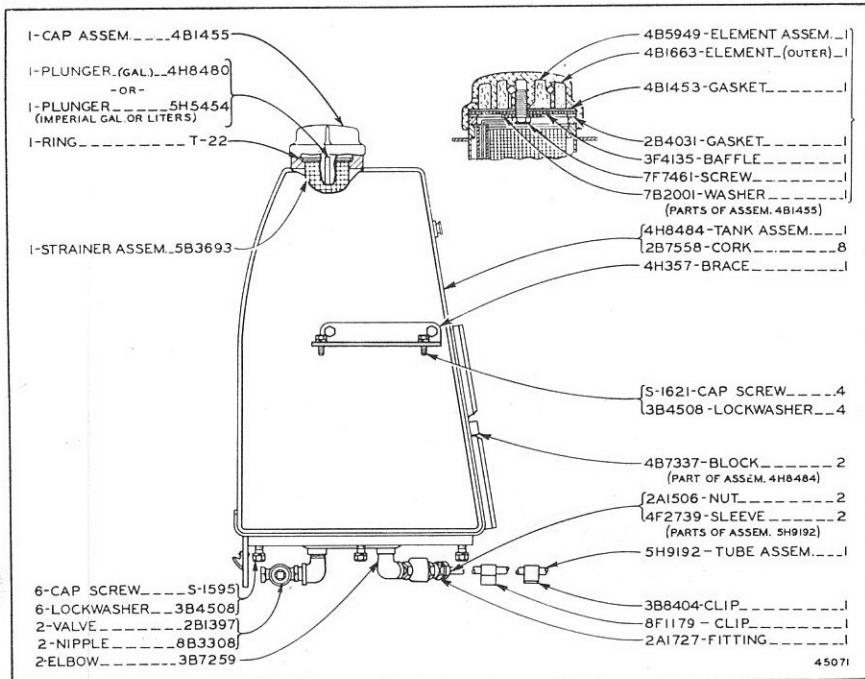


4H8487 FUEL SYSTEM GROUP
Serial No. I2A1 to I2A1196 inclusive

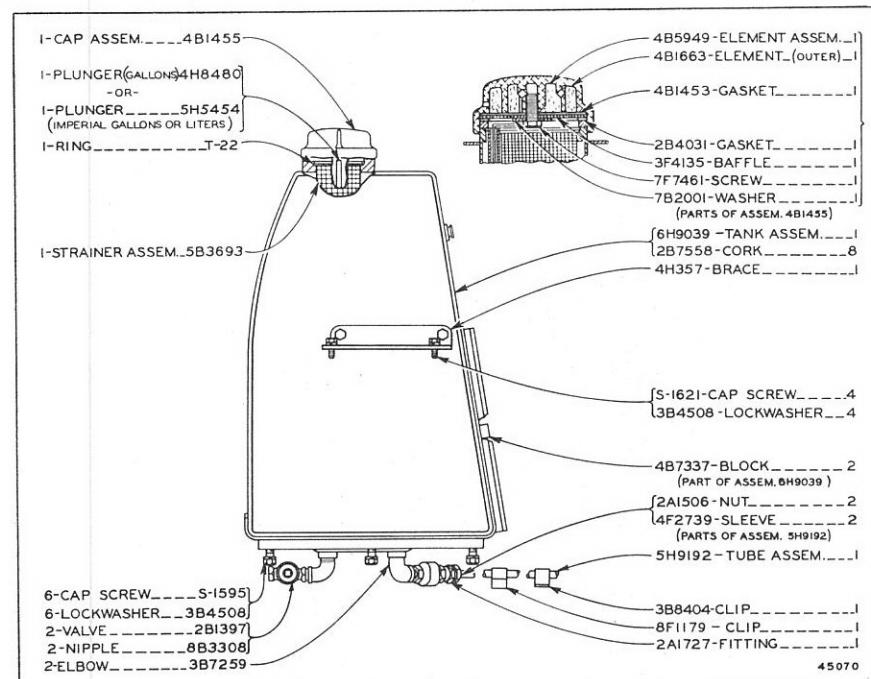


4H8487 FUEL SYSTEM GROUP
Effective with Serial No. I2A1197

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

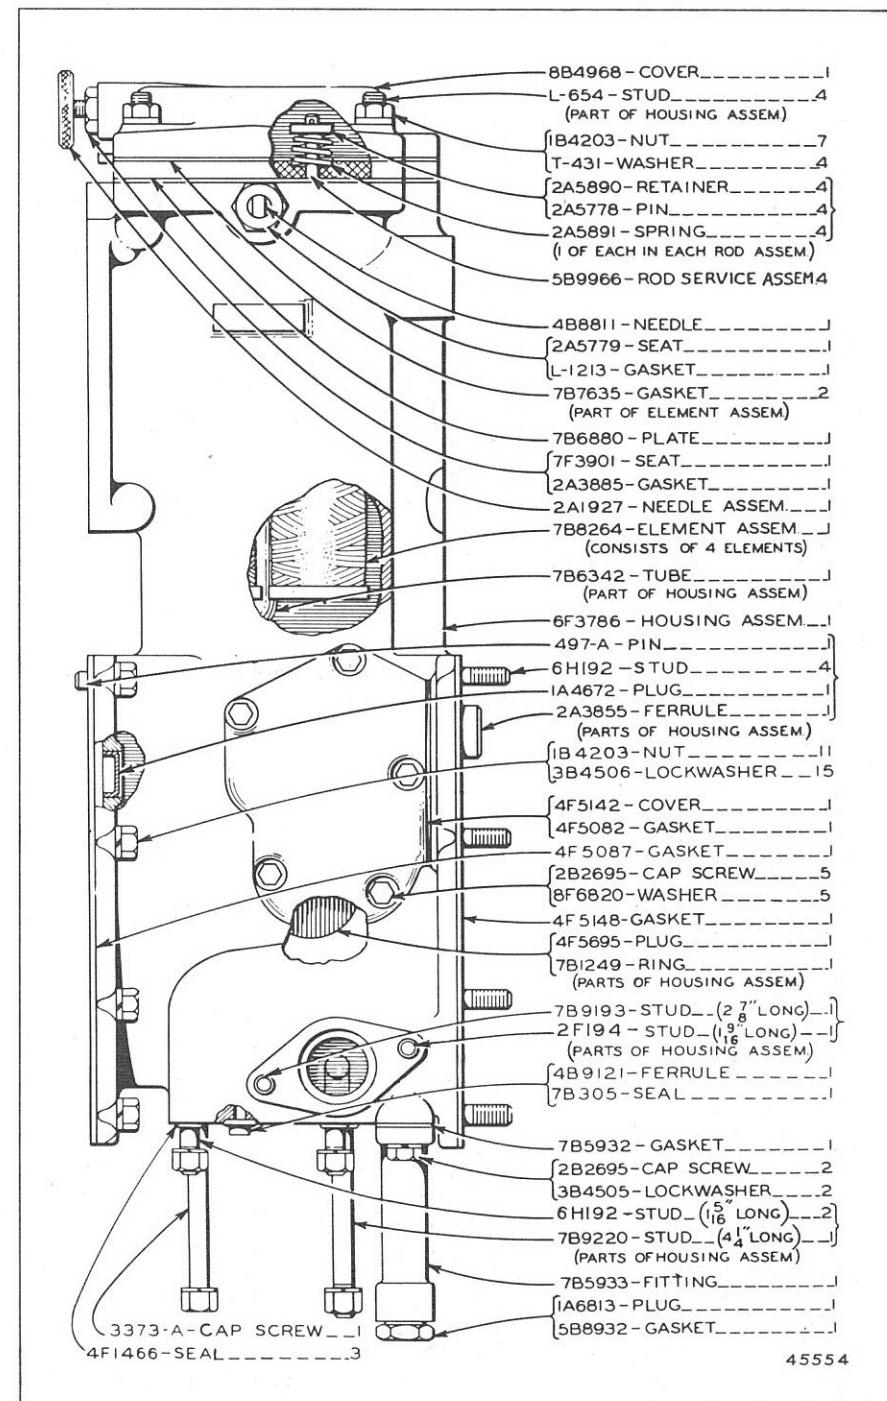


FUEL FILTER

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

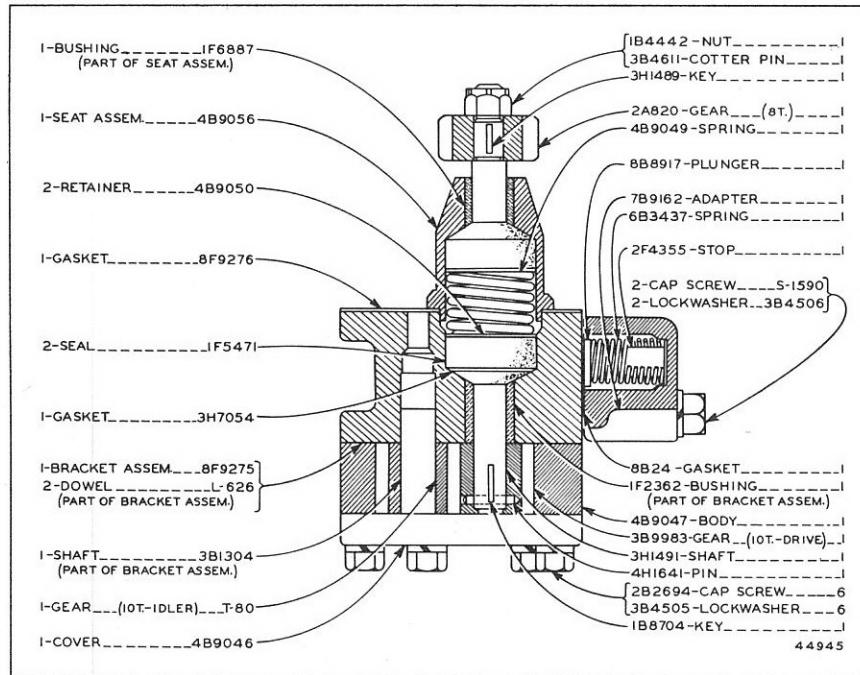


5F6607 FUEL TRANSFER PUMP GROUP

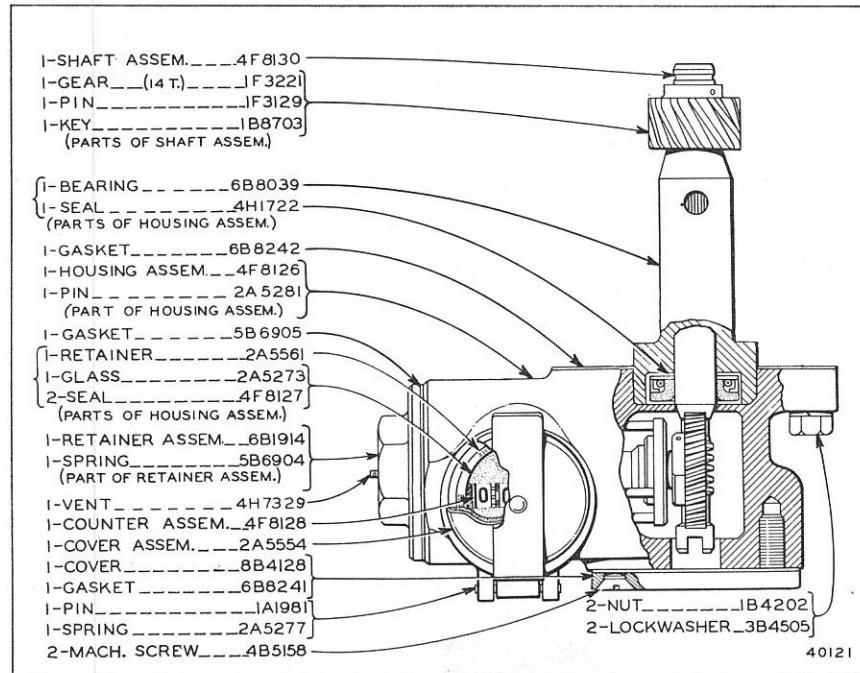

4F8125 HOUR METER GROUP


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

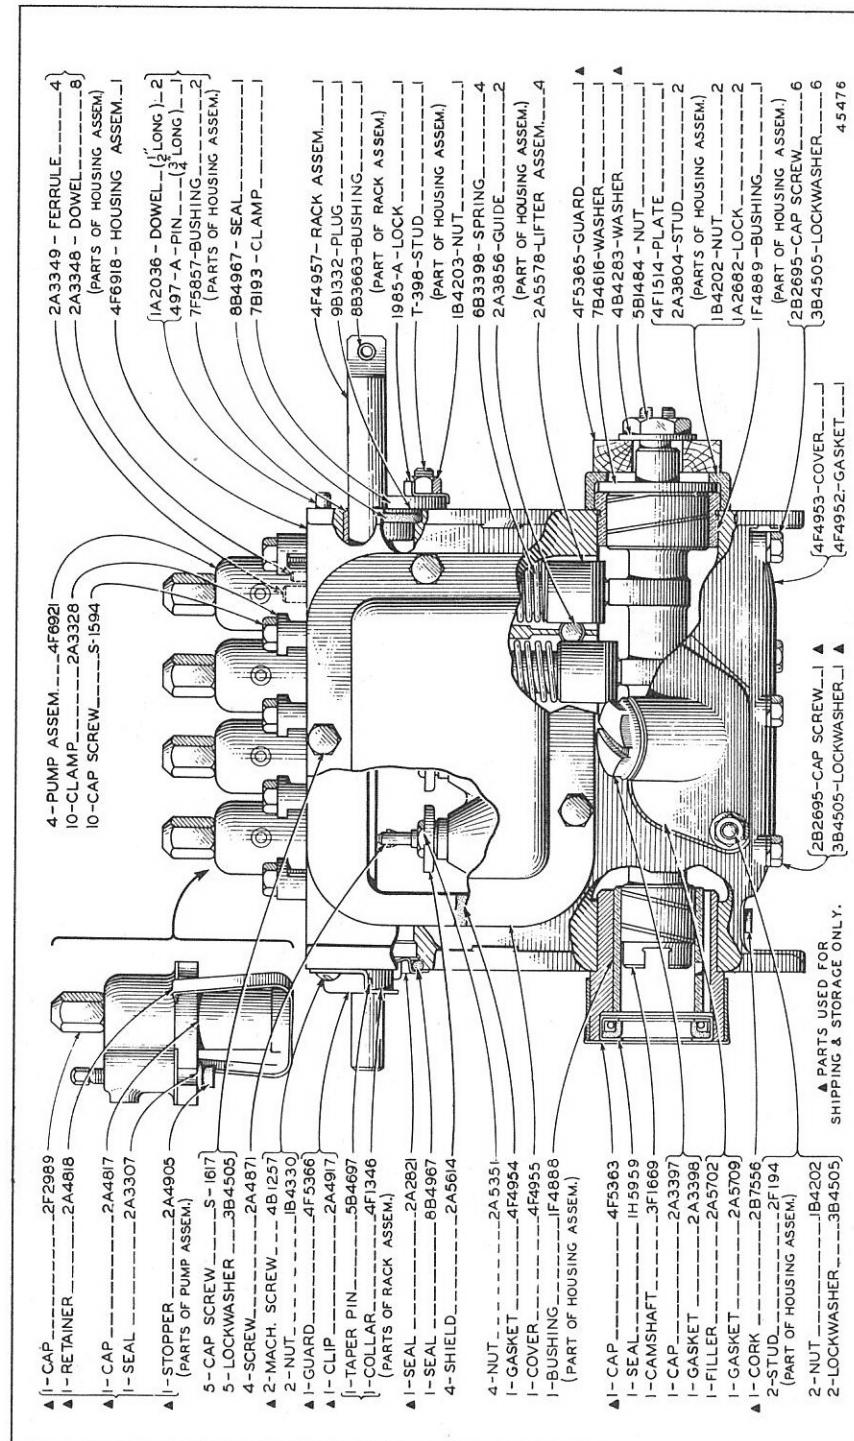

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE


FUEL PUMP HOUSING

Serial No. 12A1 to 12A1517 inclusive
Note: 5F2430 Fuel Pump Housing Service Assembly consists of parts shown plus: 1A4717 Guard—1, 2A3307 Seal—4, 2A4716 Cap—4, 4B4272 Washer—4, 1A2029 Cap Screw—4 and minus: 4F6921 Pump Assembly—4, S-1594 Cap Screw—10 and 2A3328 Clamp—10

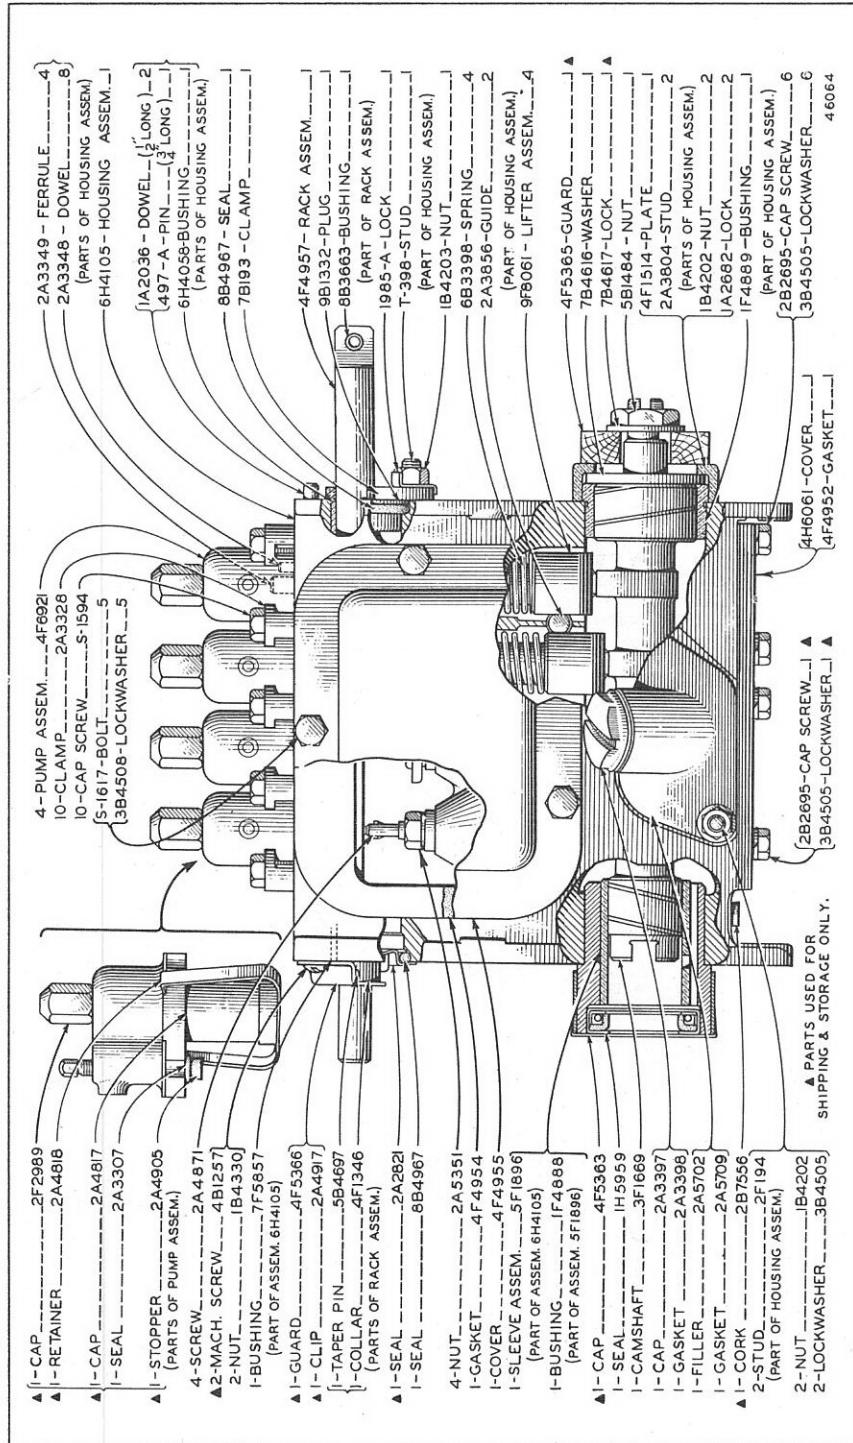


FUEL PUMP HOUSING

Note: 6H6939 Fuel Pump Housing Service Assembly consists of parts shown plus: I-2A4717 Guard, 4-2A3307 Seal, 4-2A4716 Cap, and Effective with Serial No. I2A1518
4-476921 Cap Screw, and Minus: 4-1A2029 Cap Screw, and Minus: 10-S1594 Cap Screw and 10-2A3328 Clamp

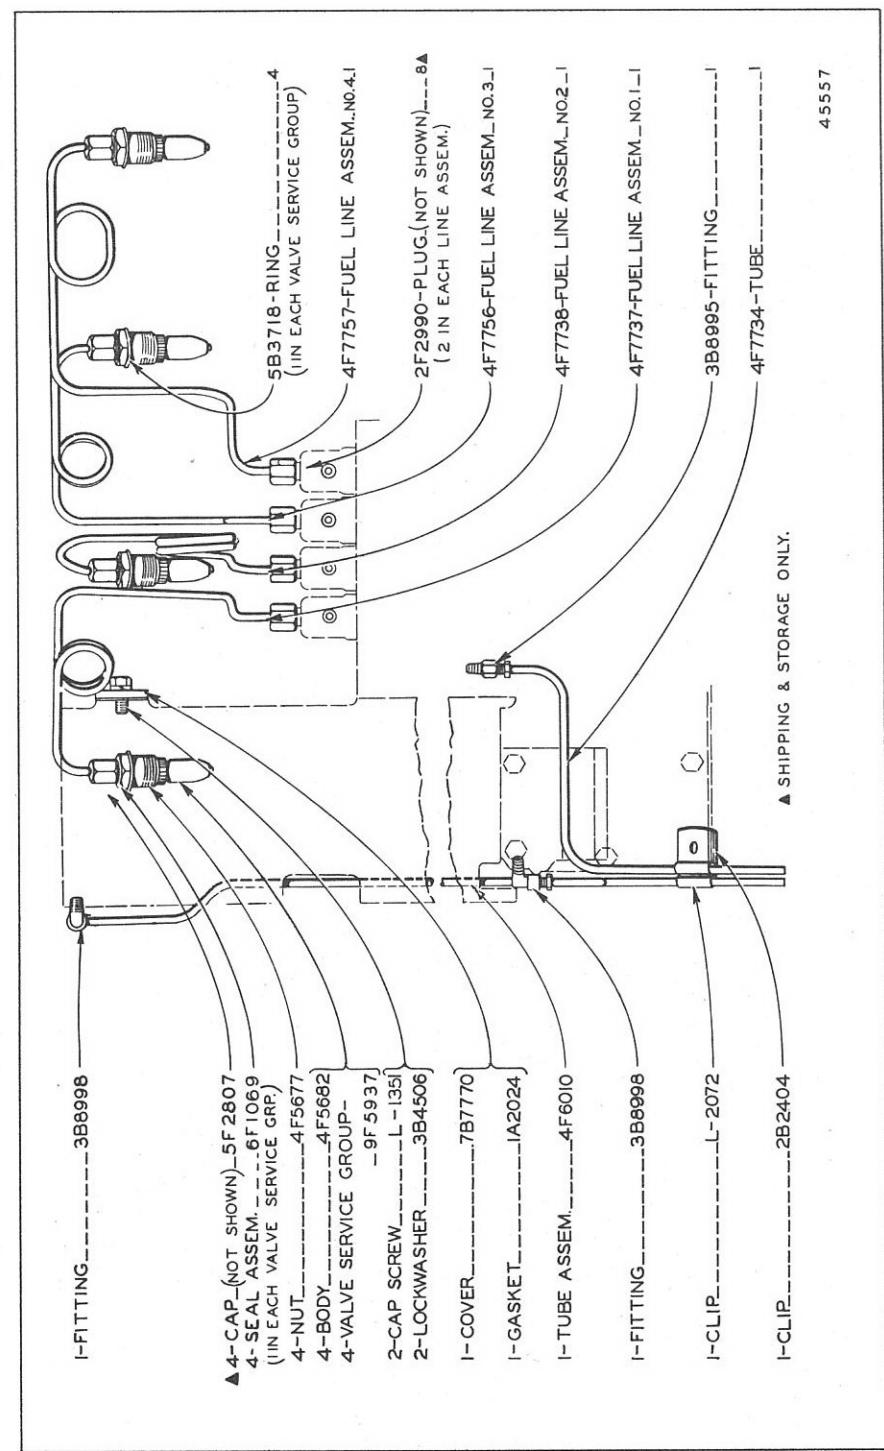


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

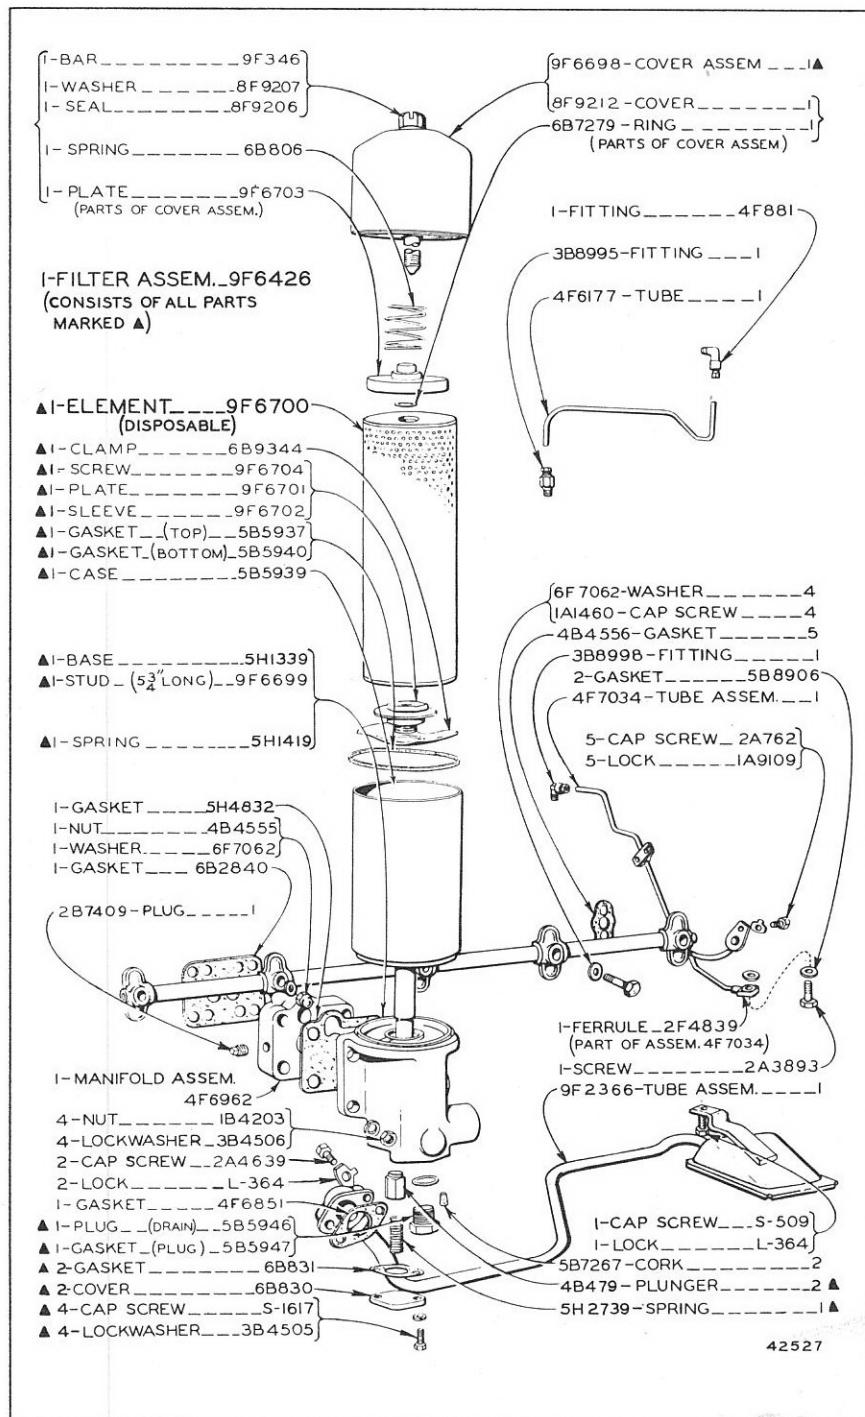


OIL LINES AND FILTER
Serial No. 12A1 to 12A1981, 12A1983 to 12A1986 and 12A1992 to 12A1994 inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

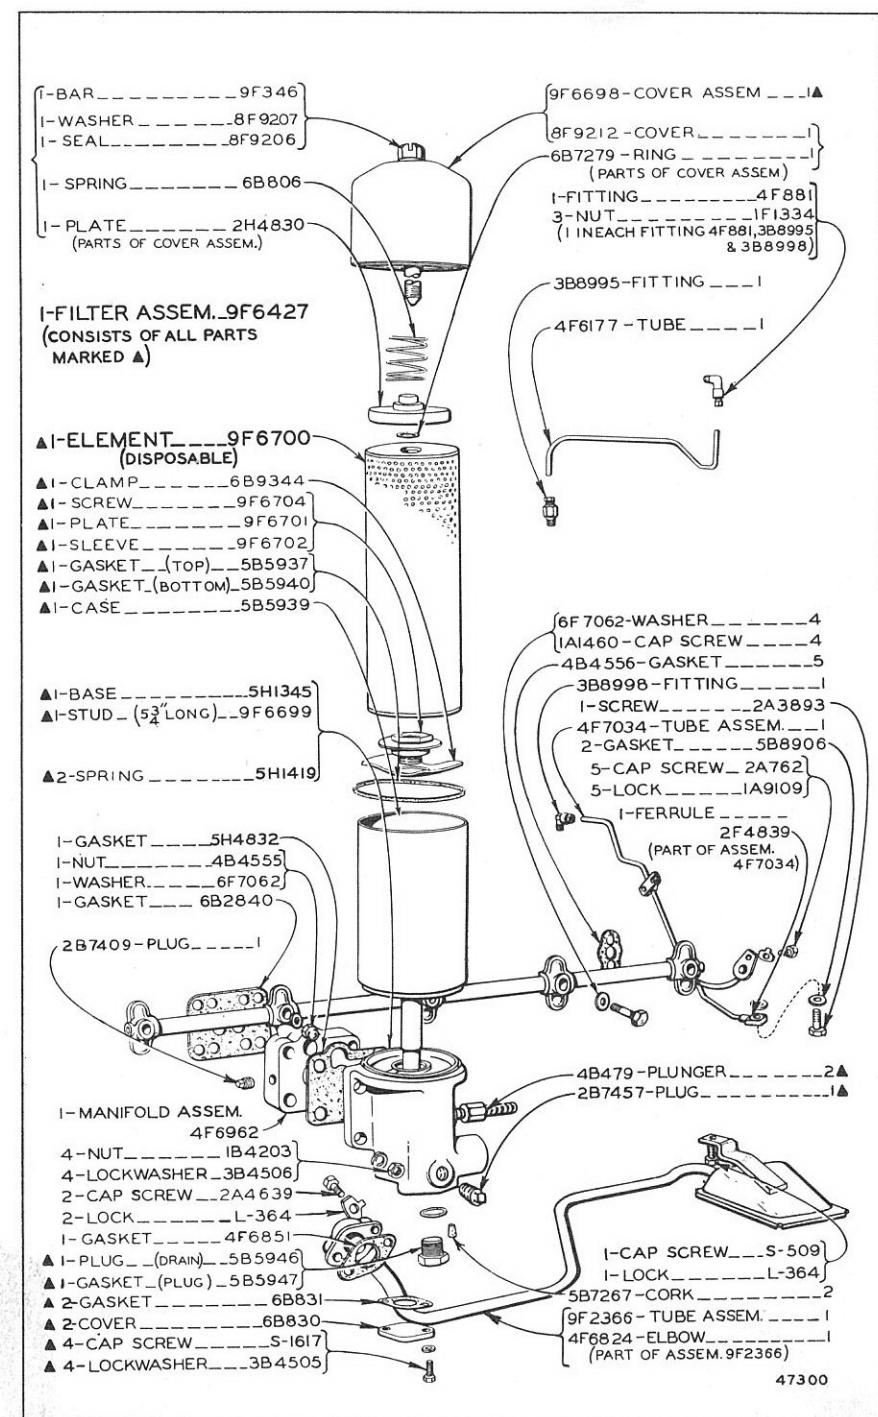


OIL LINES AND FILTER
Serial No. 12A1982, 12A1987 to 12A1991 and 12A1995—Up


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

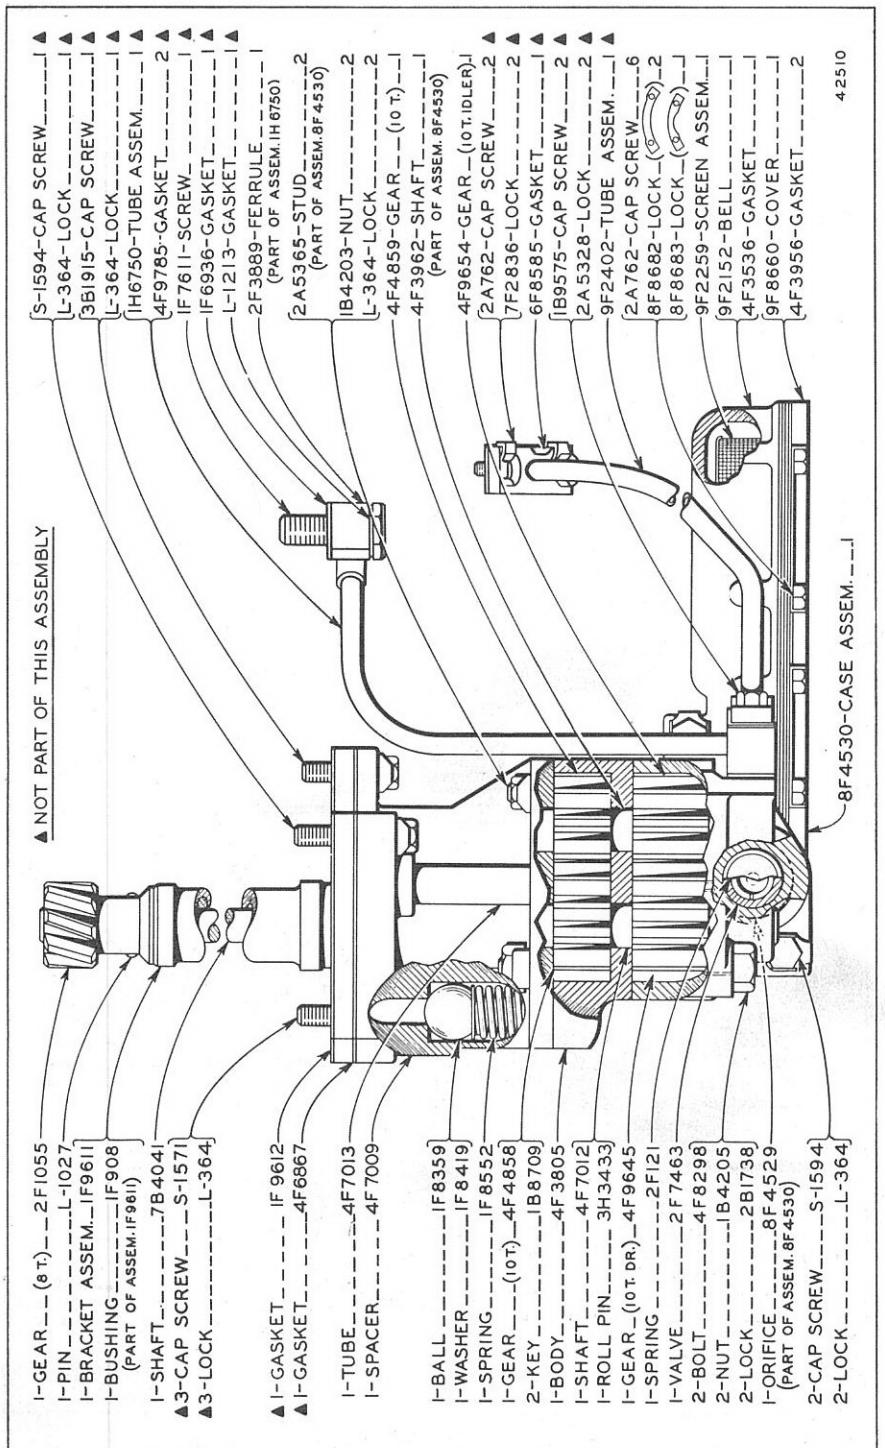

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

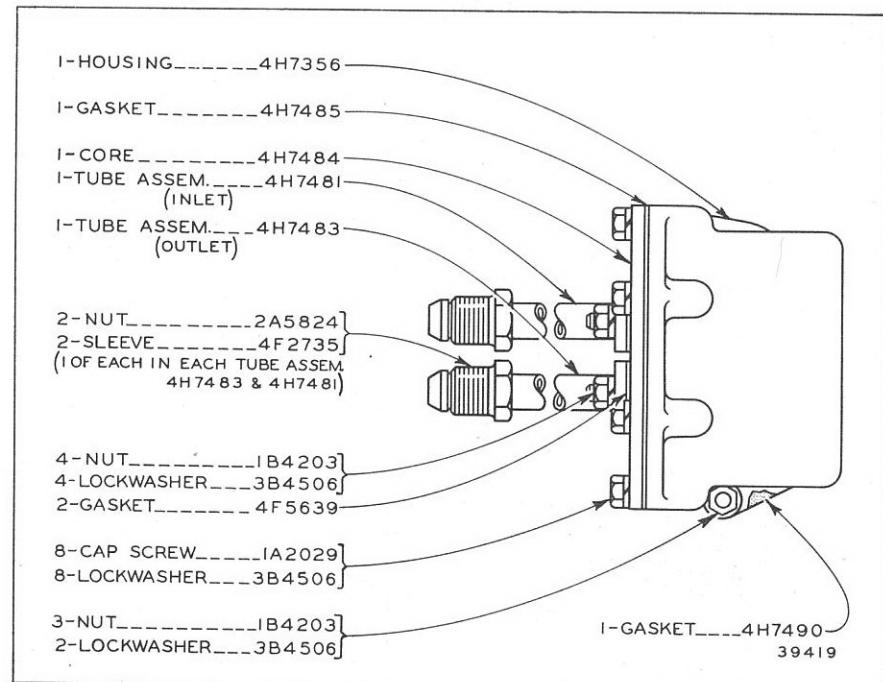


4H7486 OIL COOLER GROUP
Serial No. 12A1 to 12A1202 inclusive

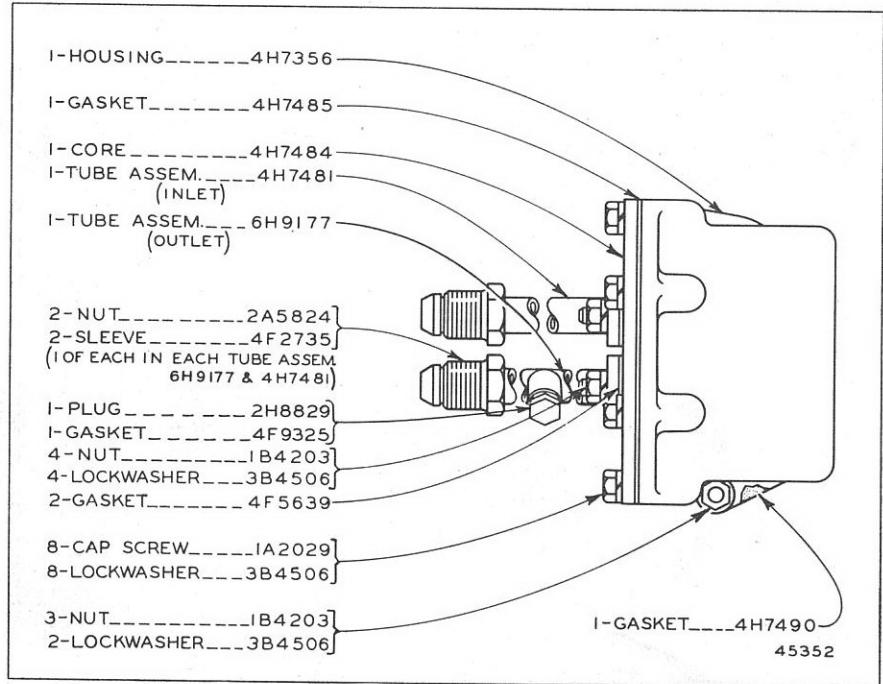


4H7486 OIL COOLER GROUP
Effective with Serial No. 12A1203

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

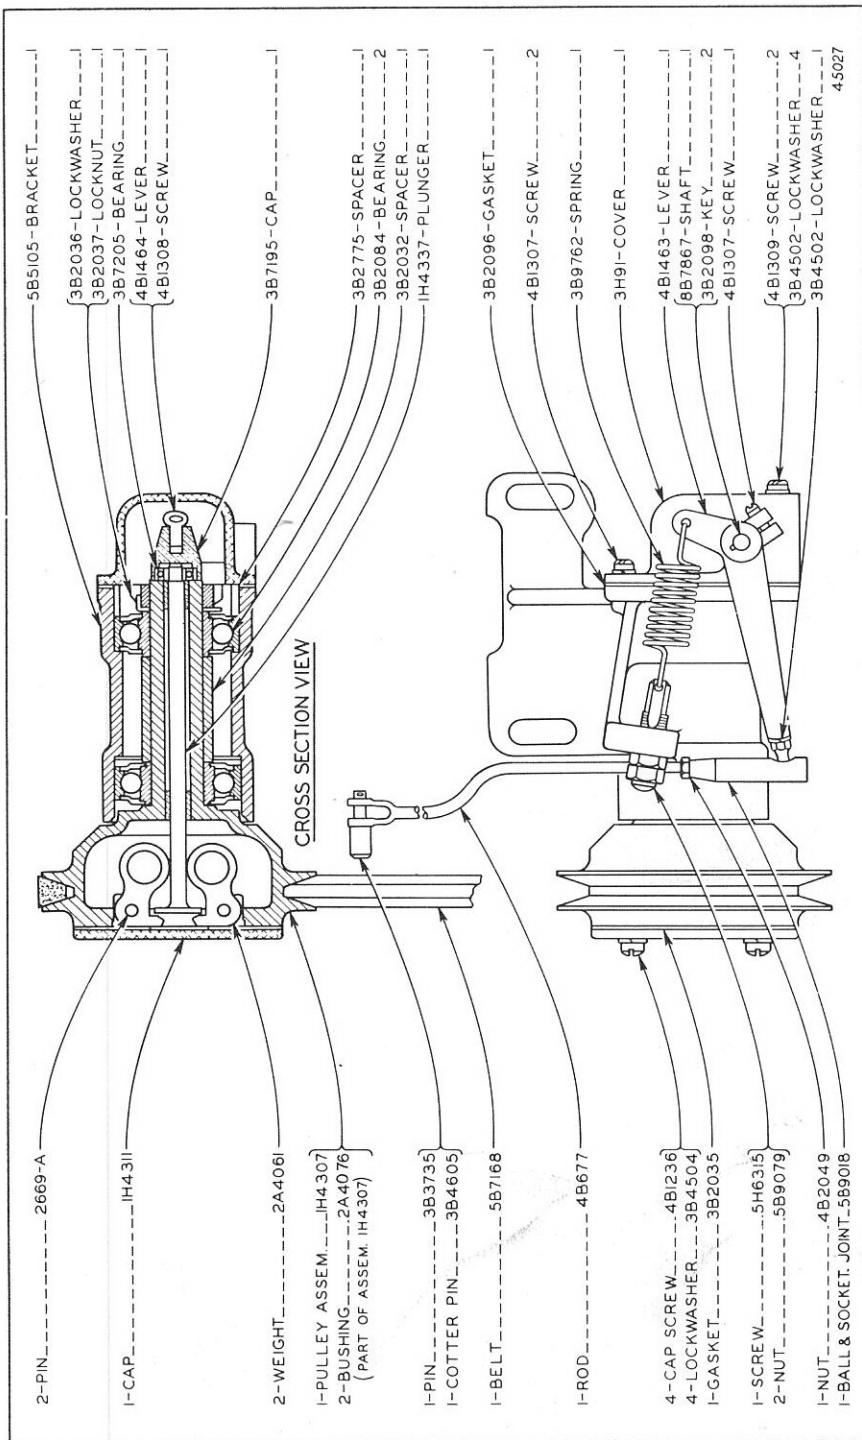


2A4102 GOVERNOR GROUP
Serial No. 12A1 to 12A74 inclusive

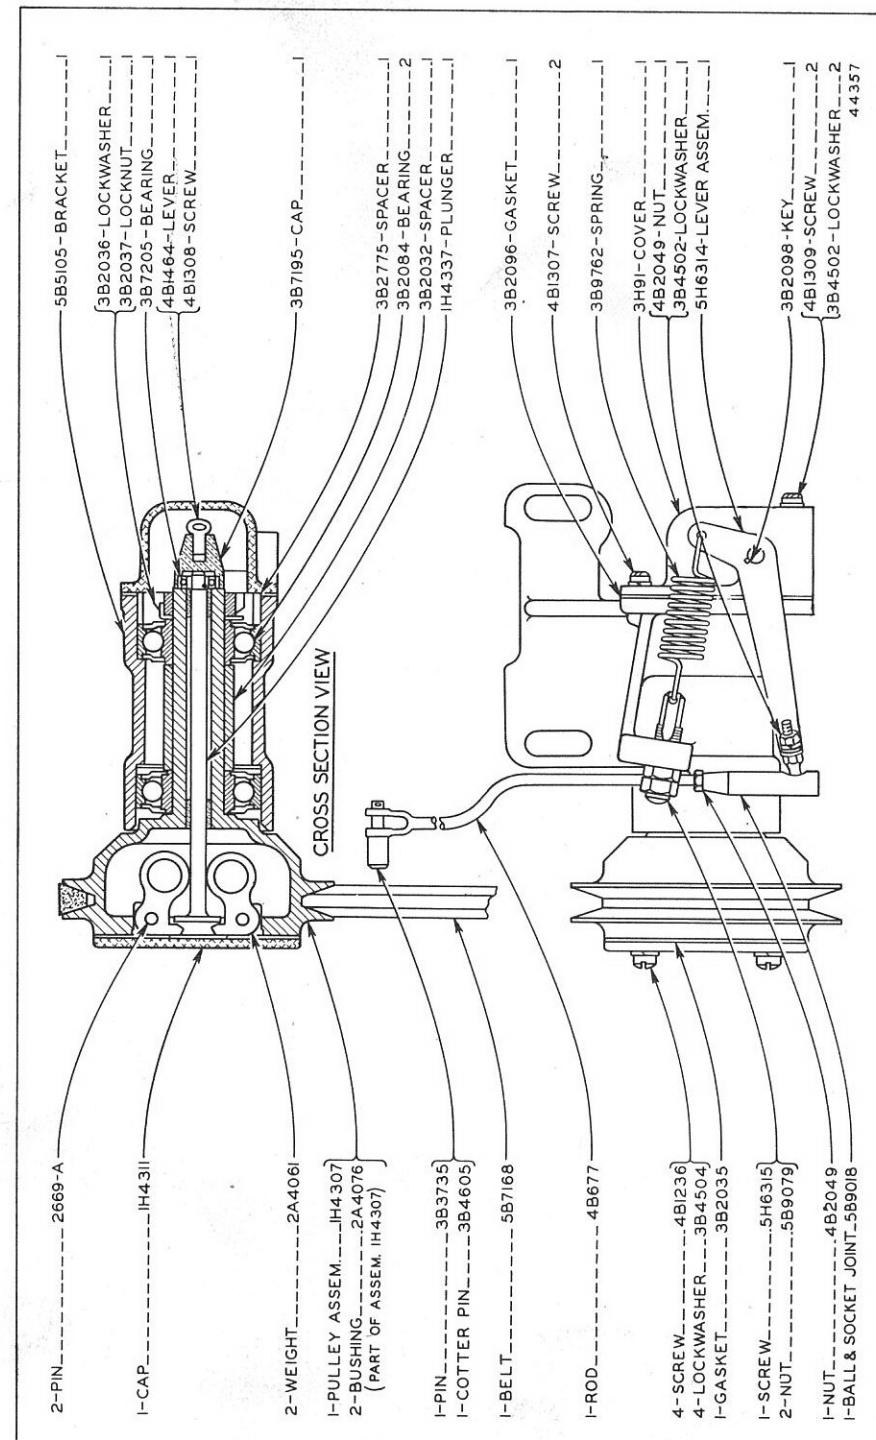


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

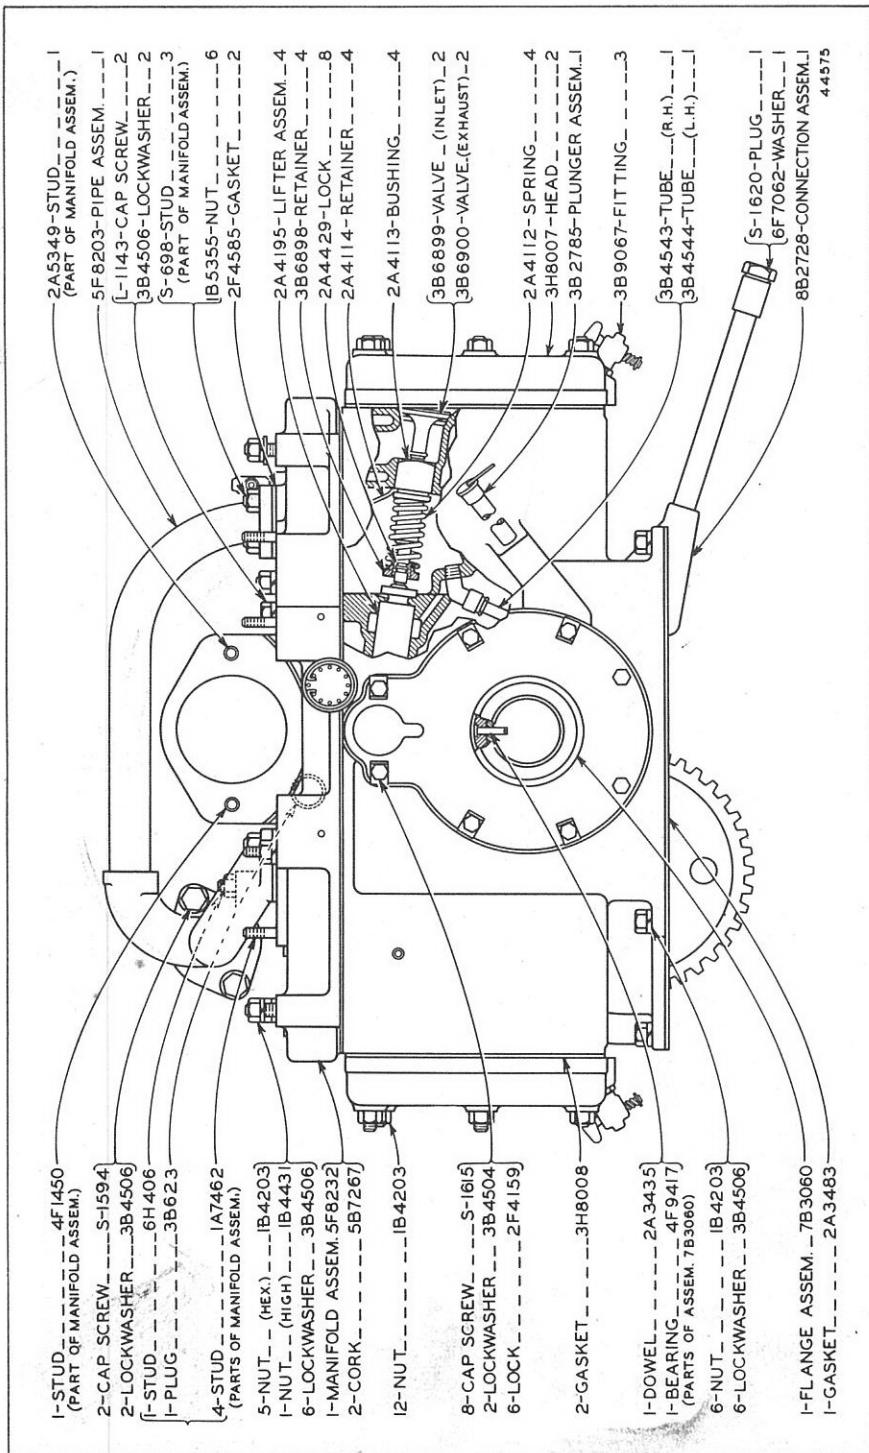

CYLINDER BLOCK, CYLINDER HEAD AND VALVE MECHANISM—Side View

Note: 6H4319 Starting Engine Gasket Group is available.

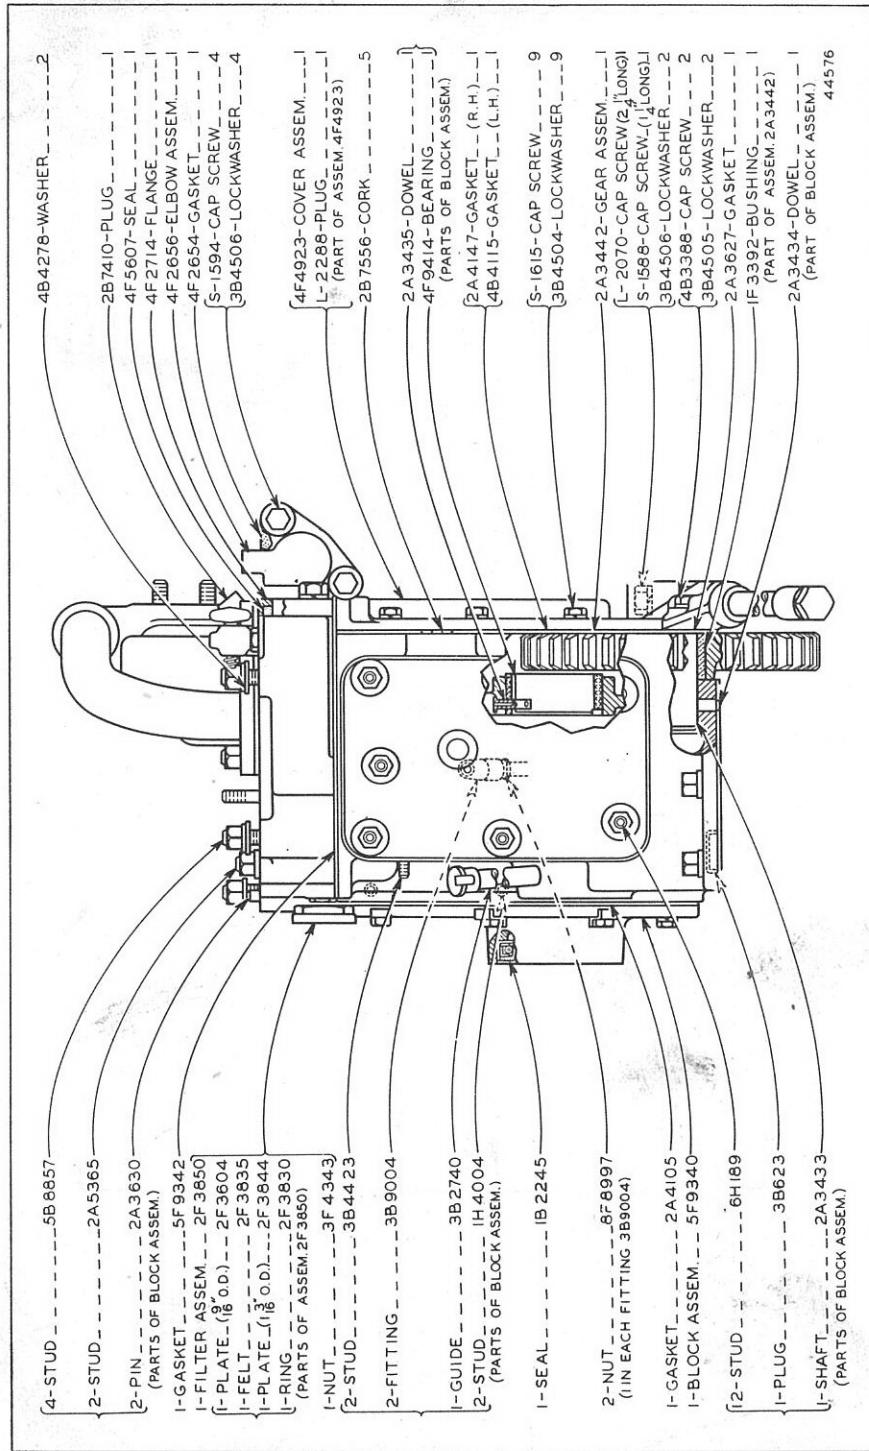


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

CYLINDER BLOCK, CYLINDER HEAD AND VALVE MECHANISM—End View


Note: 6H4319 Starting Engine Gasket Group is available

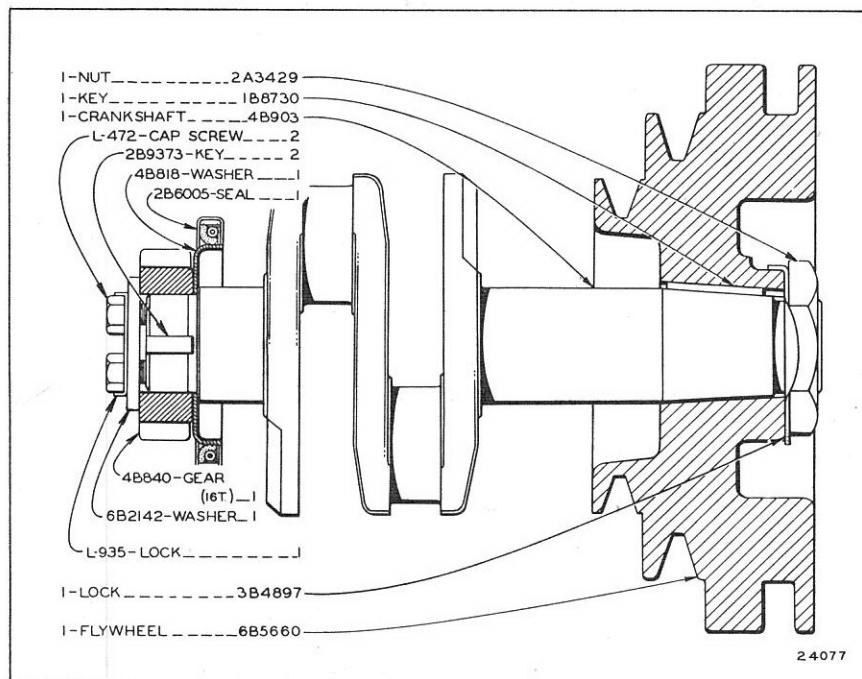


2A3590 CRANKSHAFT GROUP

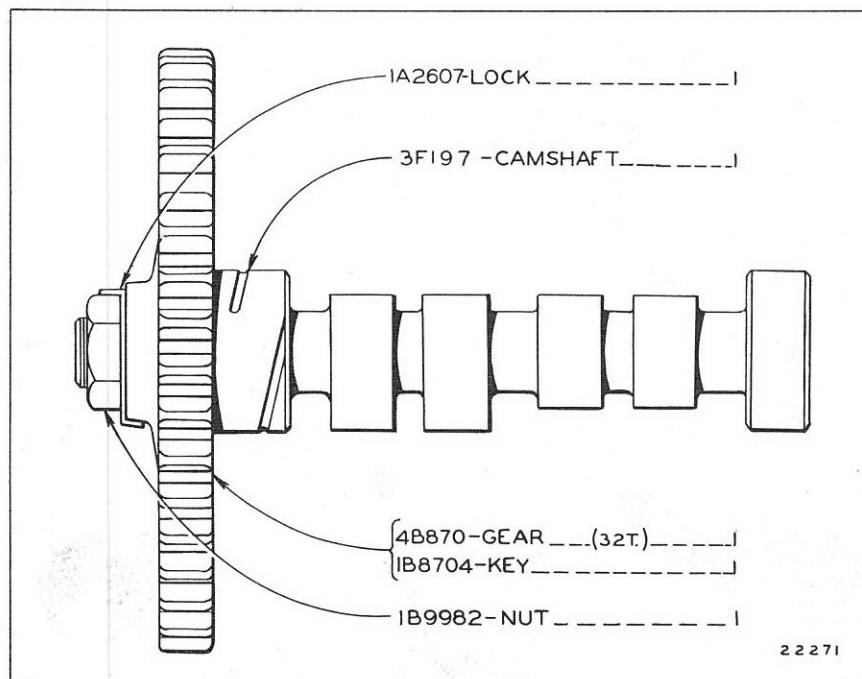

2A3589 CAMSHAFT GROUP

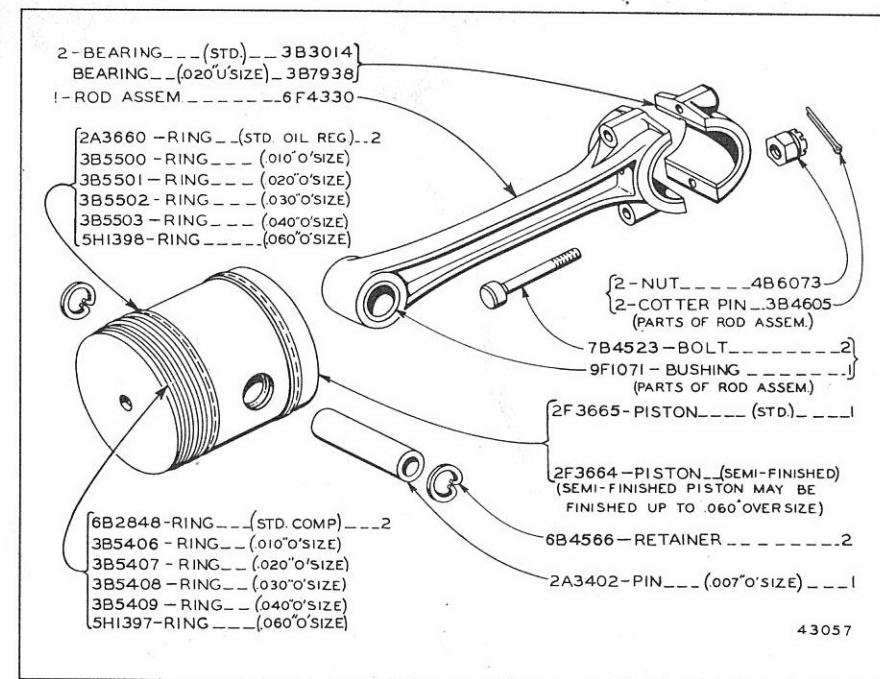


2A3591 CONNECTING ROD AND PISTON GROUP (2 Groups Required)

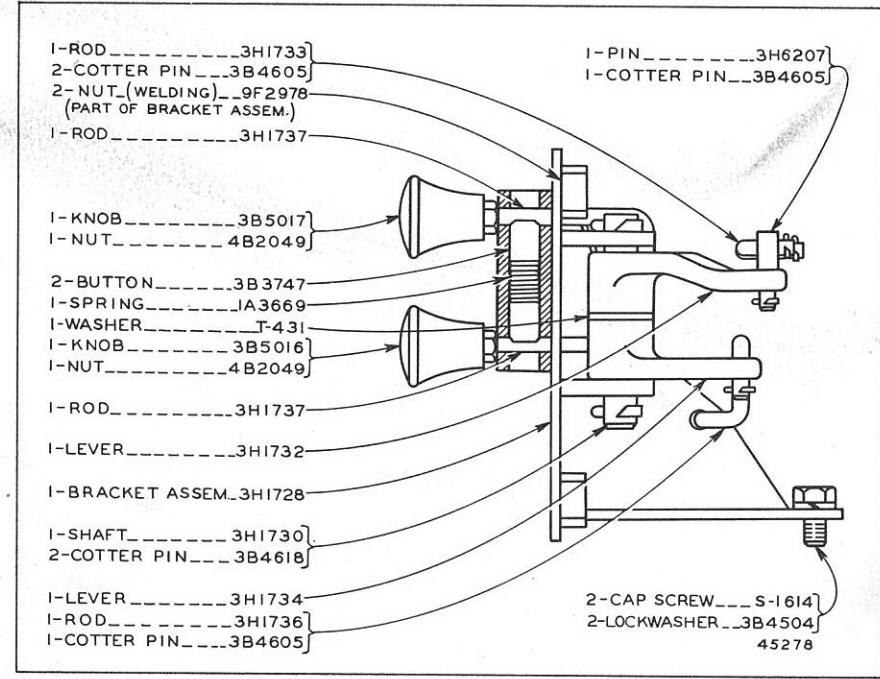


3H3779 CARBURETOR CONTROLS GROUP

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

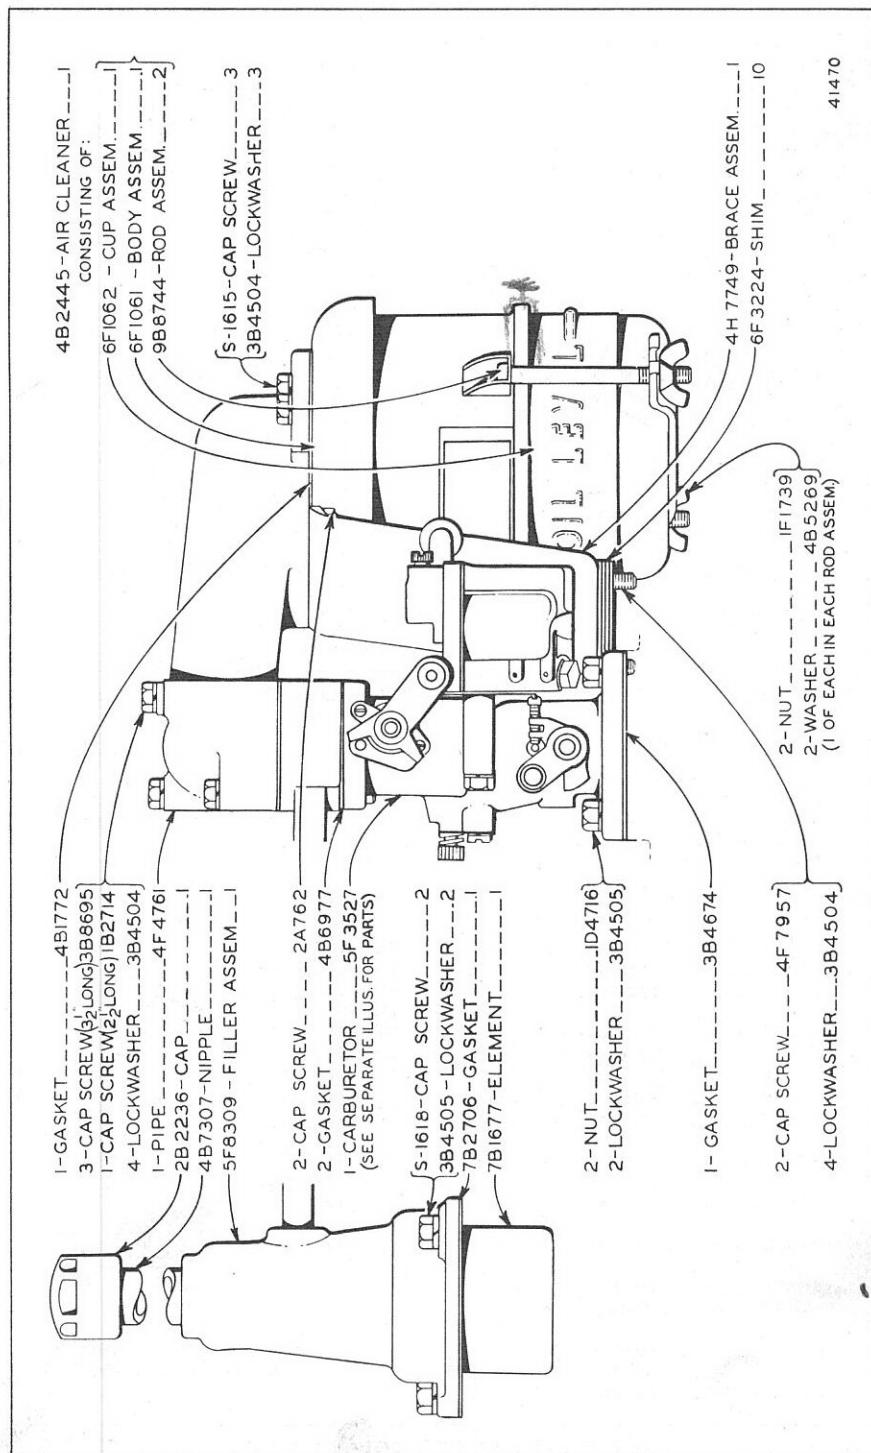


AIR CLEANER, BREATHER AND CARBURETOR

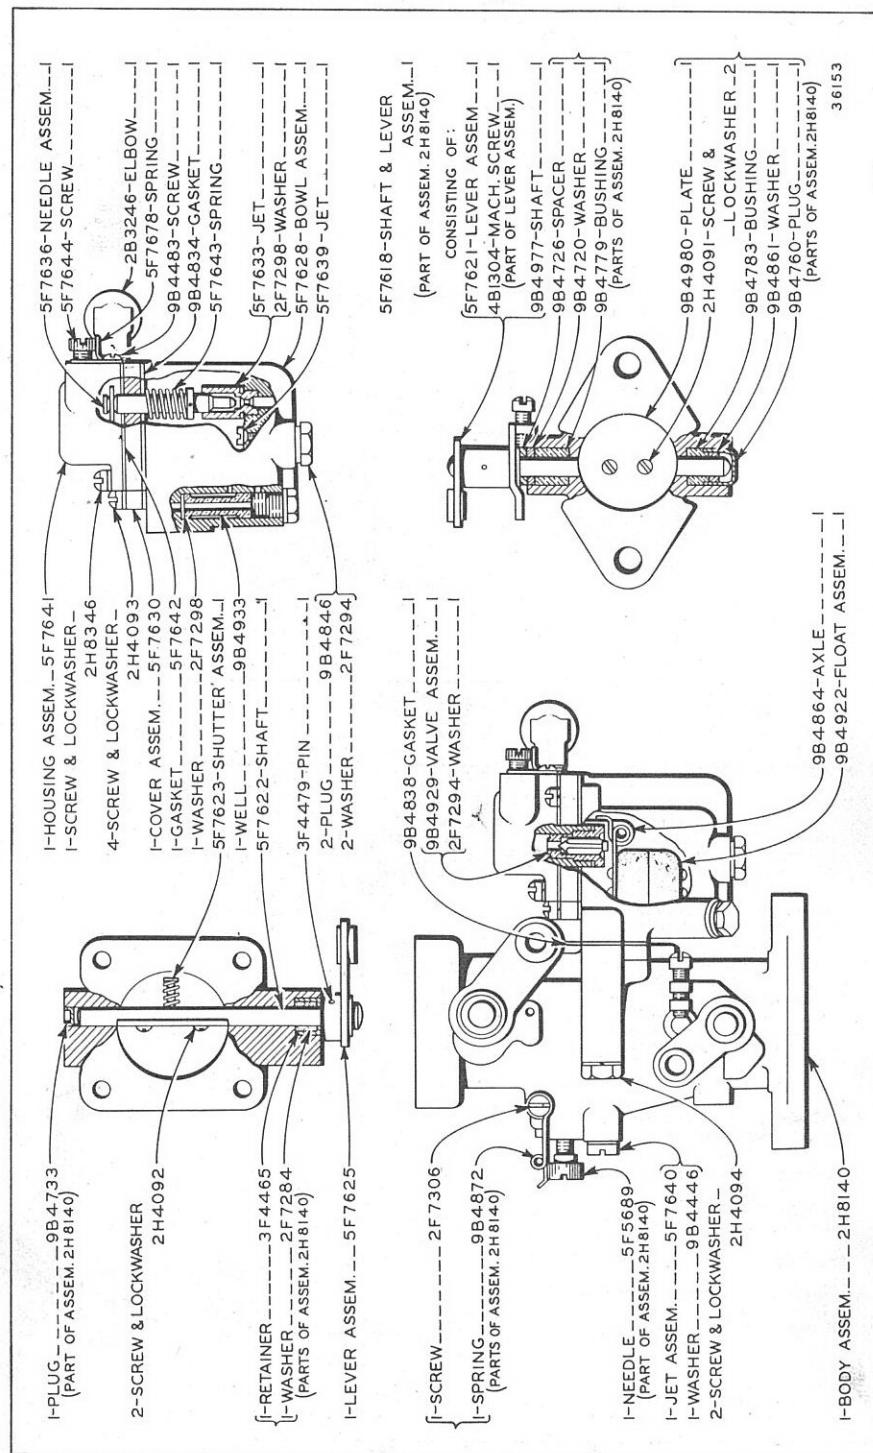
5F3527 CABURETOR
Part of Air Cleaner, Breather and Carburetor

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

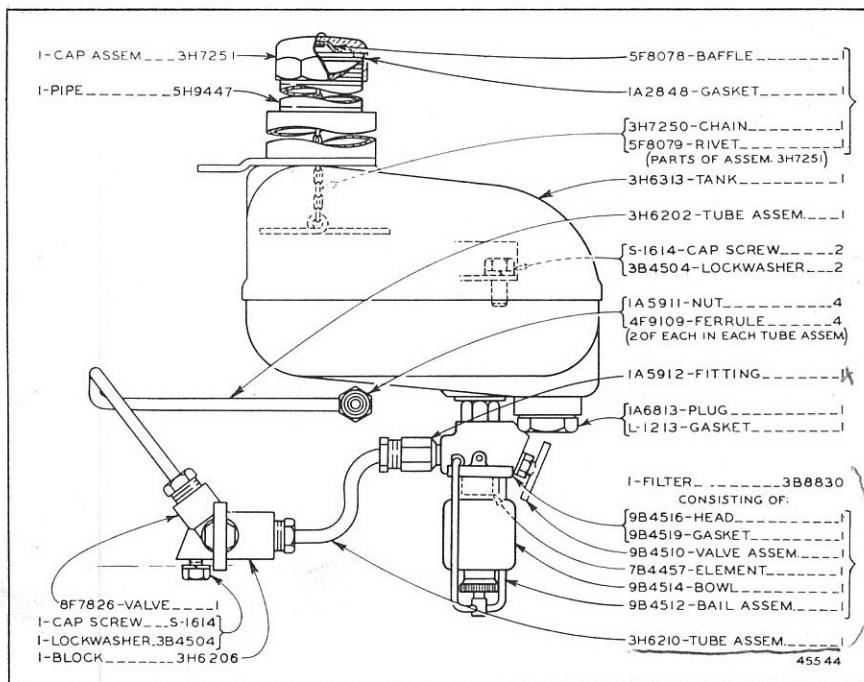

FUEL SYSTEM

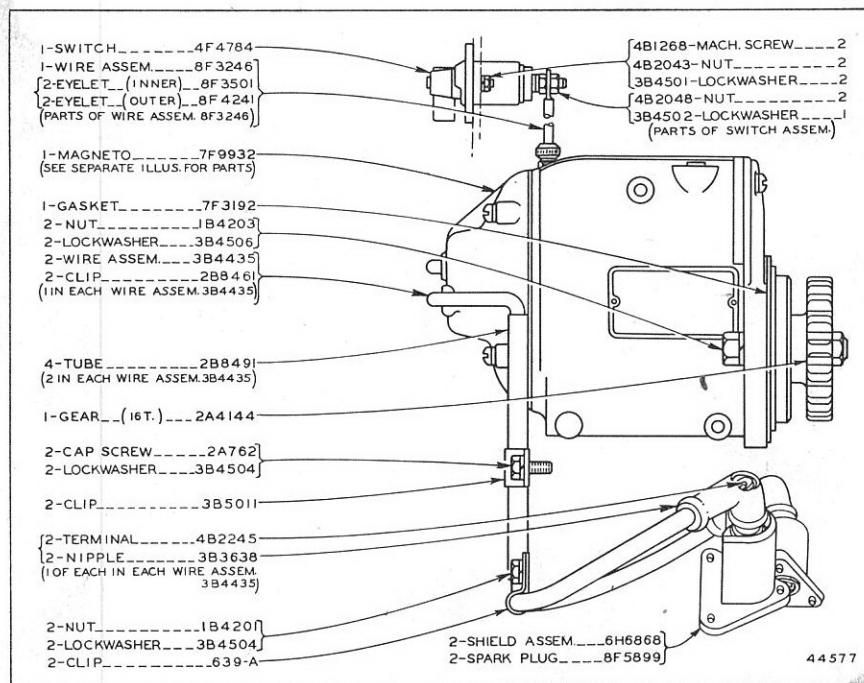


IGNITION SYSTEM

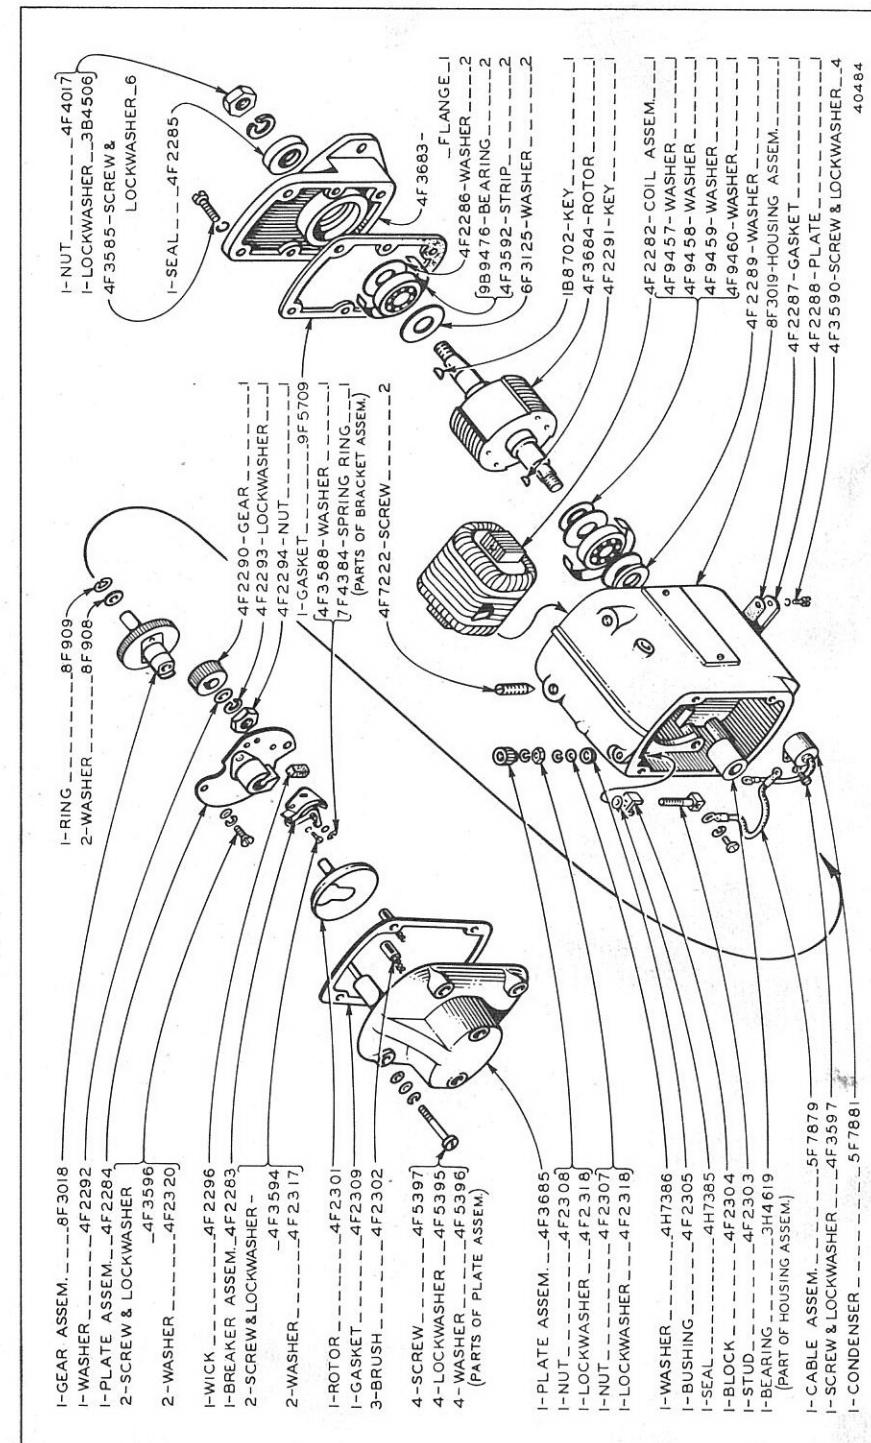

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

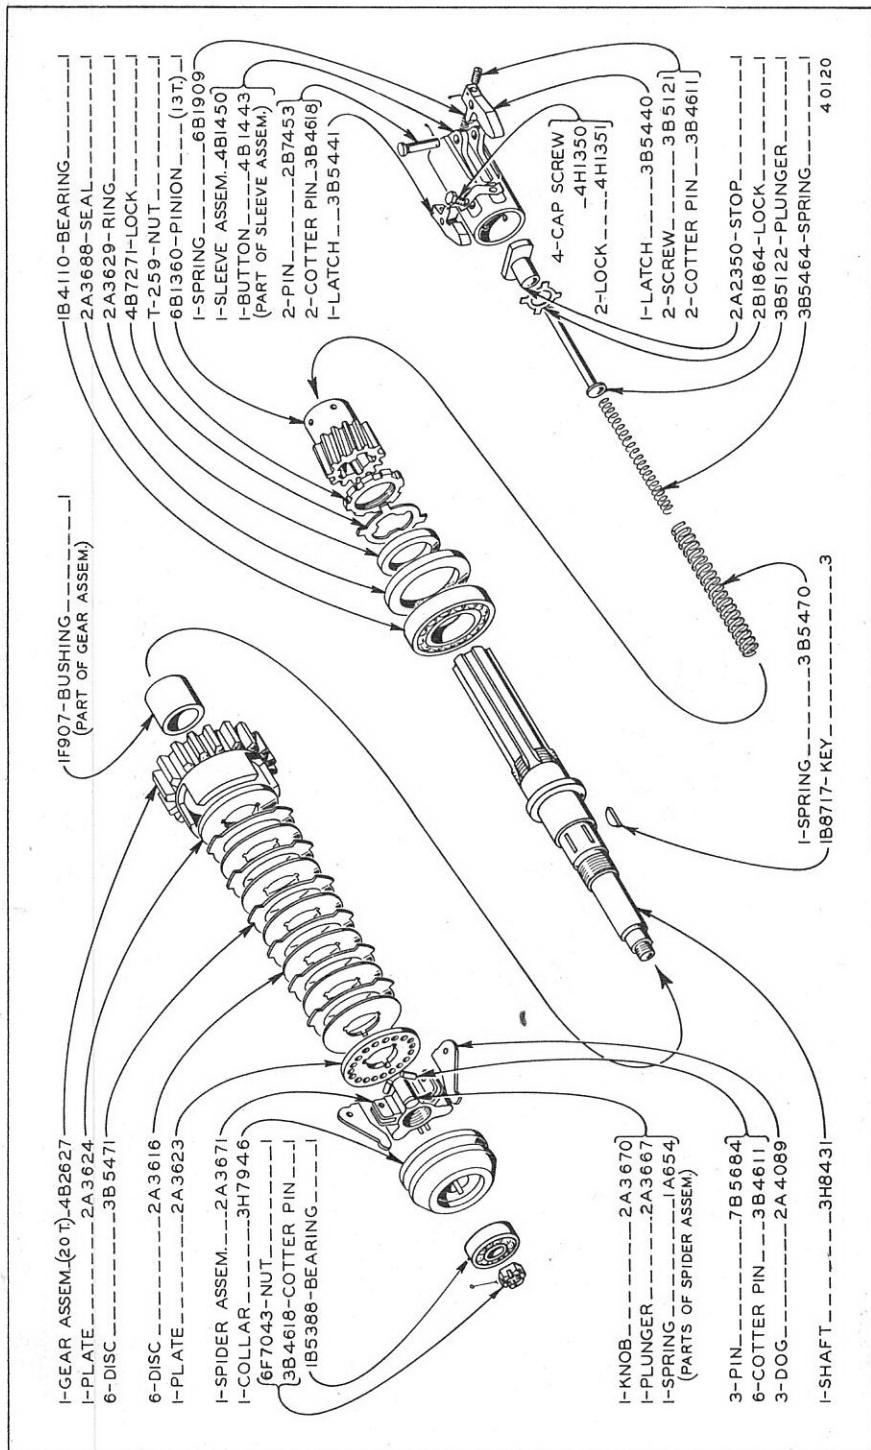

3B8008 CLUTCH AND STARTER PINION GROUP

Serial No. 12A1294 to 12A1293 inclusive
Note: 2H5107 Starting Engine Clutch Mechanism Gasket Group is available


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

3B8008 CLUTCH AND STARTER PINION GROUP


Serial No. 12A1294 to 12A1718 and 12A1732 inclusive


Note: 2H5107 Starting Engine Clutch Mechanism Gasket Group is available

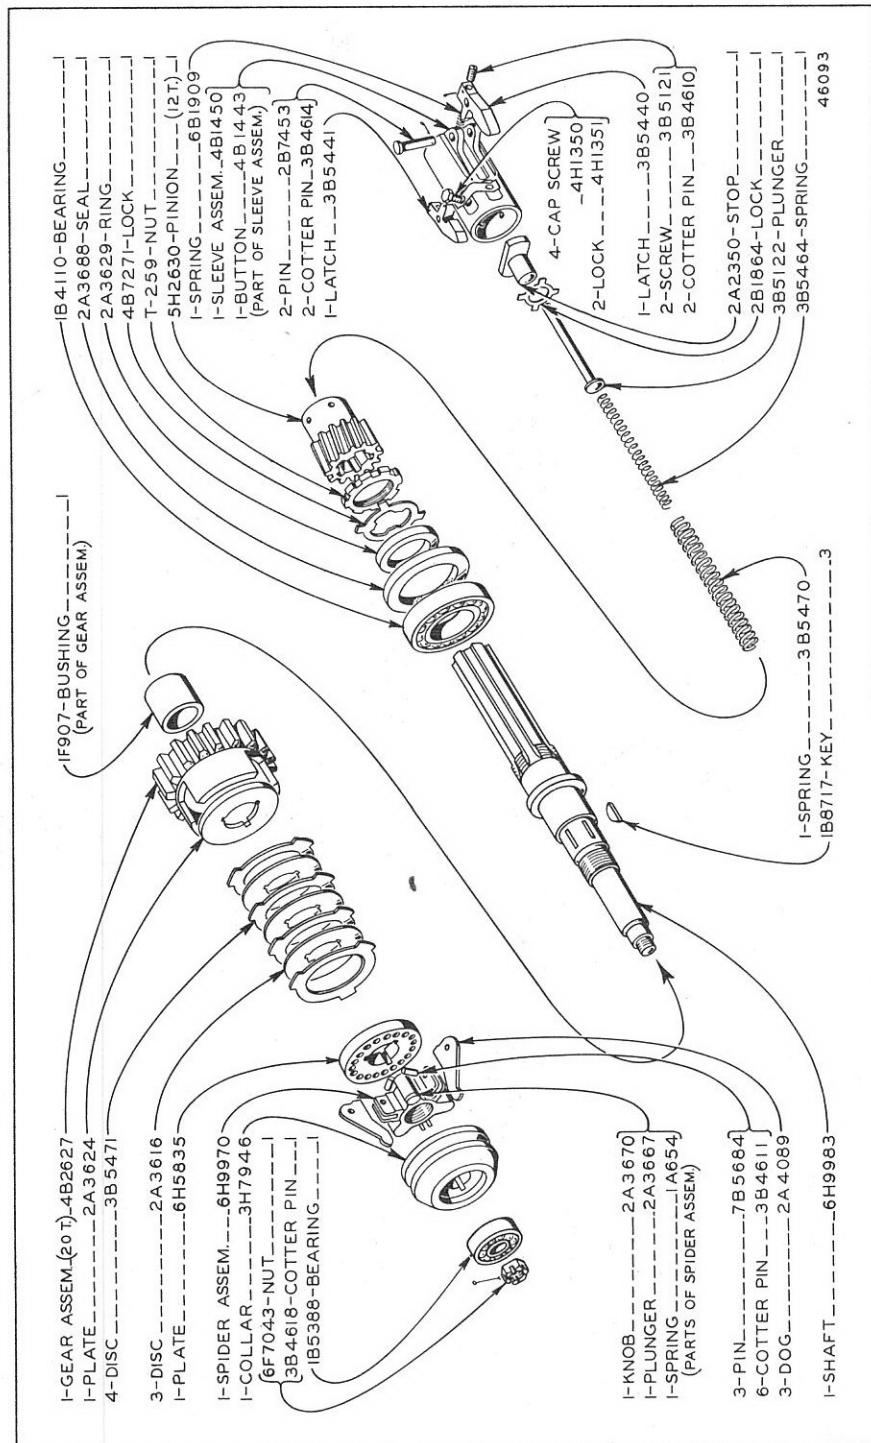


3B8008 CLUTCH AND STARTER PINION GROUP

Serial No. 12A1719 to 12A1731 and 12A1733-UP
Note: 2H5107 Starting Engine Clutch Mechanism Gasket Group is available

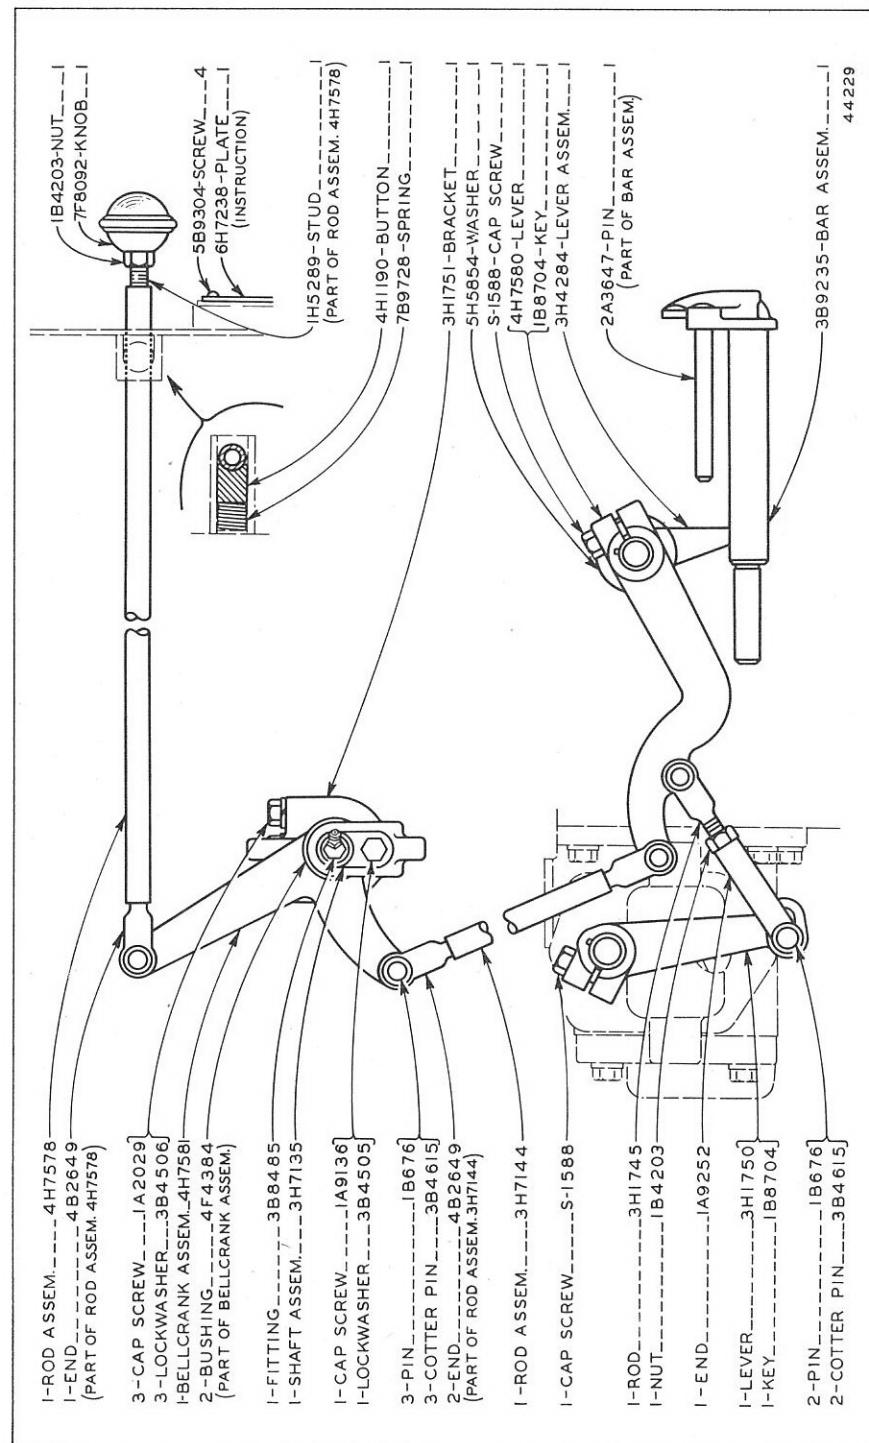

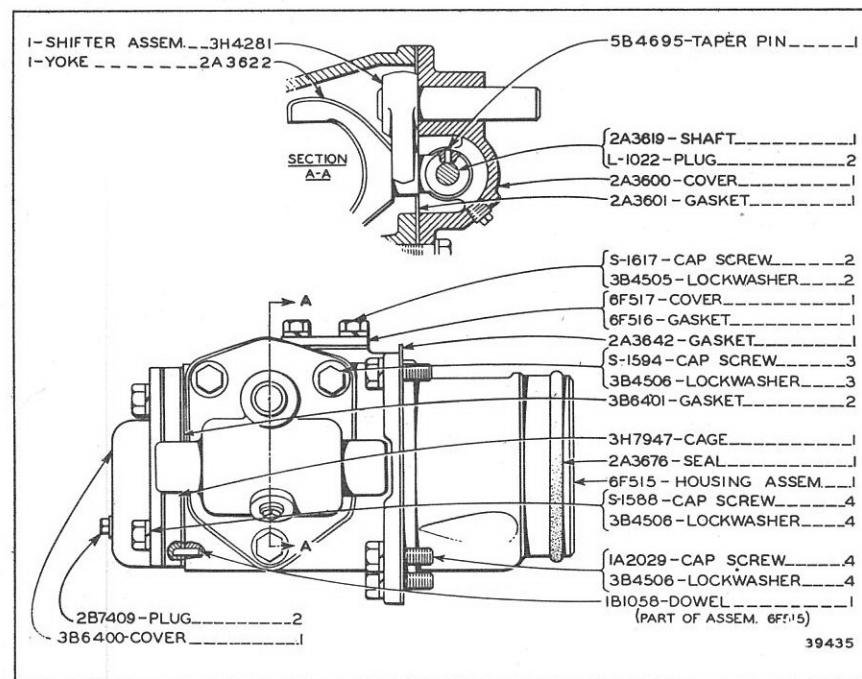


3H6366 CLUTCH HOUSING GROUP

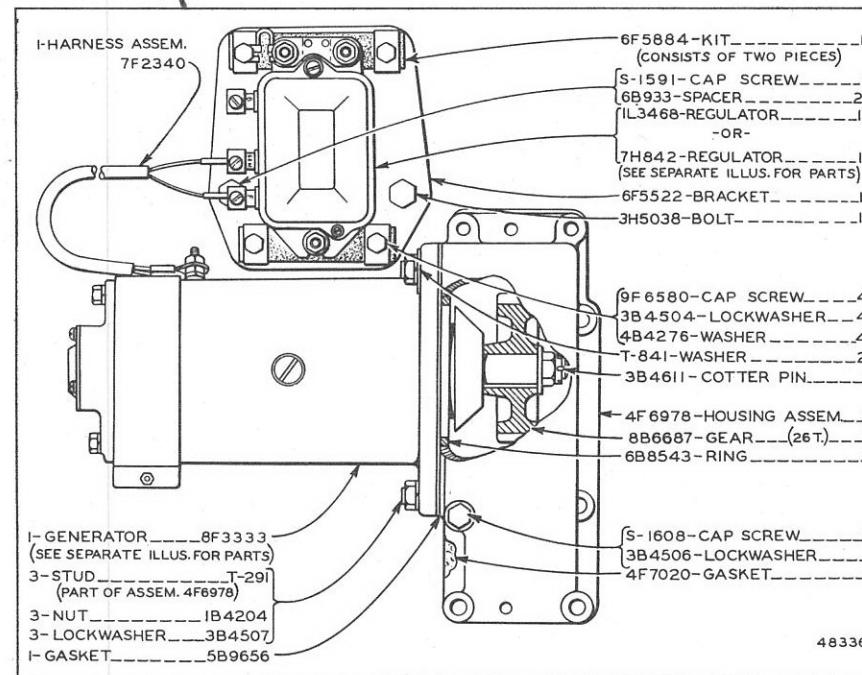


4F6969 GENERATOR GROUP—6 Volt, 20 Amphere

IL3468 and 7H842 Regulator parts are shown on Pages 56 and 57
Refer also to Page 123 for Special Parts


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

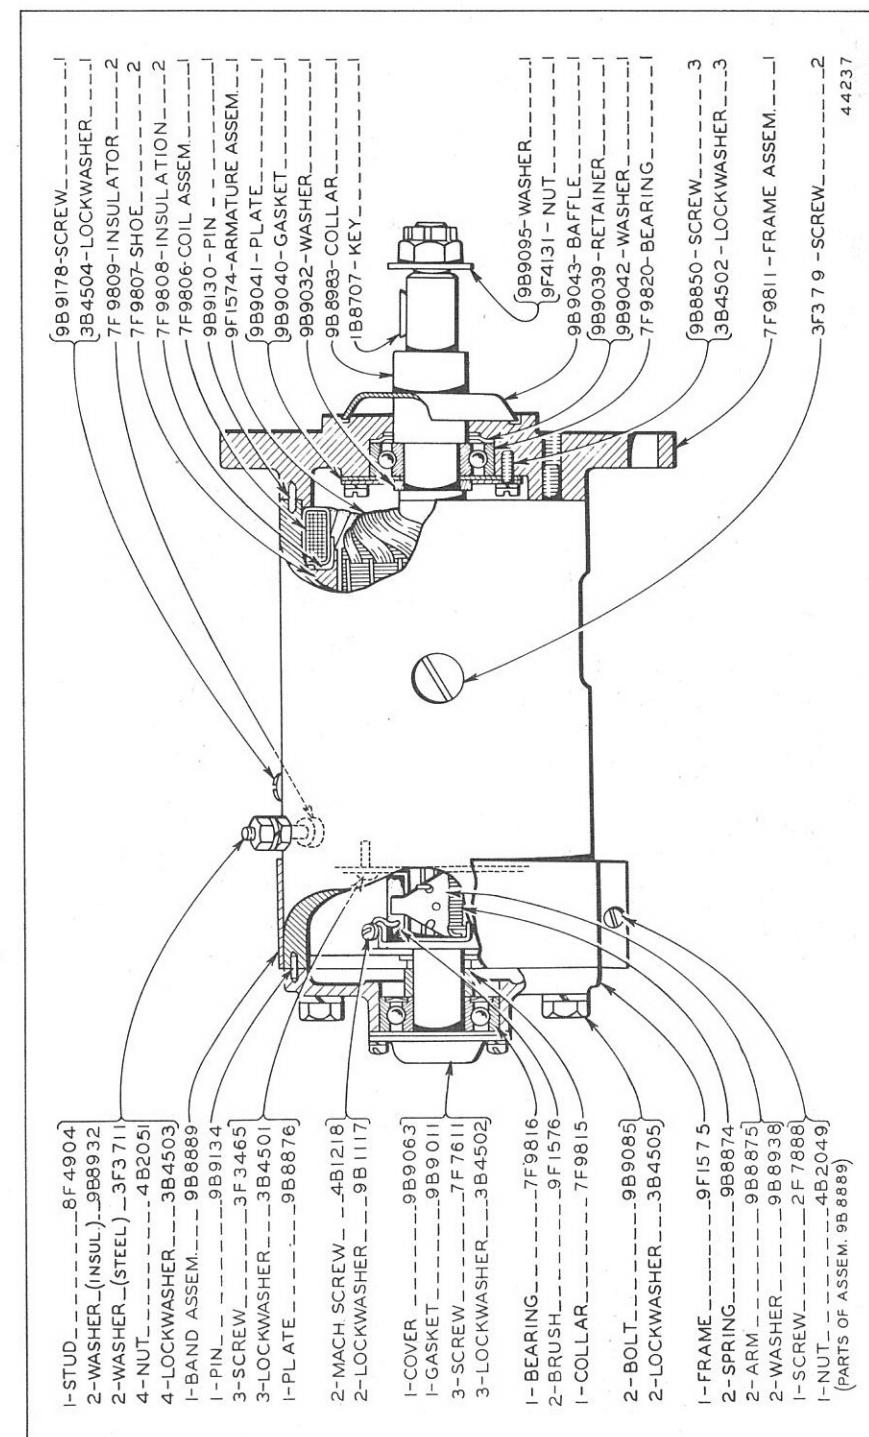

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

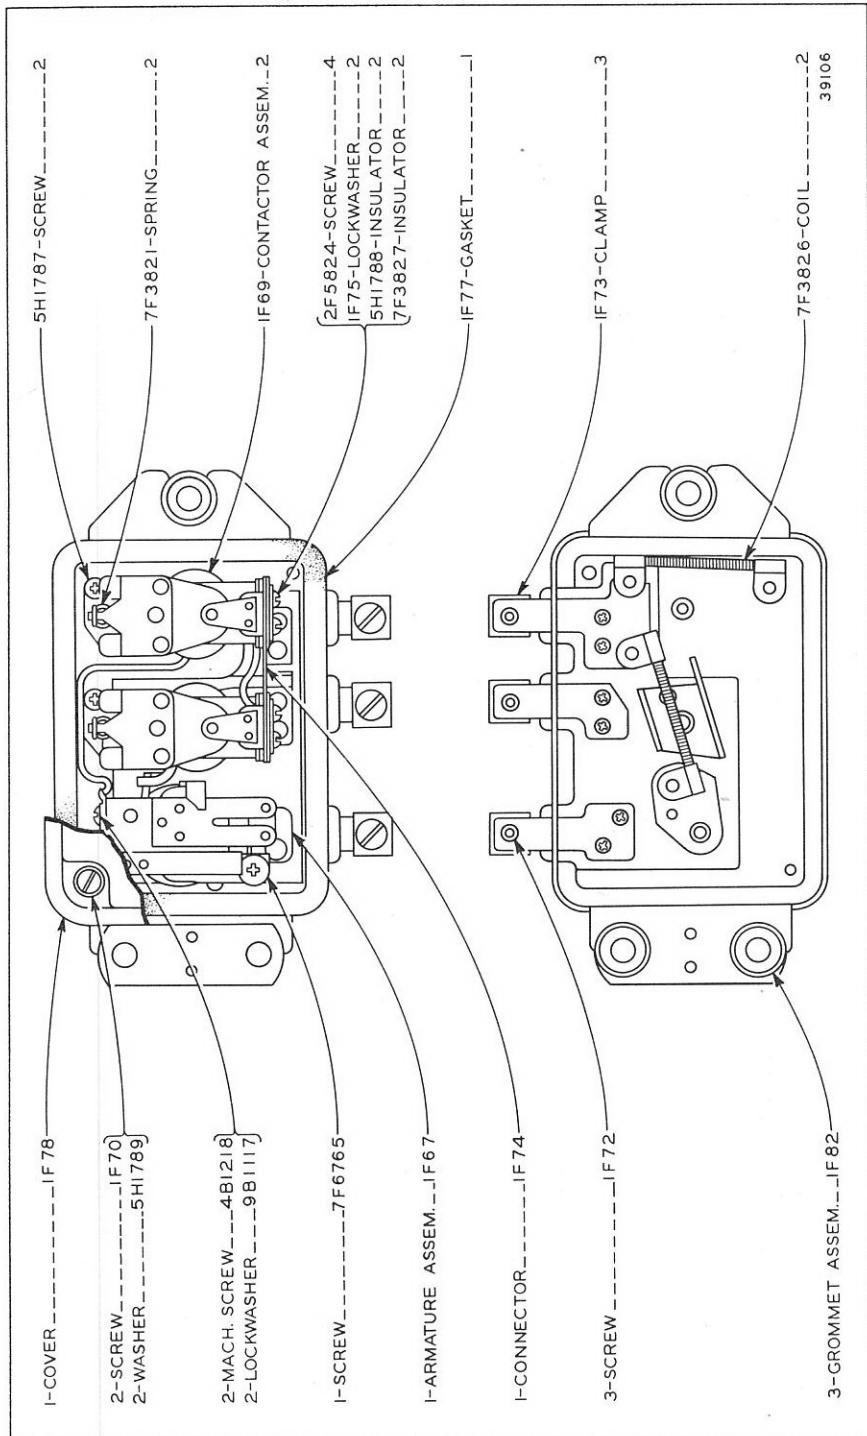


IL3468 REGULATOR—6 Volt, 20 Ampere
Part of 4F6969 Generator Group shown on Page 54

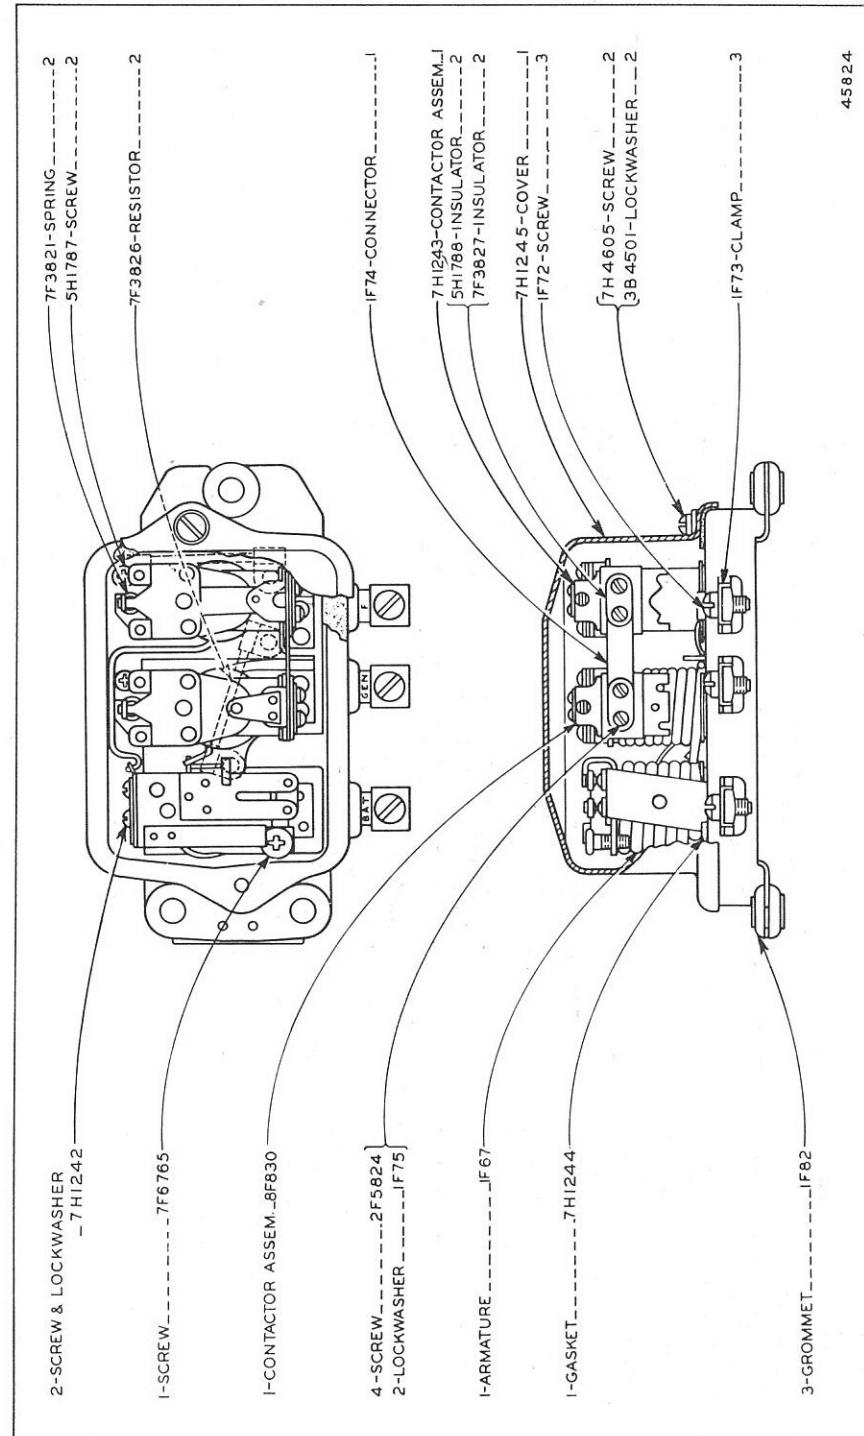


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

7H842 REGULATOR—6 Volt, 20 Ampere
Part of 4F6969 Generator Group shown on Page 54

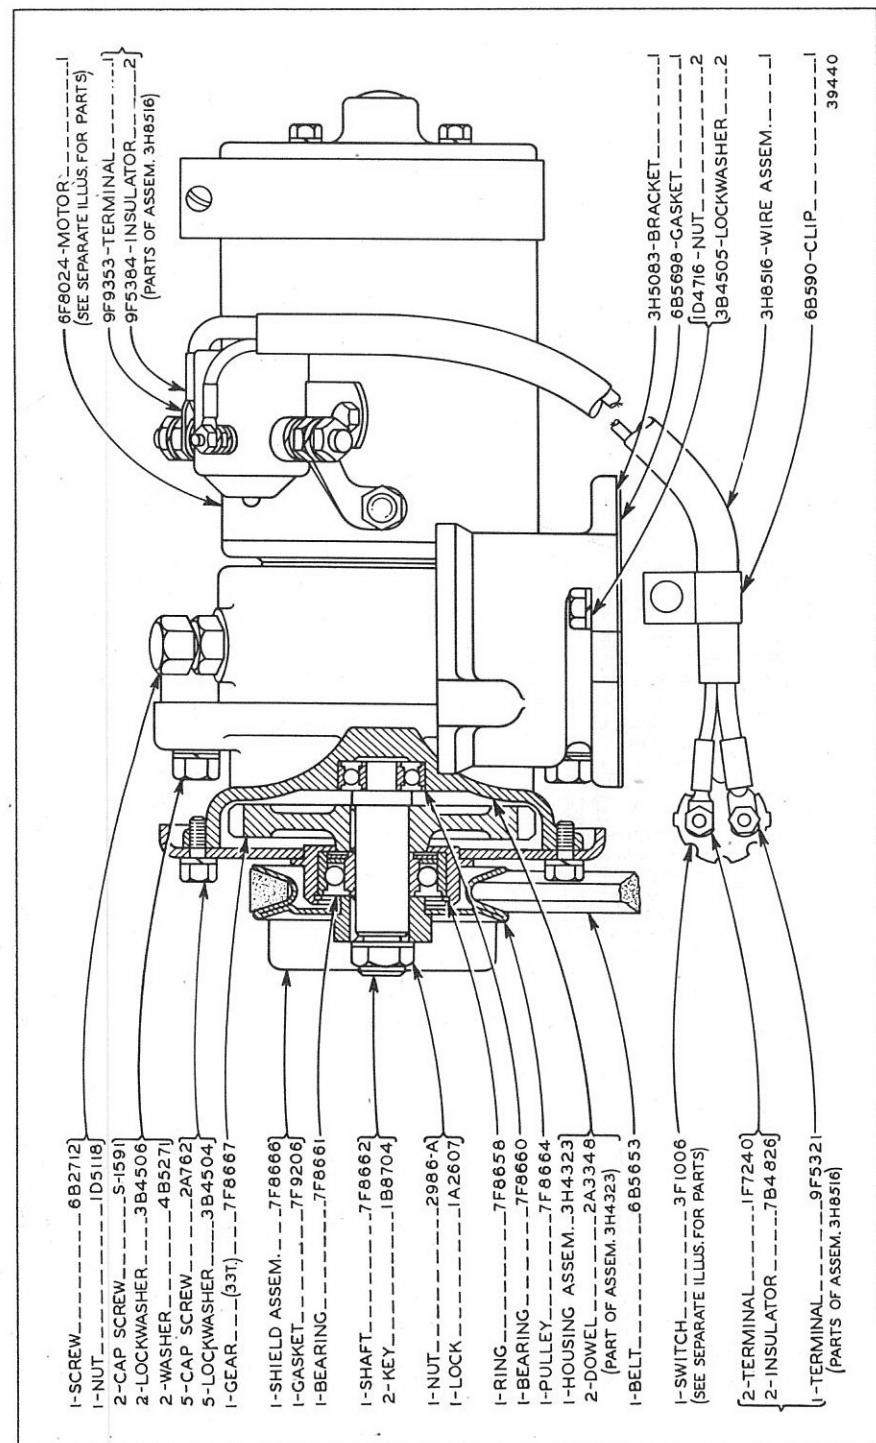


ELECTRIC STARTING SYSTEM—6 Volt
3F1006 Switch parts are shown on Page 60

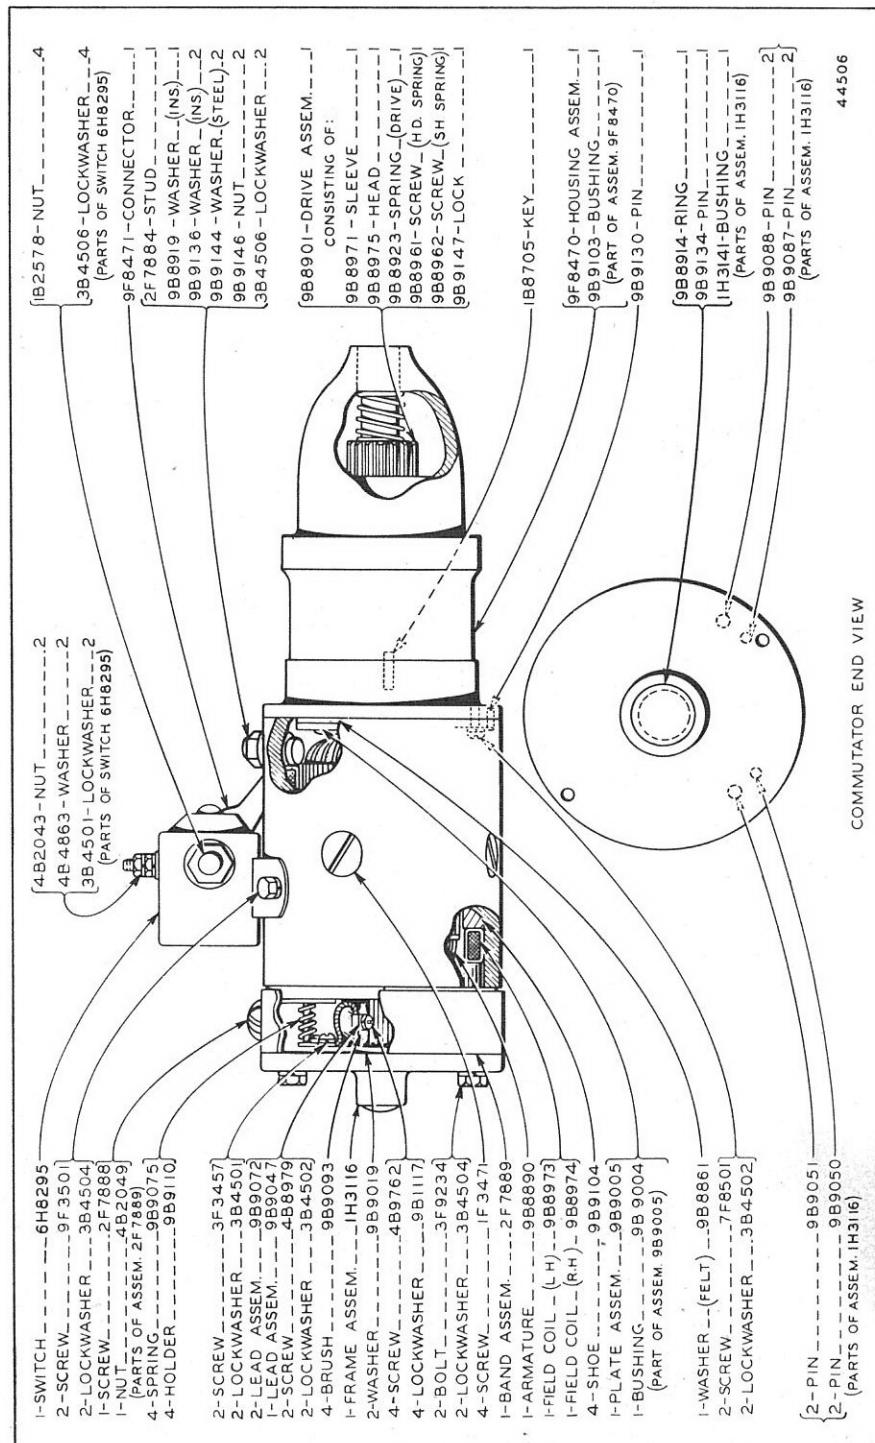


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

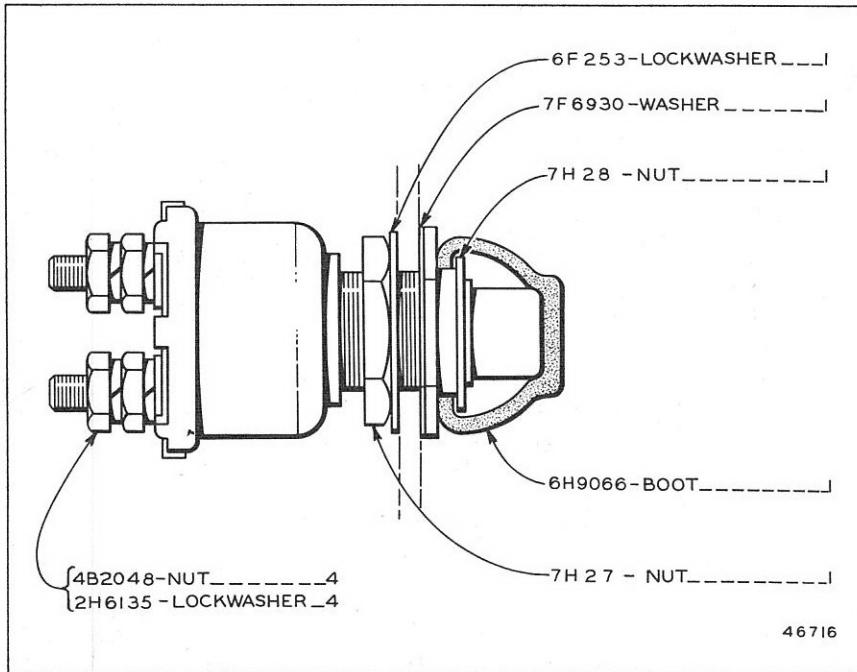

3FI006 SWITCH
Part of Electric Starting System shown on Page 58

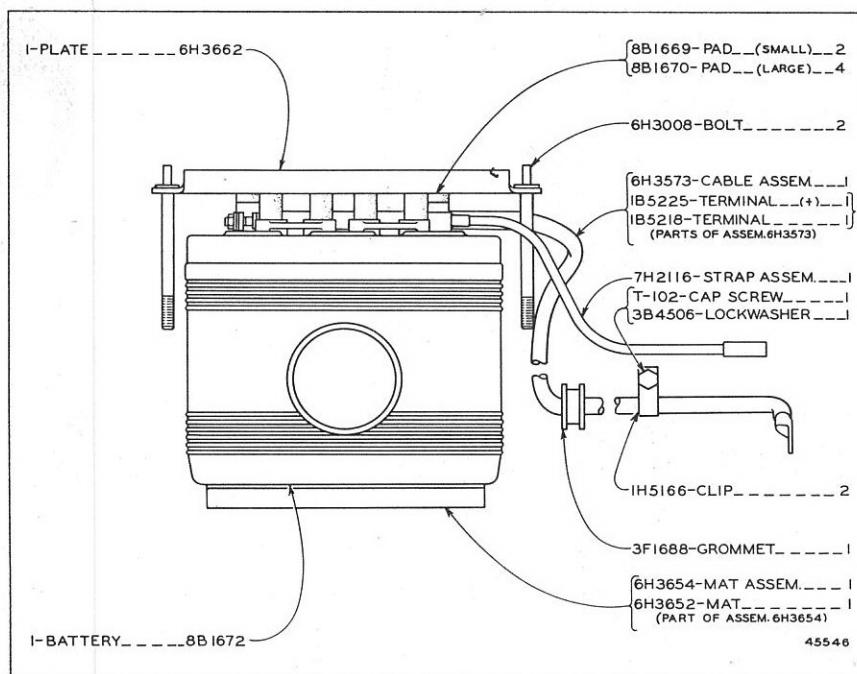

6H3644 BATTERY GROUP—6 Volt

PARTS SERVICE — When you need replacement parts for your Caterpillar machines, you need only call on your CAT Dealer. In a short time, your order is filled and ready so that you can get your machine back on the job quickly where it can continue earning profits for you.


VENDEMOS REPUESTOS — Cuando usted necesita repuestos para sus máquinas Caterpillar, usted necesita sólo llamar a su Distribuidor Caterpillar. En poco tiempo su orden será atendida y llenada, de forma que usted podrá tener su máquina en trabajo, obteniendo ganancias para usted.

PIECES DE RECHANGE — Si vous avez besoin d'une pièce de rechange pour une machine Caterpillar, adressez-vous à votre concessionnaire CAT. Votre commande sera exécutée rapidement et vous pourrez remettre votre machine en service sans retard. Vous évitez des interruptions prolongées toujours très onéreuses.

PEÇAS DE SUBSTITUIÇÃO — Se você precisar de peças para as suas máquinas Caterpillar, basta chamar o distribuidor Cat de sua zona. Em pouco tempo seu pedido é atendido e, prontamente, você pode levar sua máquina de volta para o trabalho, para ela continuar a lhe dar lucros.




**SPECIFY GENUINE
CATERPILLAR PARTS**

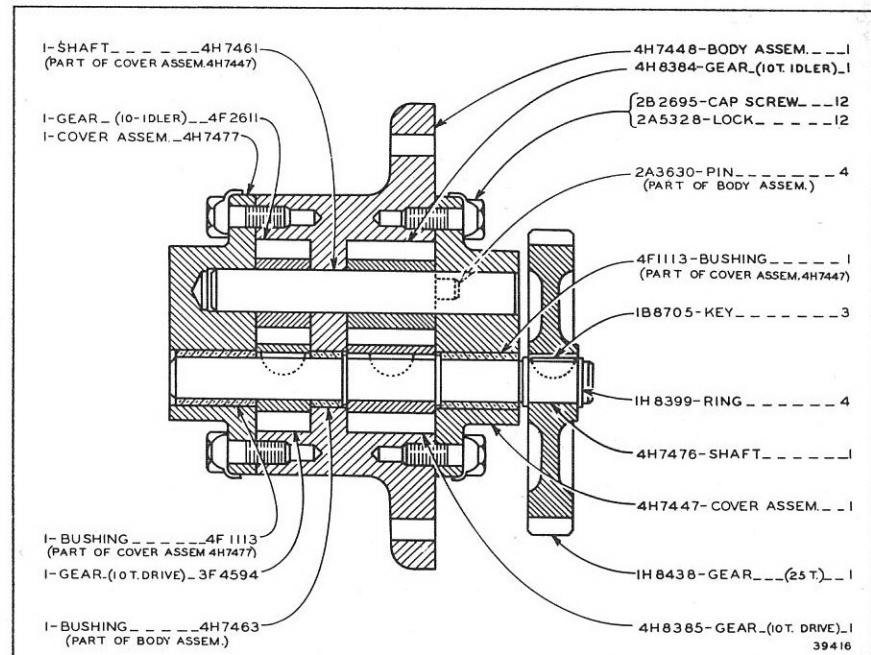


4H7498 PUMP GROUP
Part of 5H568 Flywheel Clutch Group shown on Page 63

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

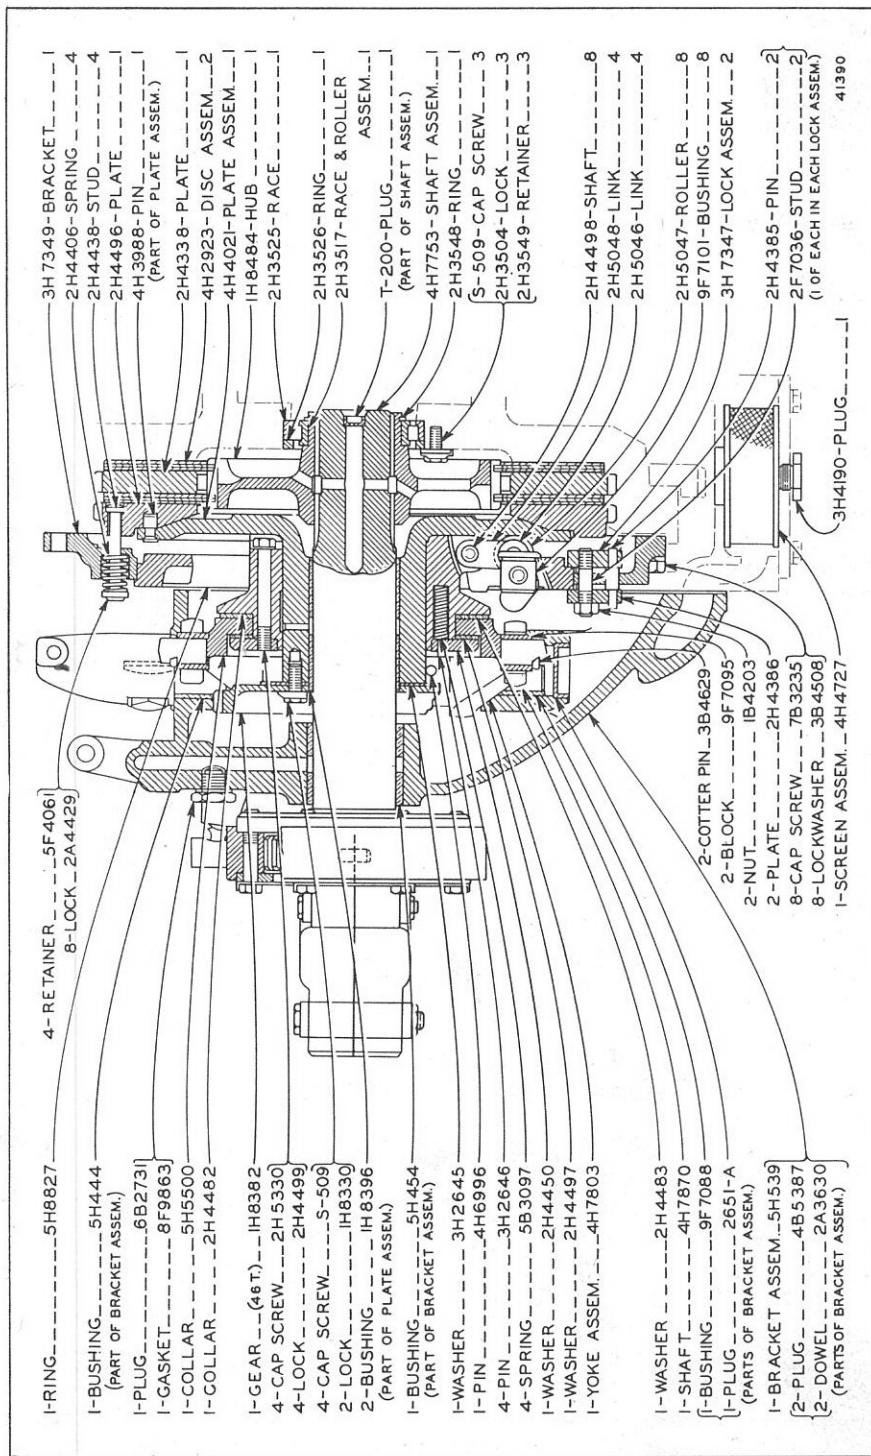

5H568 FLYWHEEL CLUTCH GROUP—Side View

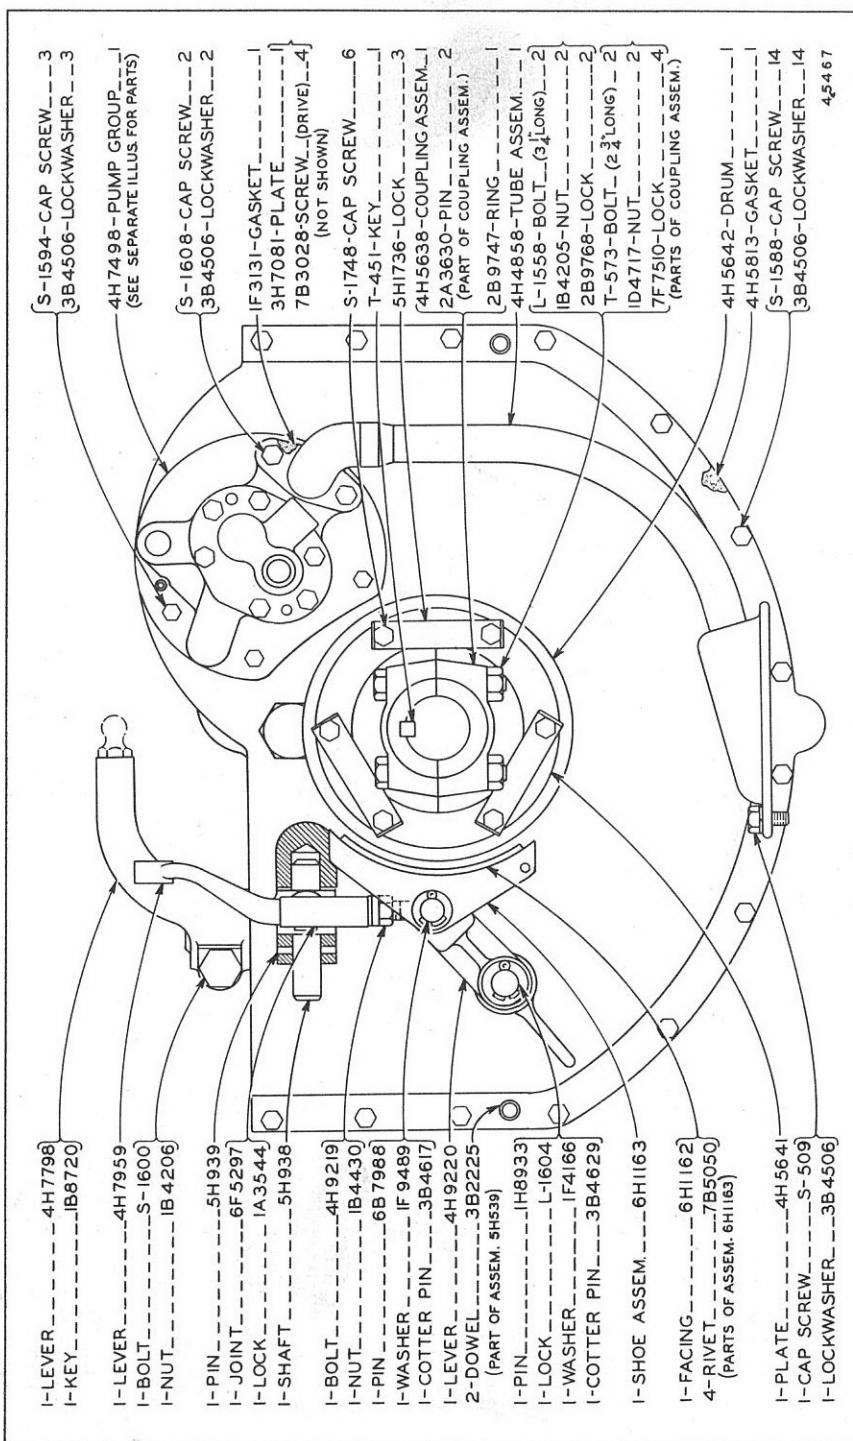


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE


5H568 FLYWHEEL CLUTCH GROUP—End View

4H7498 Pump Group parts are shown on Page 61

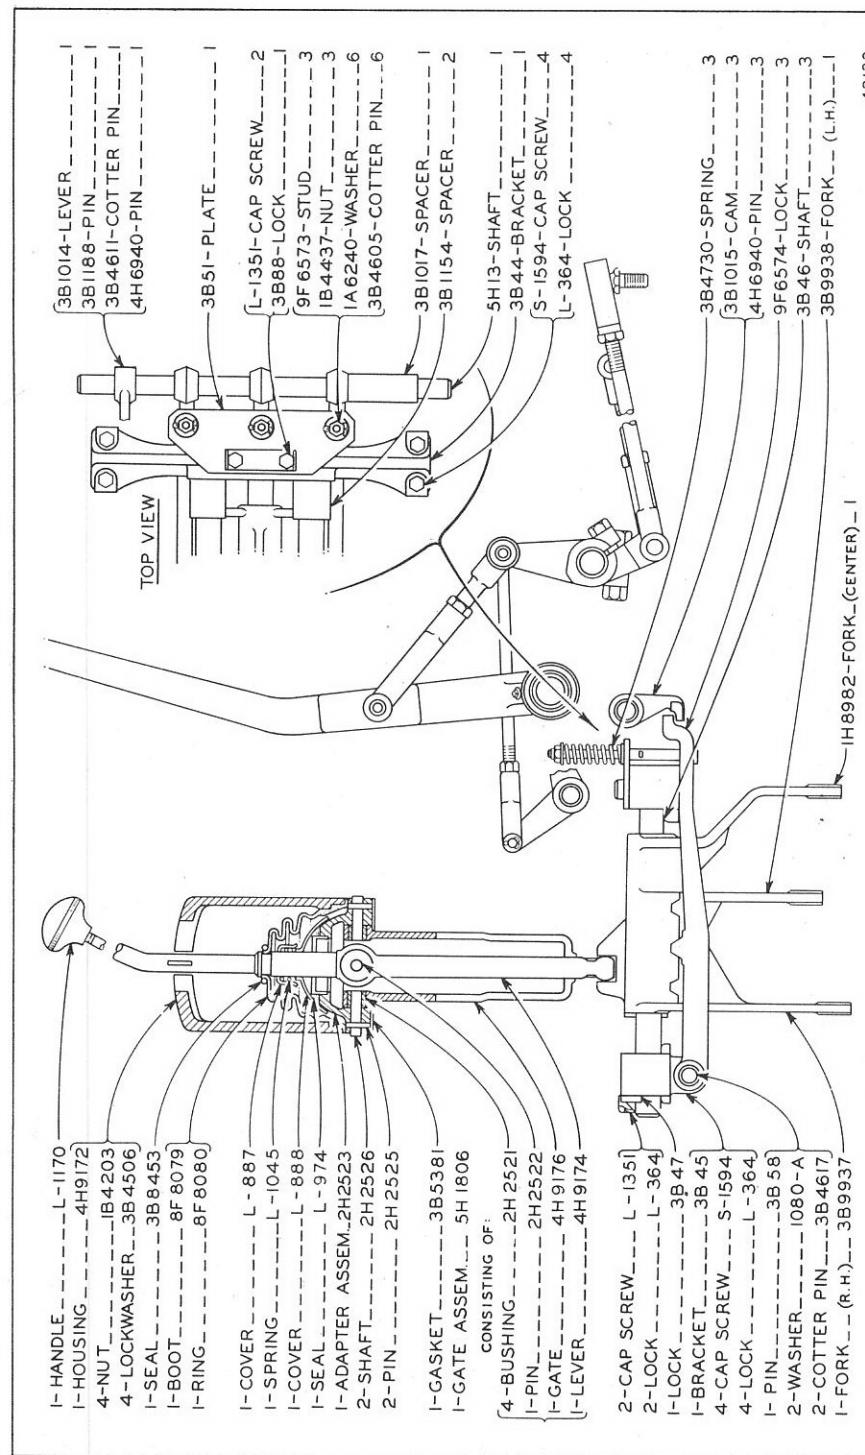

GEAR SHIFT AND FLYWHEEL CLUTCH CONTROL—Part One



42122

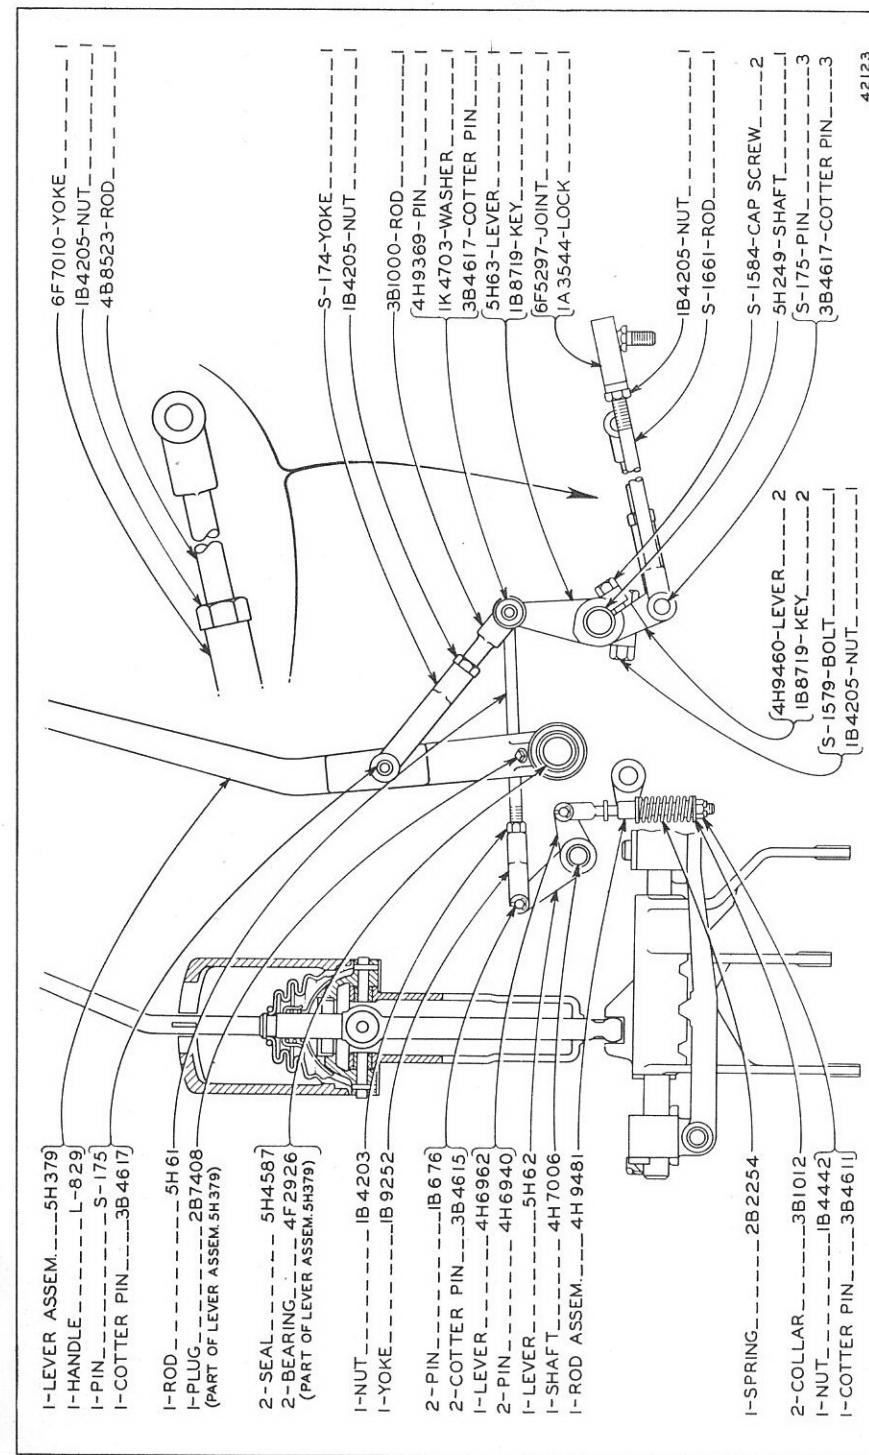

GEAR SHIFT AND FLYWHEEL CLUTCH CONTROL—Part Two

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

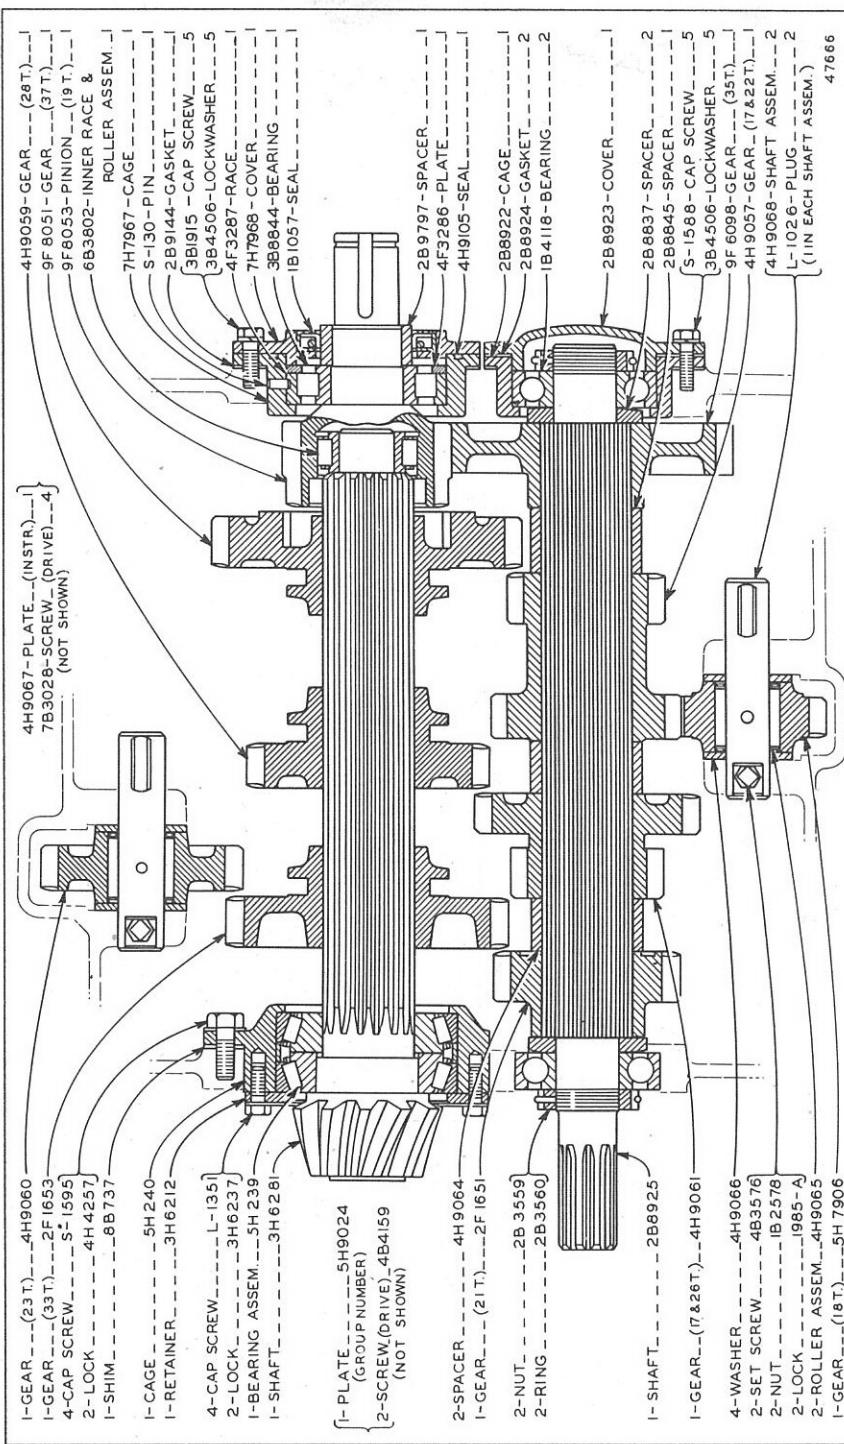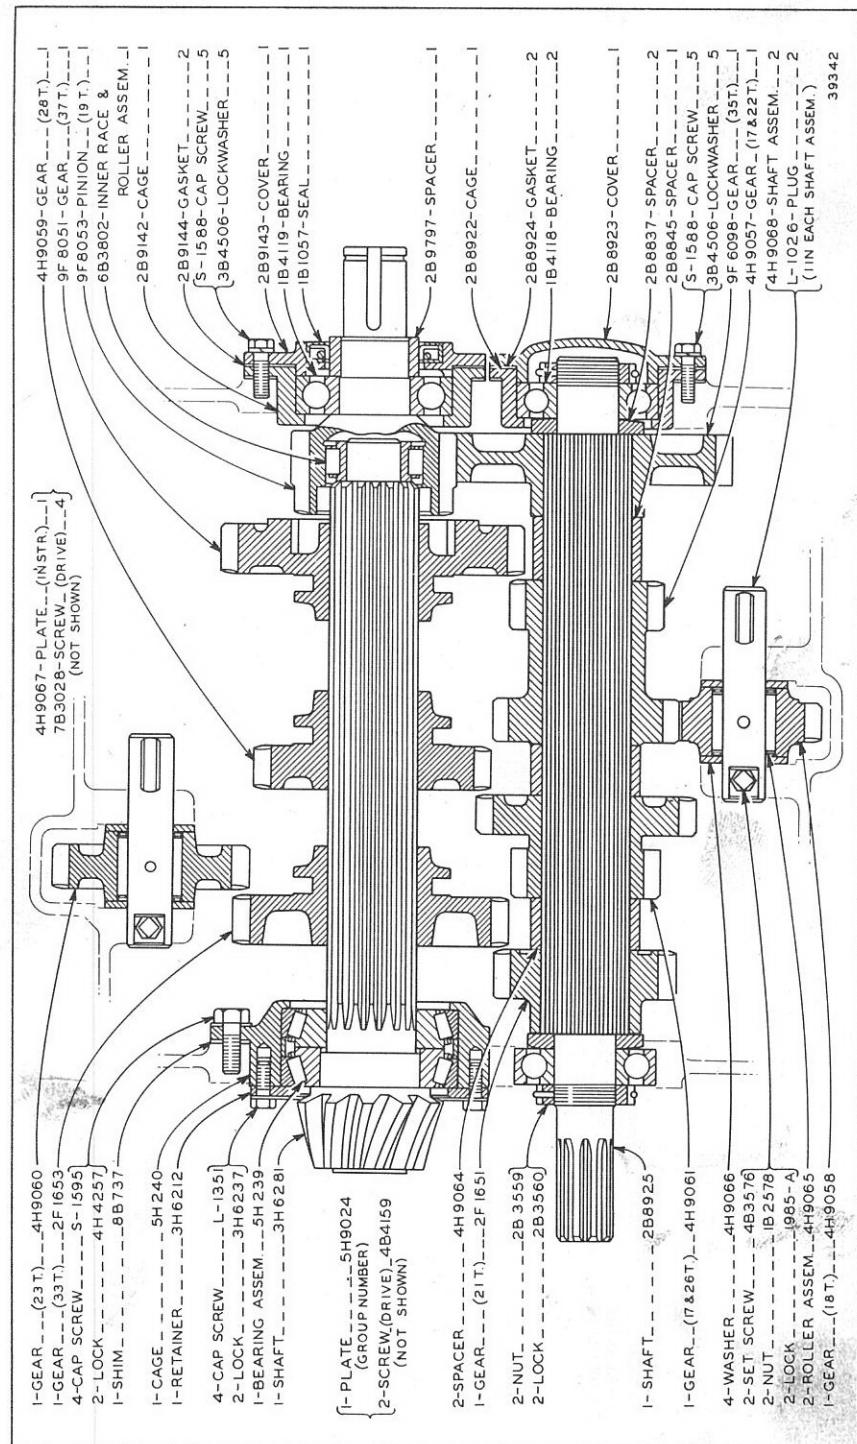

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

4H9050 TRANSMISSION GROUP

Effective with Serial No. 12A313


Note: This Group provides the following speeds: (Forward) First—1.72, Second—2.39, Third—3.50 and Fourth—6.92 M.P.H.;

4H9050 TRANSMISSION GROUP

(Reverse) Low—1.94 and High—2.95 M.P.H.


Note: This Group provides the following speeds: (Forward) First—1.72, Second—2.39, Third—3.50 and Fourth—6.92 M.P.H.;

(Reverse) Low—1.94 and High—2.95 M.P.H.

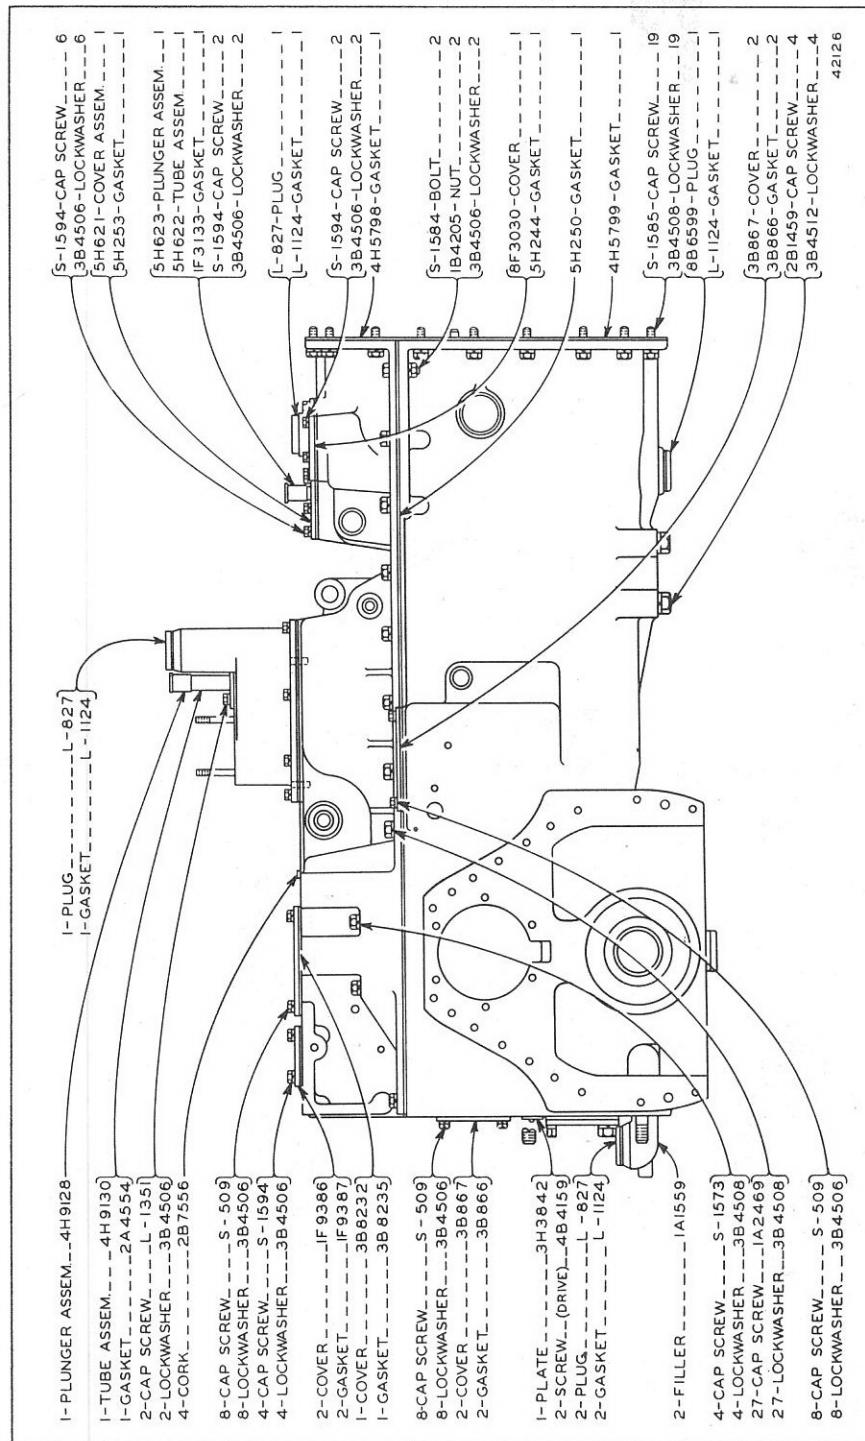


TRANSMISSION CASE AND COVERS—Part One
Serial No. 12A1 to 12A1639 inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

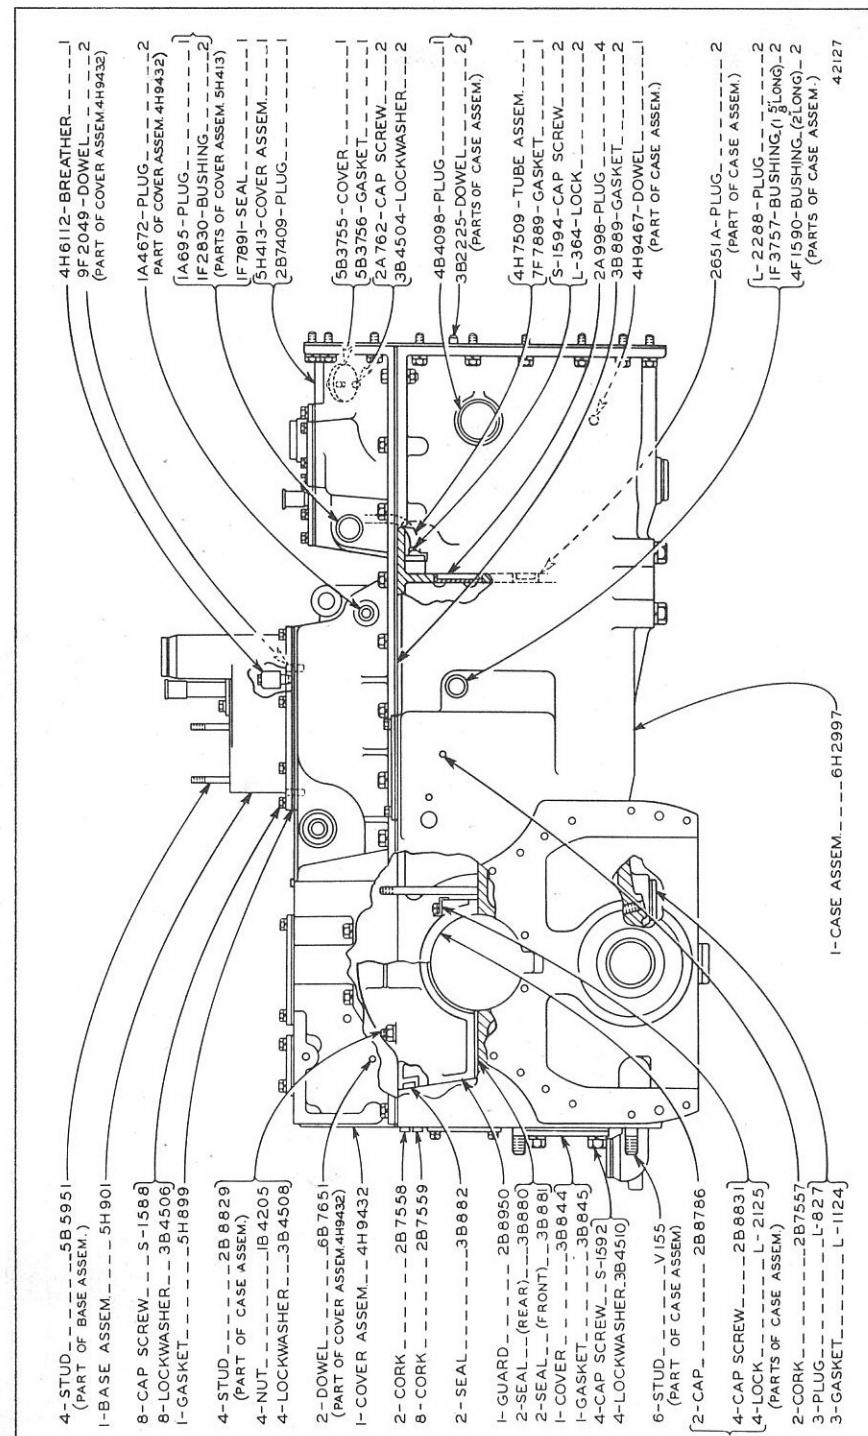


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

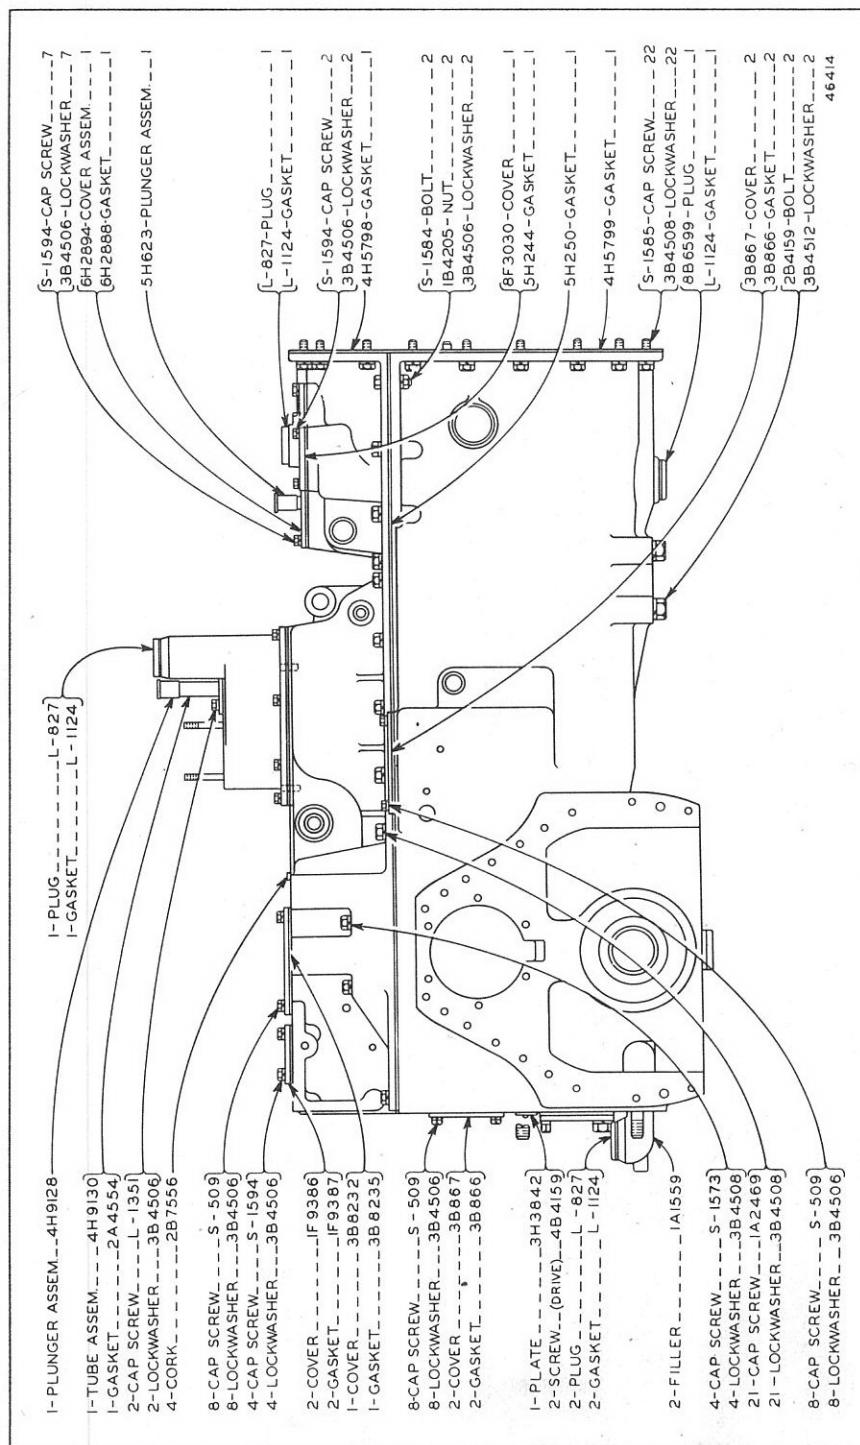

TRANSMISSION CASE AND COVERS—Part One

Effective with Serial No. 12A1640

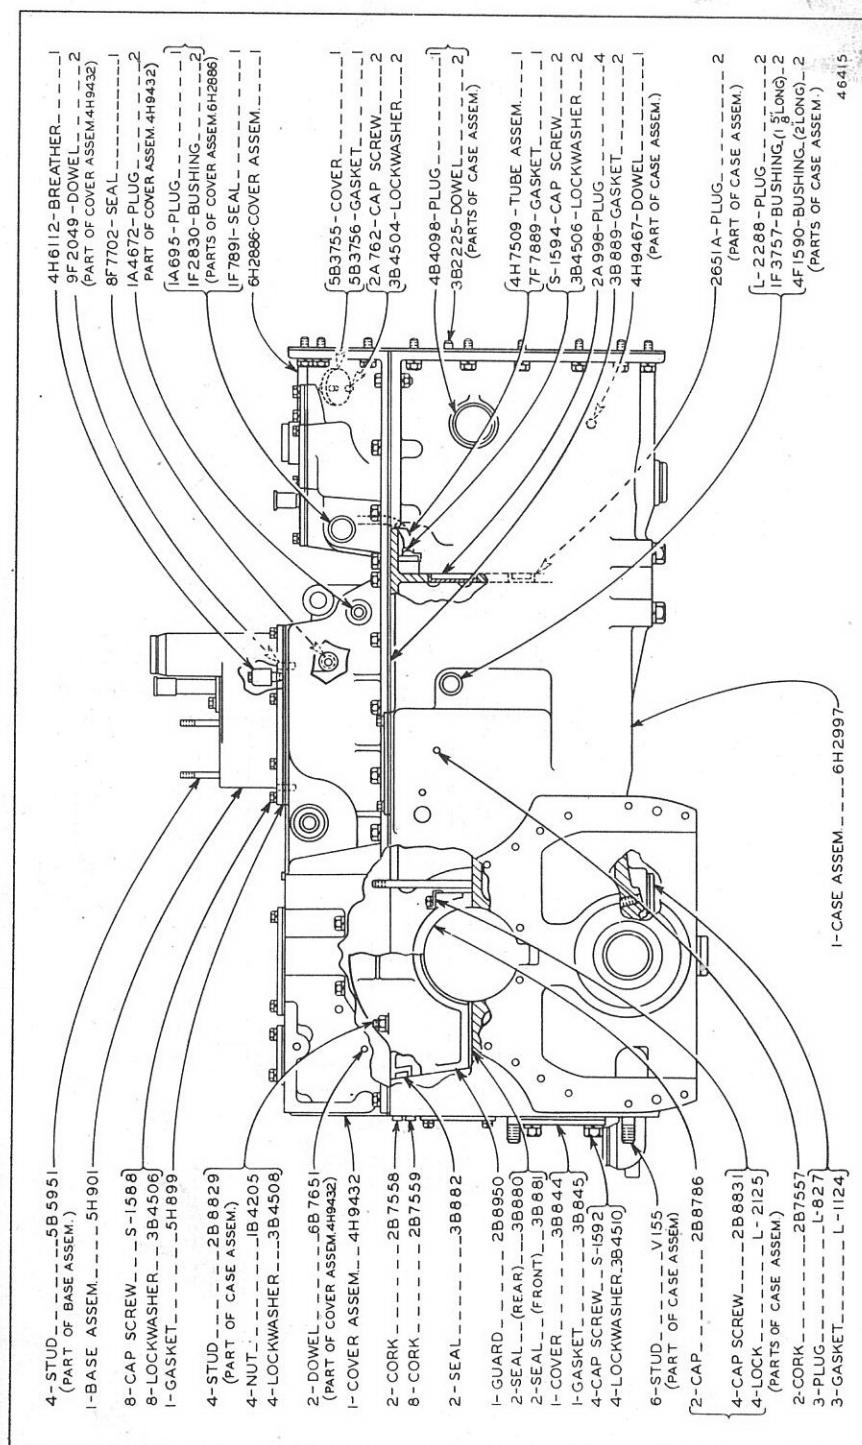


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

TRANSMISSION CASE AND COVERS—Part Two


Effective with Serial No. 12A1640

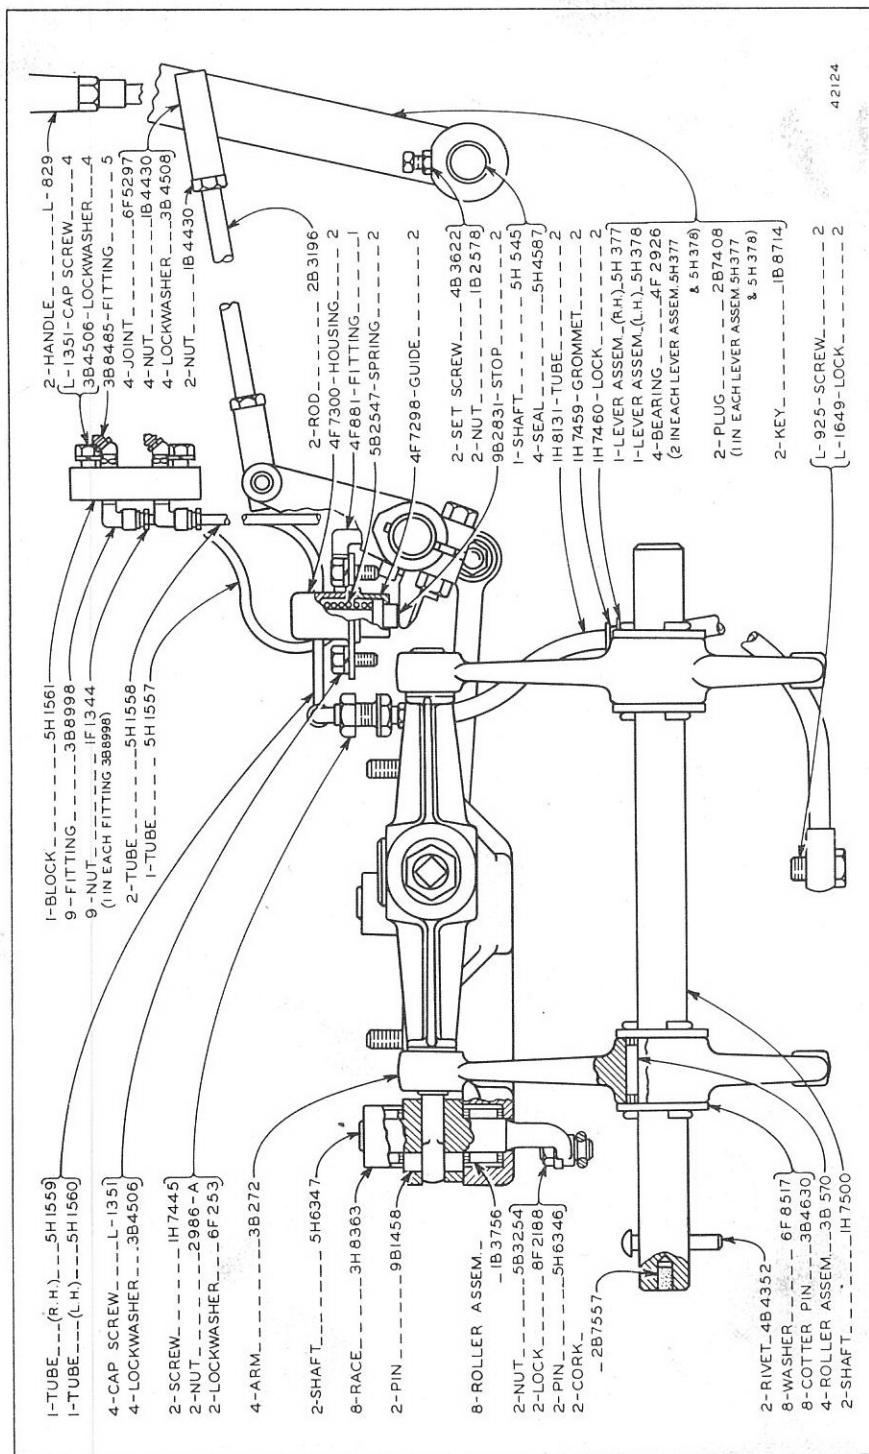

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

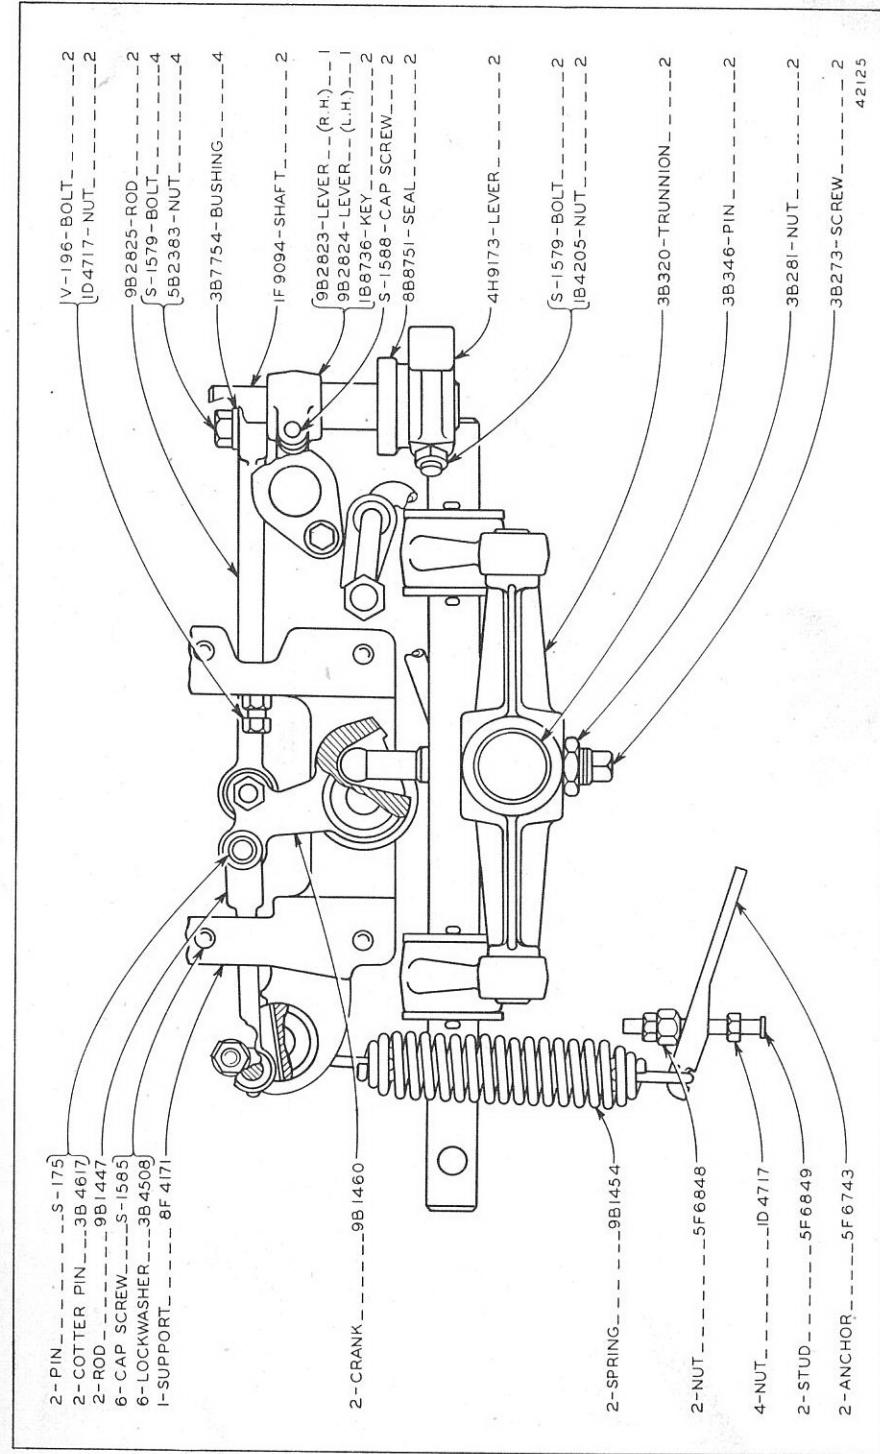

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

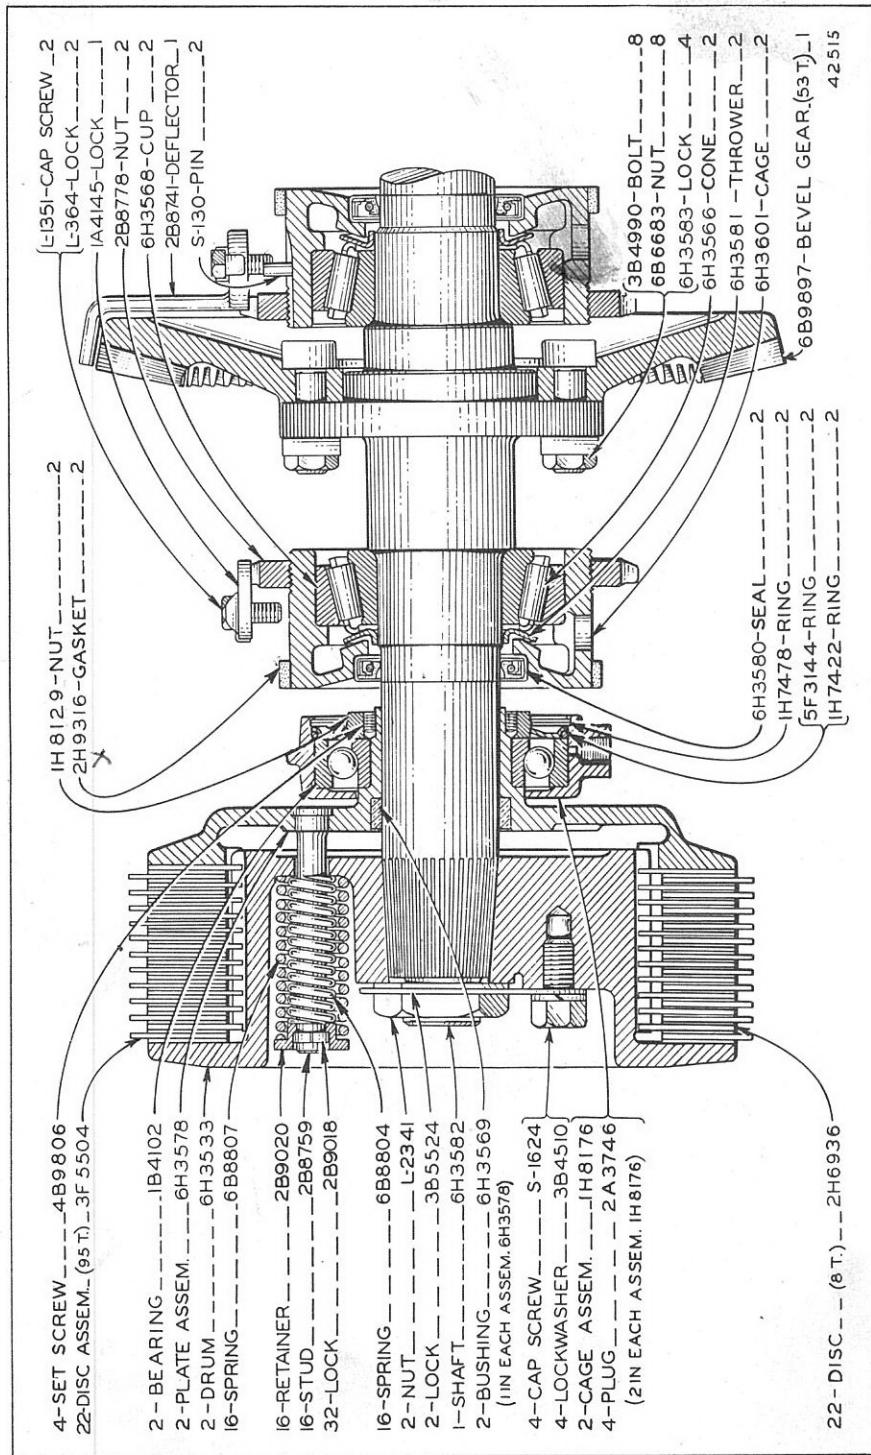

STEERING CLUTCH

CLUTCH, TRANSMISSION AND CHASSIS

This technical drawing provides an exploded view of a mechanical assembly, specifically a band assembly or lever system. The diagram illustrates the spatial relationships between numerous parts, each labeled with a reference number and a descriptive label.


Key Components and Labels:

- 1 - PIN**: Refers to several small pins used throughout the assembly.
- 2 - SPRING, (INNER)**: A coiled spring located near the top center.
- 4 - RIVET**: Two rivets are shown, one near the top left and another near the bottom center.
- (2 or 6) IN EACH ASSEMBLY**: A note indicating the quantity of certain parts per assembly.
- 2 - BAND ASSEM.**: Two bands or straps that wrap around the central mechanism.
- 4 - LINING**: Four pieces of material, possibly leather or fabric, attached to the bands.
- 32 - RIVET**: A rivet located at the bottom left.
- 7M3700 - FORM**: A component used for shaping or forming other parts.
- 207986 - COTTER**: A cotter pin used for securing a bolt.
- 30909 - SHAFT**: A long cylindrical part.
- 409405 - STUD**: A threaded stud.
- (1) IN EACH ASSEM. INDIVIDUALLY**: A note indicating individual assembly of certain parts.
- 1B4289 - NUT**: A nut.
- 384008 - LOCKWASHER**: A lock washer.
- L-1032 - LOCK**: A lock.
- 3-1934 - BOLT**: A bolt.
- 384004 - LOCKWASHER**: Another lock washer.
- 7M3239 - LEVER (L.H.)**: A lever assembly on the left.
- 7M3240 - LEVER, (R.H.)**: A lever assembly on the right.
- 1MA300-LINING GROUP**: A group of four lining components.
- DISASSEMBLE & DISASSEMBLE SET OF LININGS & RIVETS FOR ONE BRACE**: Instructions for disassembly.
- 4 - PIN**: Four pins.
- 7M3000 -** Refers to a band assembly.
- 7M3026 - BAND ASSEM.**: A band assembly.
- 2 - ANCHOR ASSEM.**: Two anchor assemblies.
- 7M3703**: A part number.
- 7B0034 - RIVET**: A rivet.
- 34 - LINING**: Thirty-four linings.
- (1) IN EACH ASSEM. INDIVIDUALLY**: A note indicating individual assembly of linings.
- 3 - COTTER PIN**: Three cotter pins.
- 7M3000 - PIN**: A pin.
- (1) IN EACH ASSEM. INDIVIDUALLY**: A note indicating individual assembly.
- 7M3200 - BAND ASSEM.**: A band assembly.
- 3M6030 - L. RIVET**: A rivet.
- (1) IN EACH ASSEM. INDIVIDUALLY**: A note indicating individual assembly.
- 7M3220 - SET SCREW**: A set screw.
- 1D4710 - NUT**: A nut.
- 3P7700 - SPRING**: A spring.
- 5 - PIN**: Five pins.
- 204037 - COTTER PIN**: A cotter pin.
- 5M9009 - FEDAL ASSEM (L.H.)**: A pedal assembly.
- 5M9009 - PEDAL ASSEM (R.H.)**: Another pedal assembly.
- 7B0030 - BEARING**: A bearing.
- (1) IN EACH ASSEM. INDIVIDUALLY**: A note indicating individual assembly.
- 207408 - PLATE**: A plate.
- (1) IN EACH ASSEM. INDIVIDUALLY**: A note indicating individual assembly.
- 1M2028 - WASHER**: A washer.
- 3M4507 - SEAL**: A seal.
- 304029 - COTTER PIN**: Another cotter pin.
- 107-A - PIN**: A pin.
- 304017 - COTTER PIN**: Another cotter pin.
- 0000-A - END**: An end cap.
- S-4608 - SPAT**: A spat.
- 2000-A - NUT**: Another nut.
- 301026 - SHAF**: A shaft.
- 3M400 - LEVER, (L.H.)**: A lever.
- 5M5028 - LEVER, (R.H.)**: Another lever.
- (B)714 - KEY**: A key.
- 000402 - END**: Another end cap.
- S-464 - BOLT**: A bolt.
- 1B4205 - NUT**: Another nut.
- 3B4508 - LOCASHAKER**: A locashaker.
- 7M3029 - LEVER ASSEM (R.H.)**: A lever assembly.
- 7M3030 - LEVER ASSEM (L.H.)**: Another lever assembly.
- 1A1009 - KEY**: Another key.
- 1A0707 - PIN**: A pin.
- (1) IN EACH ASSEM. INDIVIDUALLY**: A note indicating individual assembly.
- 6M0043 - END BOLT**: An end bolt.
- 3B0125 - WASHER**: A washer.
- 3P7700 - SPRING**: Another spring.


BRAKES

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

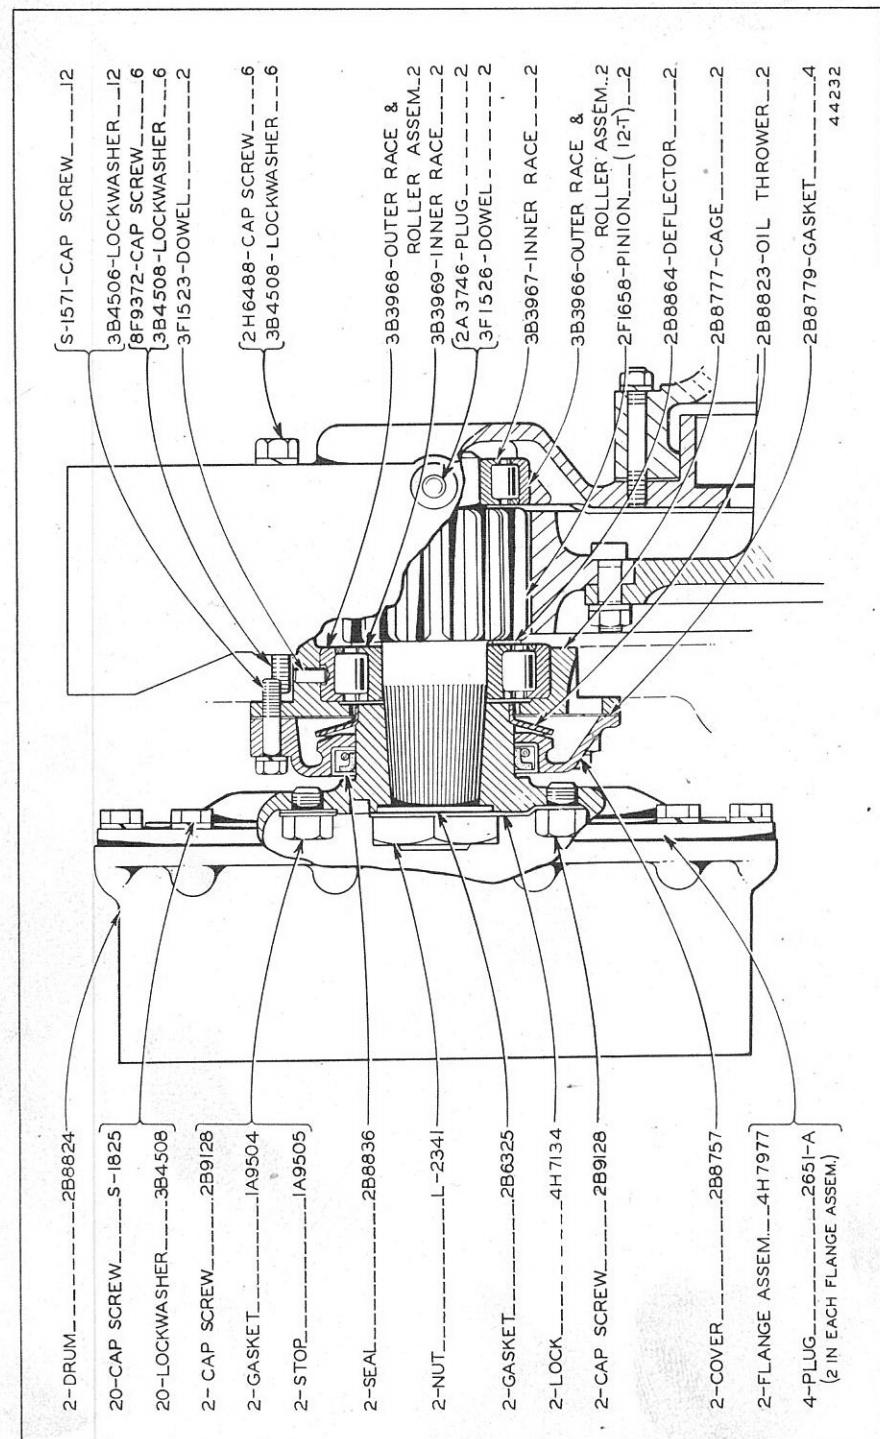


FINAL DRIVE—Part One

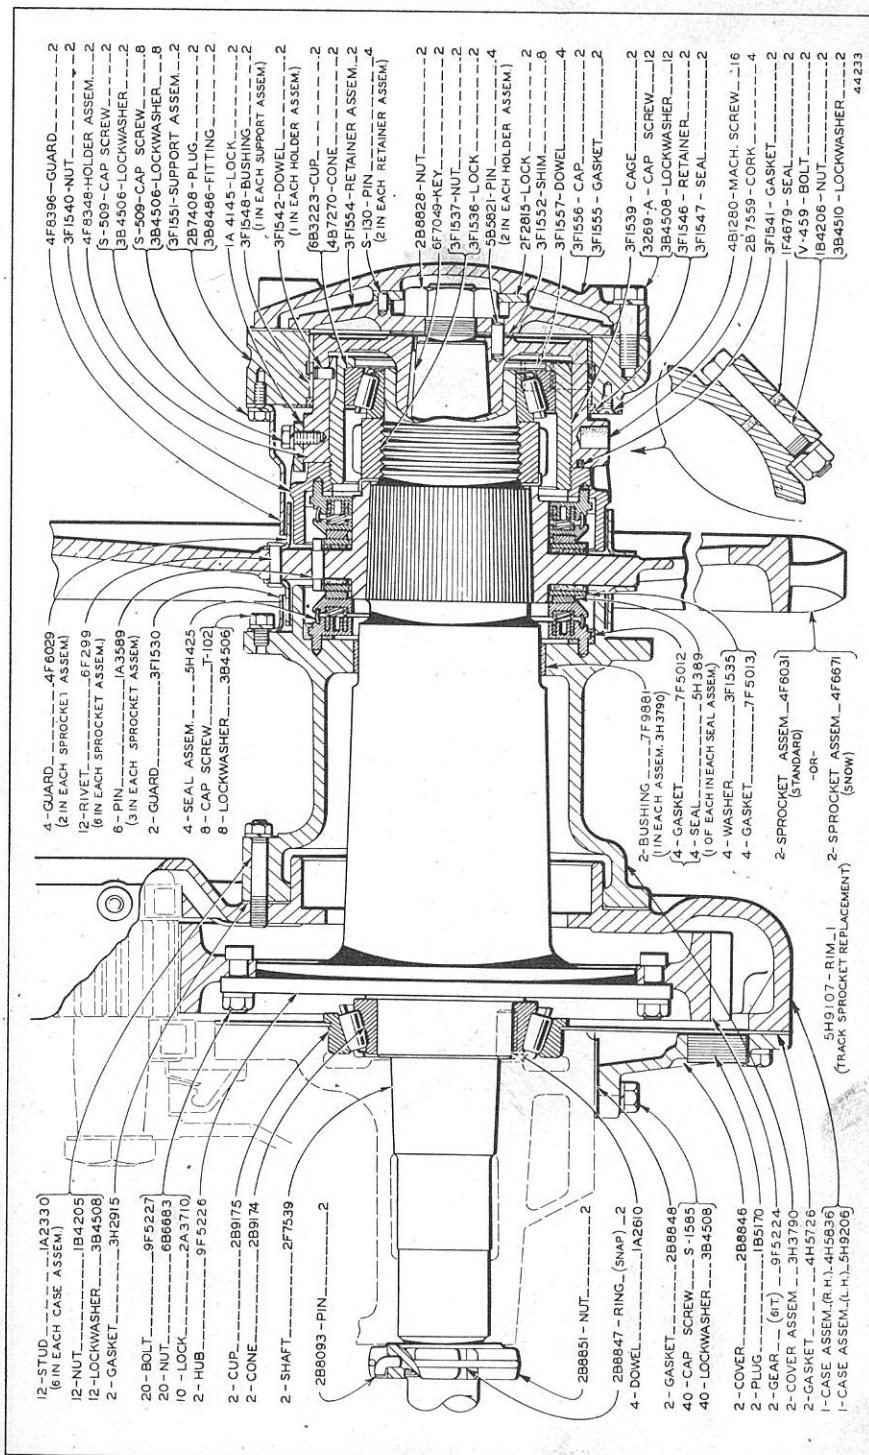


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE


FINAL DRIVE—Part Two

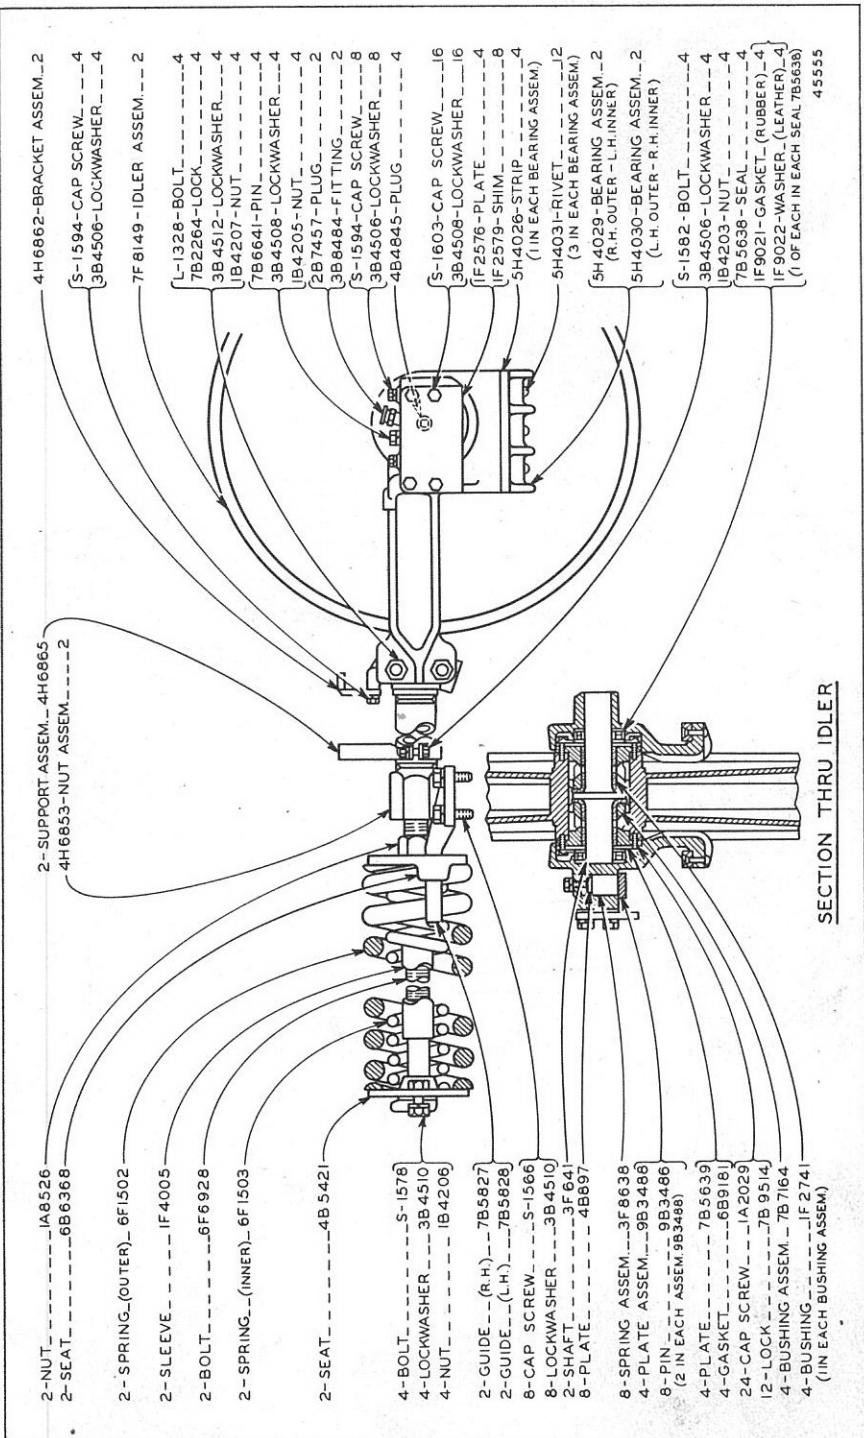


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

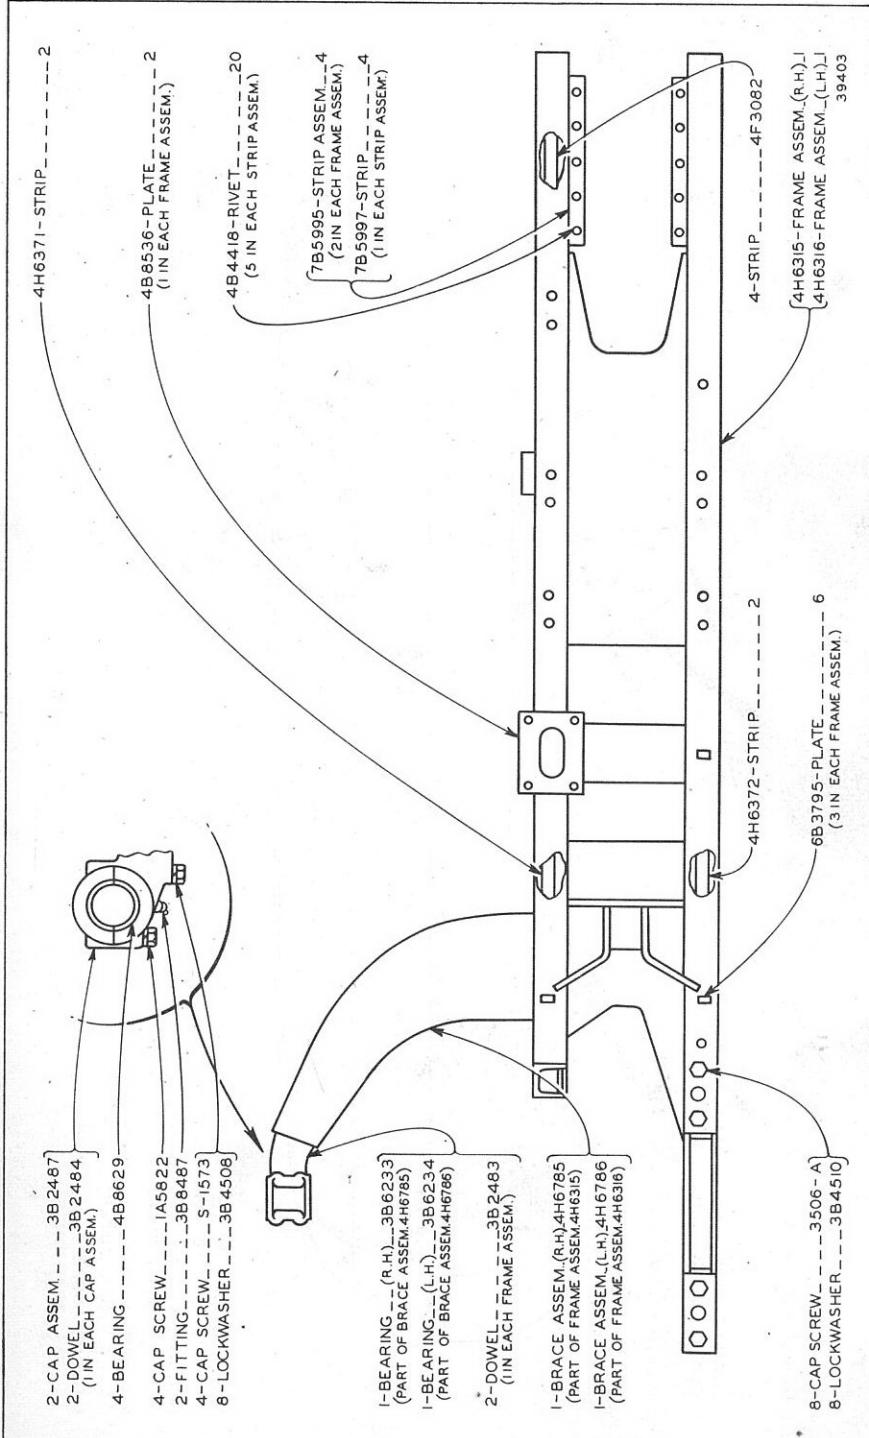

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

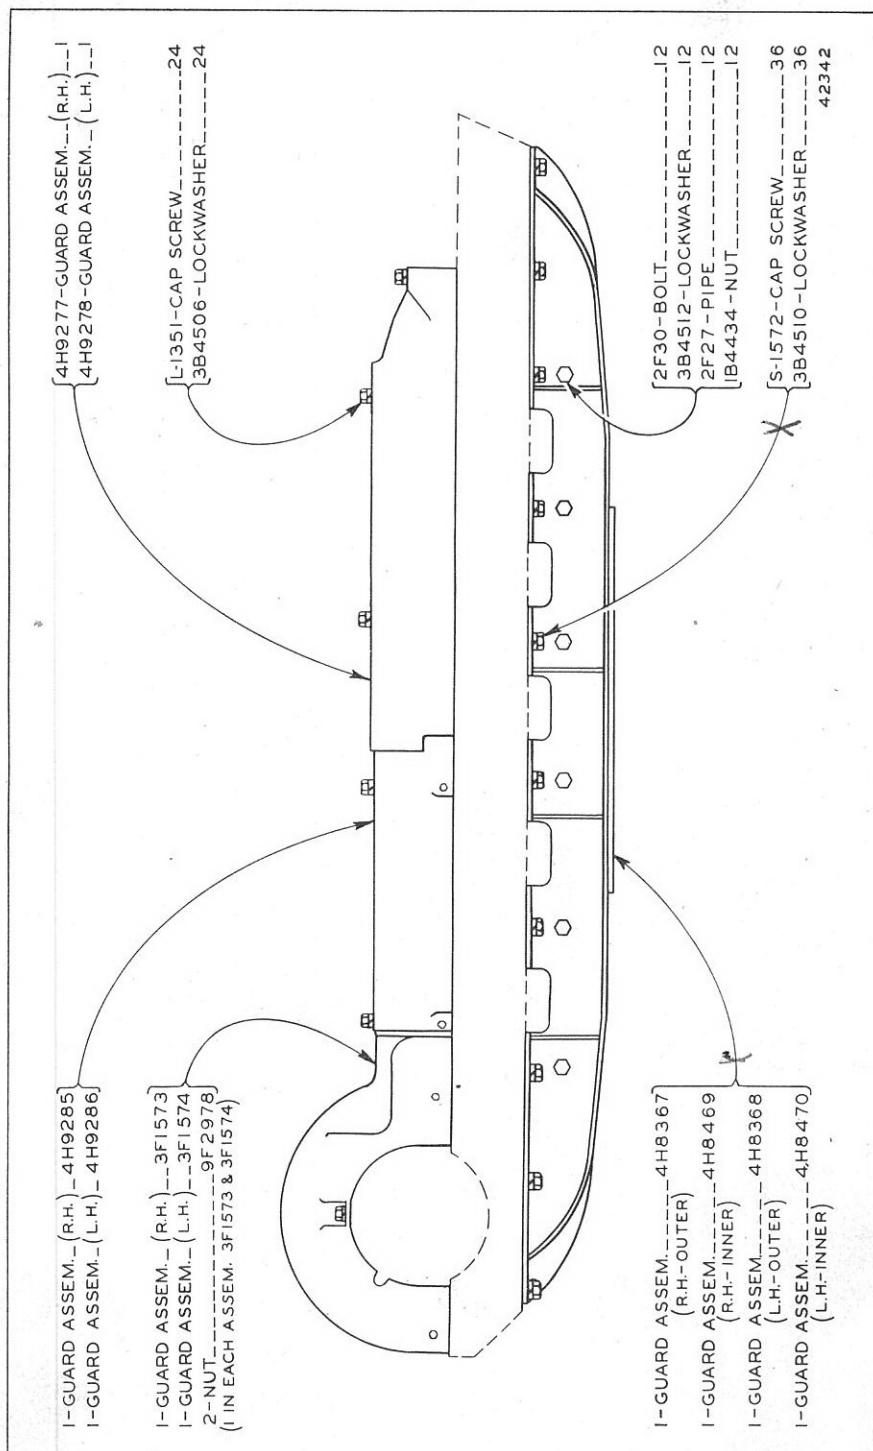


TRACK ROLLER FRAME GUARD

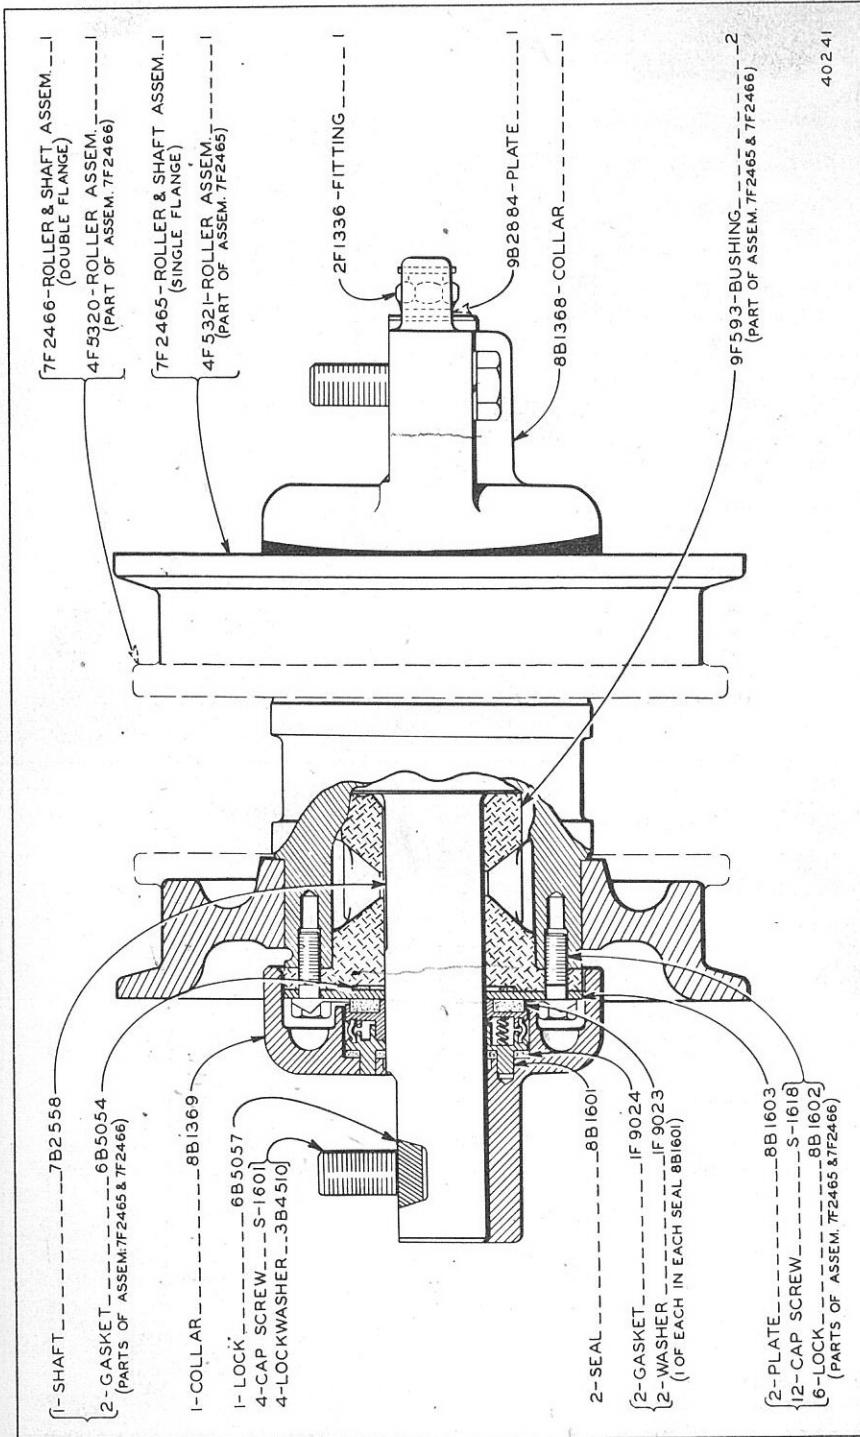



ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

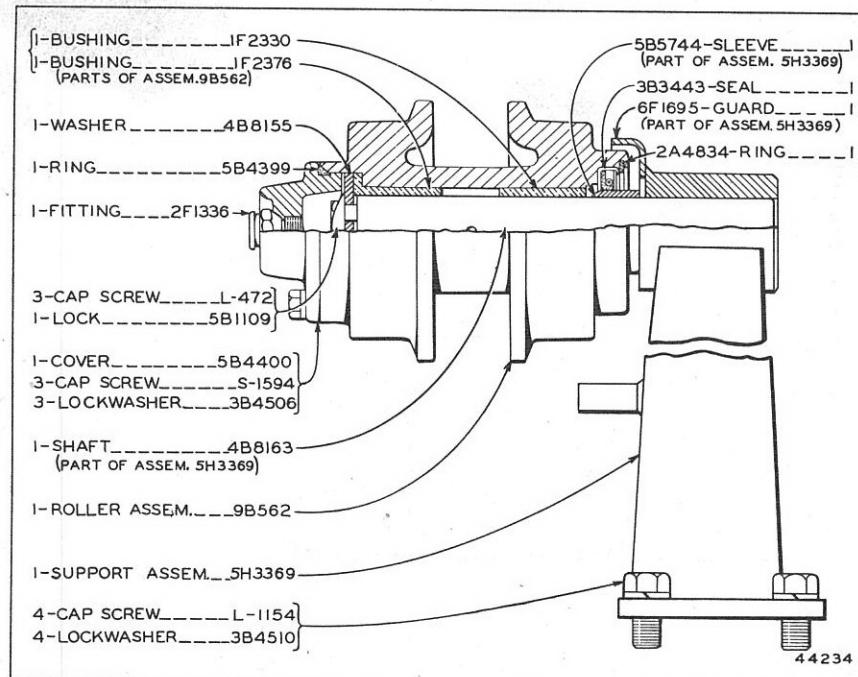


IF3648 TRACK CARRIER ROLLER GROUP (2 Groups Required)

Serial No. 12A1 to 12A1711 inclusive

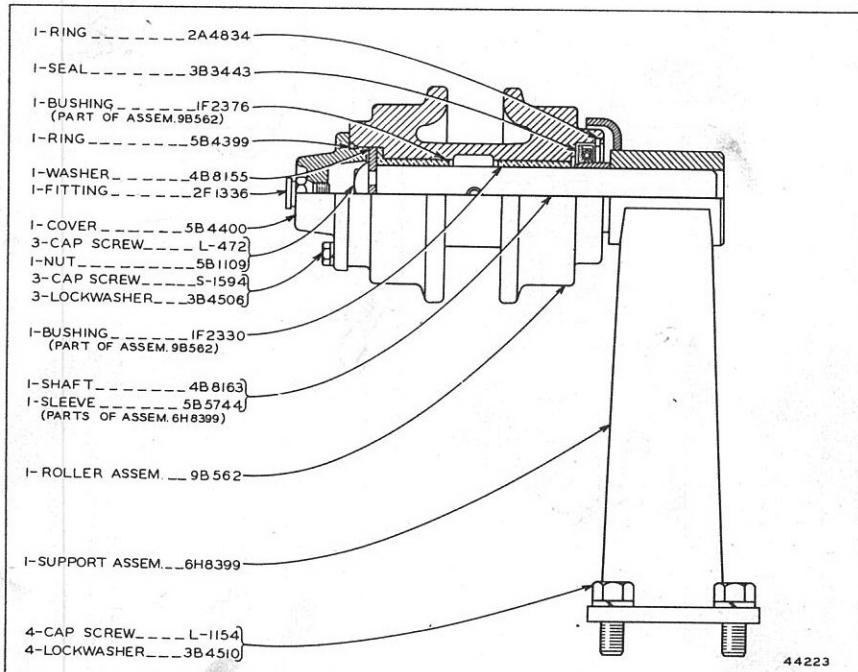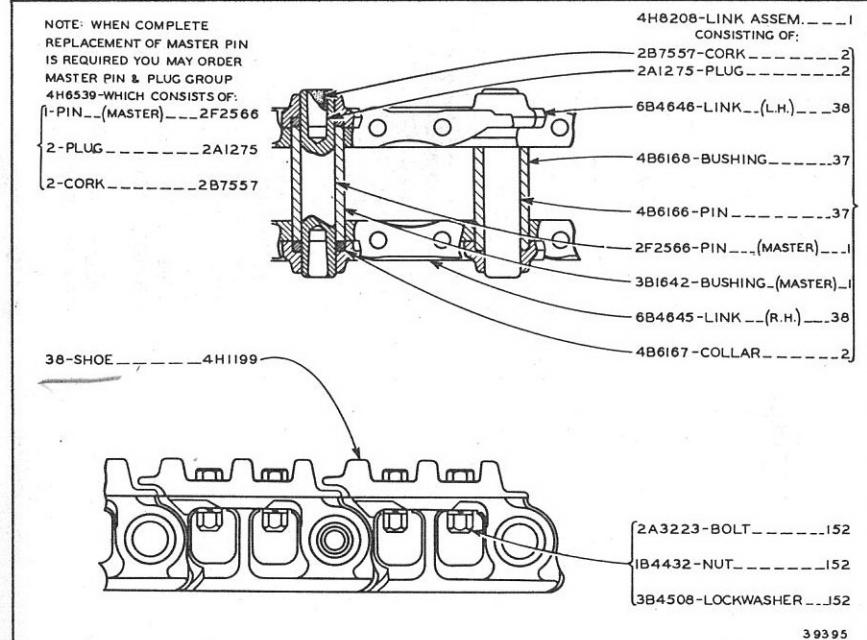6H8400 TRACK CARRIER ROLLER GROUP (2 Groups Required)
Effective with Serial No. 12A1712


4H8209 TRACK GROUP—15" Triple Grouser Shoe (2 Groups Required)

Note: 5H2208 Track Pin and Bushing Group, consisting of a complete set of Pins and Bushings, is available
Refer also to Page 146 for special parts

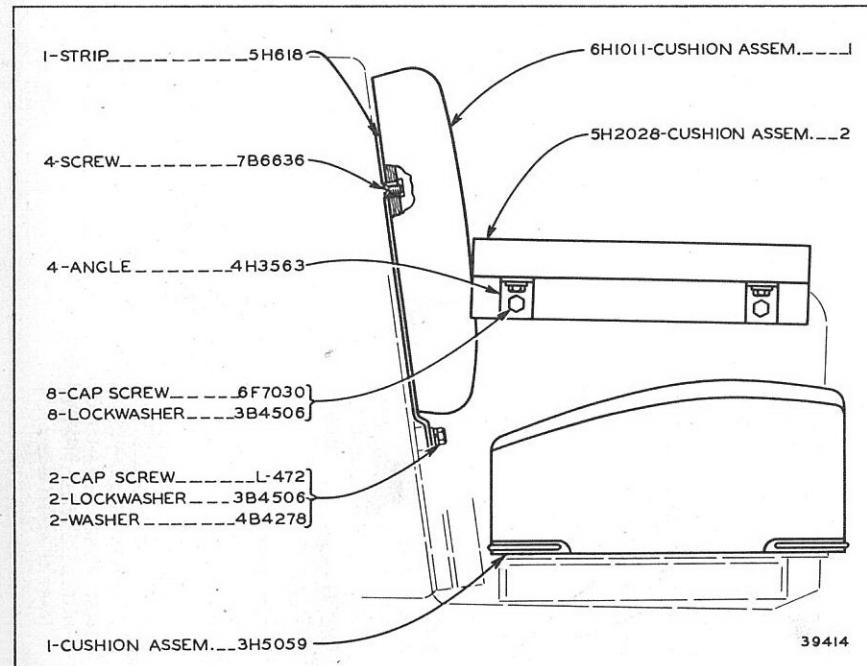


SEAT CUSHIONS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

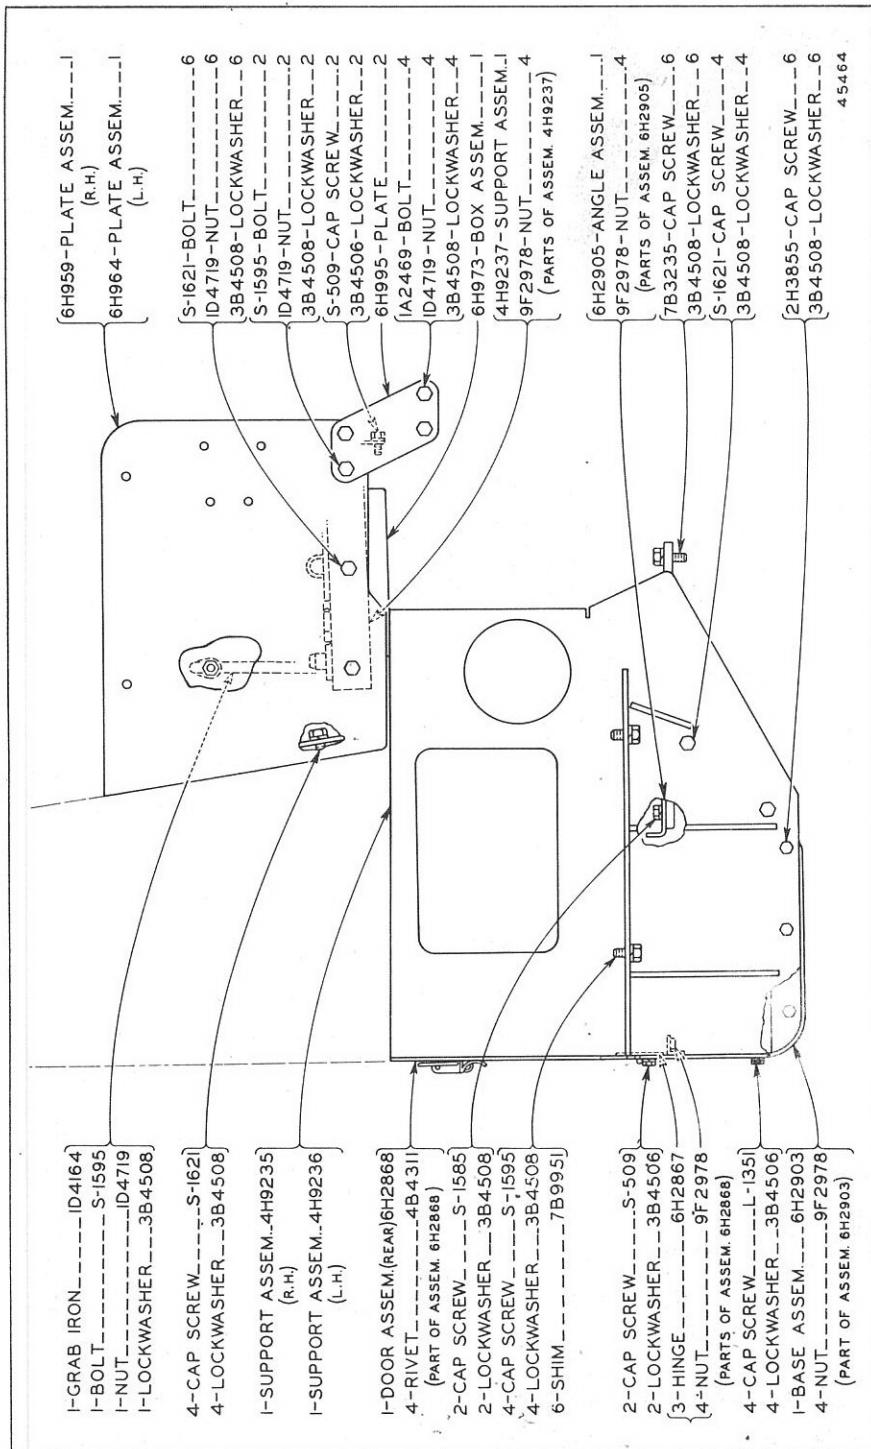


FUEL TANK AND SEAT SUPPORT

Serial No. 12A1 to 12A1196 inclusive

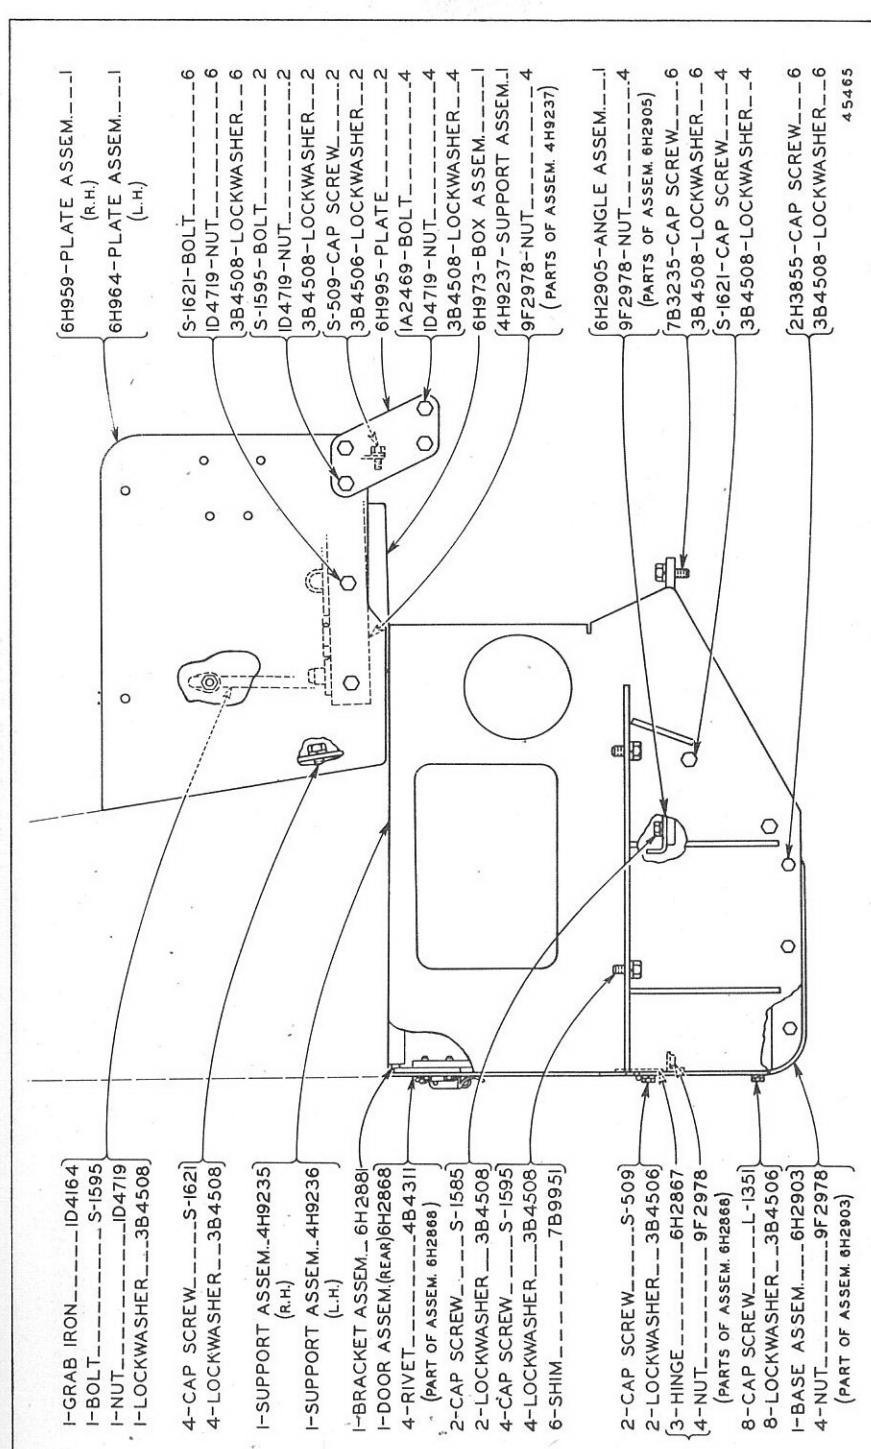


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

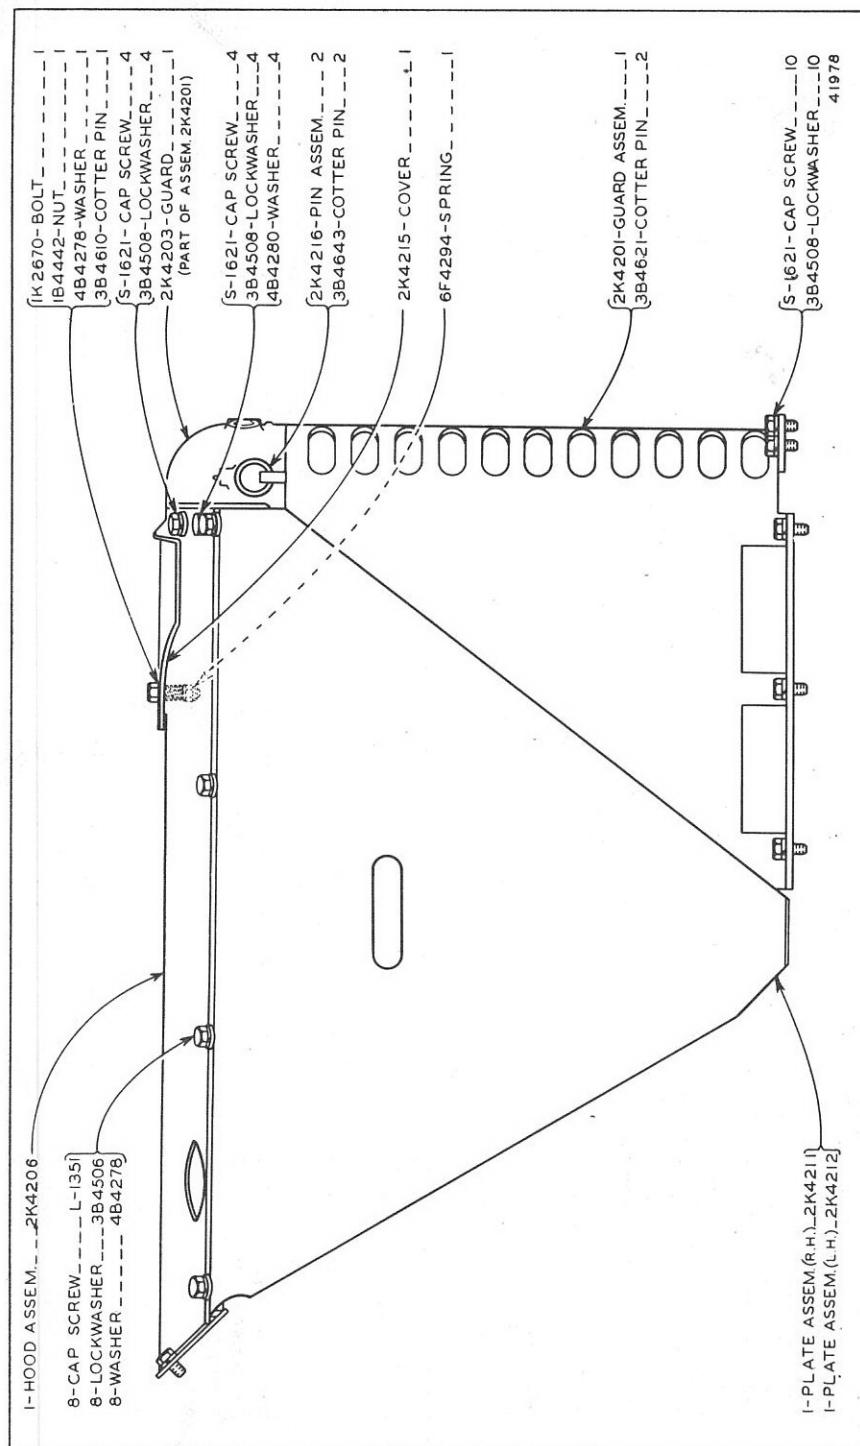


HOOD AND GUARD

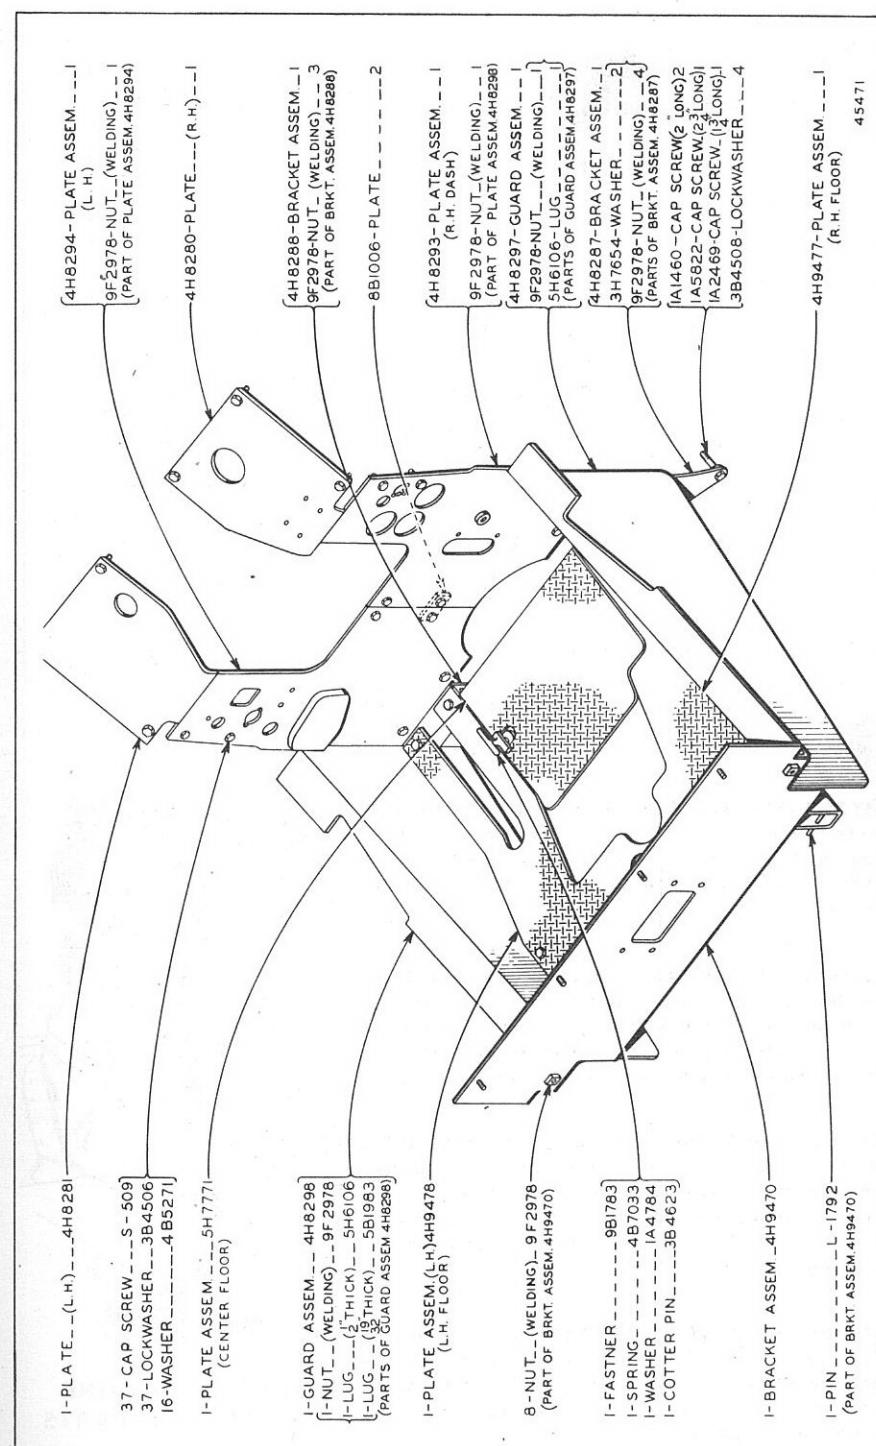

DASH AND FLOOR PLATES

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

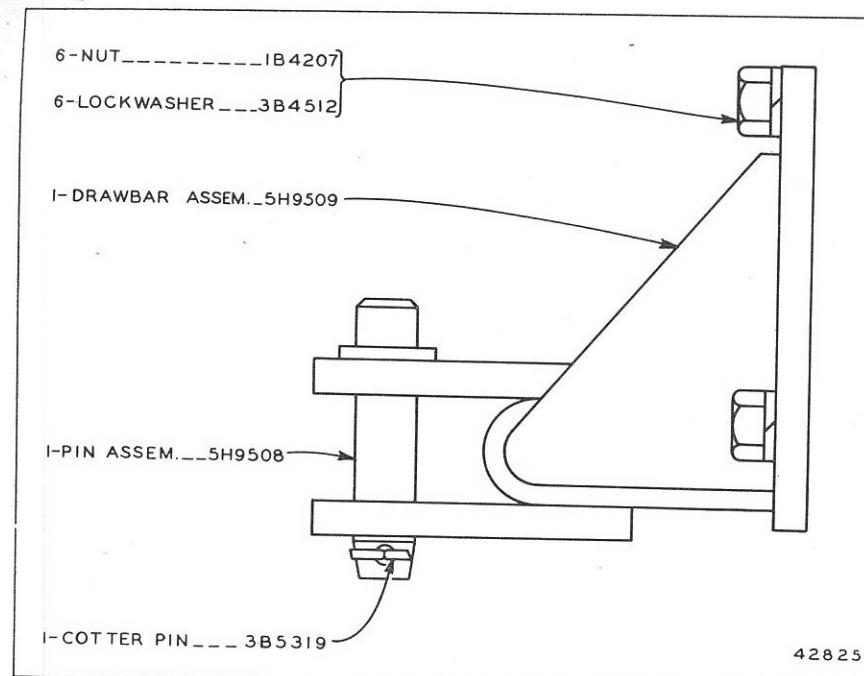

4H8404 DRAWBAR GROUP

GET THE RIGHT PARTS THE FIRST TIME — Parts service from your Caterpillar Dealer is fast and accurate. You save time and you save money by getting the right parts for your equipment without unnecessary delays.




**SPECIFY GENUINE
CATERPILLAR PARTS**


PROCUREZ-VOUS TOUT DE SUITE LA PIECE QU'IL FAUT — Le concessionnaire Caterpillar vous fournira exactement la pièce qu'il vous faut sans perte de temps. Vous pourrez faire la réparation rapidement et sans tâtonnements. Vous réaliserez ainsi des économies appréciables.

OBTENHA LOGO AS PEÇAS CERTAS — O serviço de peças de substituição do distribuidor Caterpillar é rápido e exato. Você economiza tempo e dinheiro obtendo as peças certas para o seu equipamento, sem atrasos desnecessários.


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

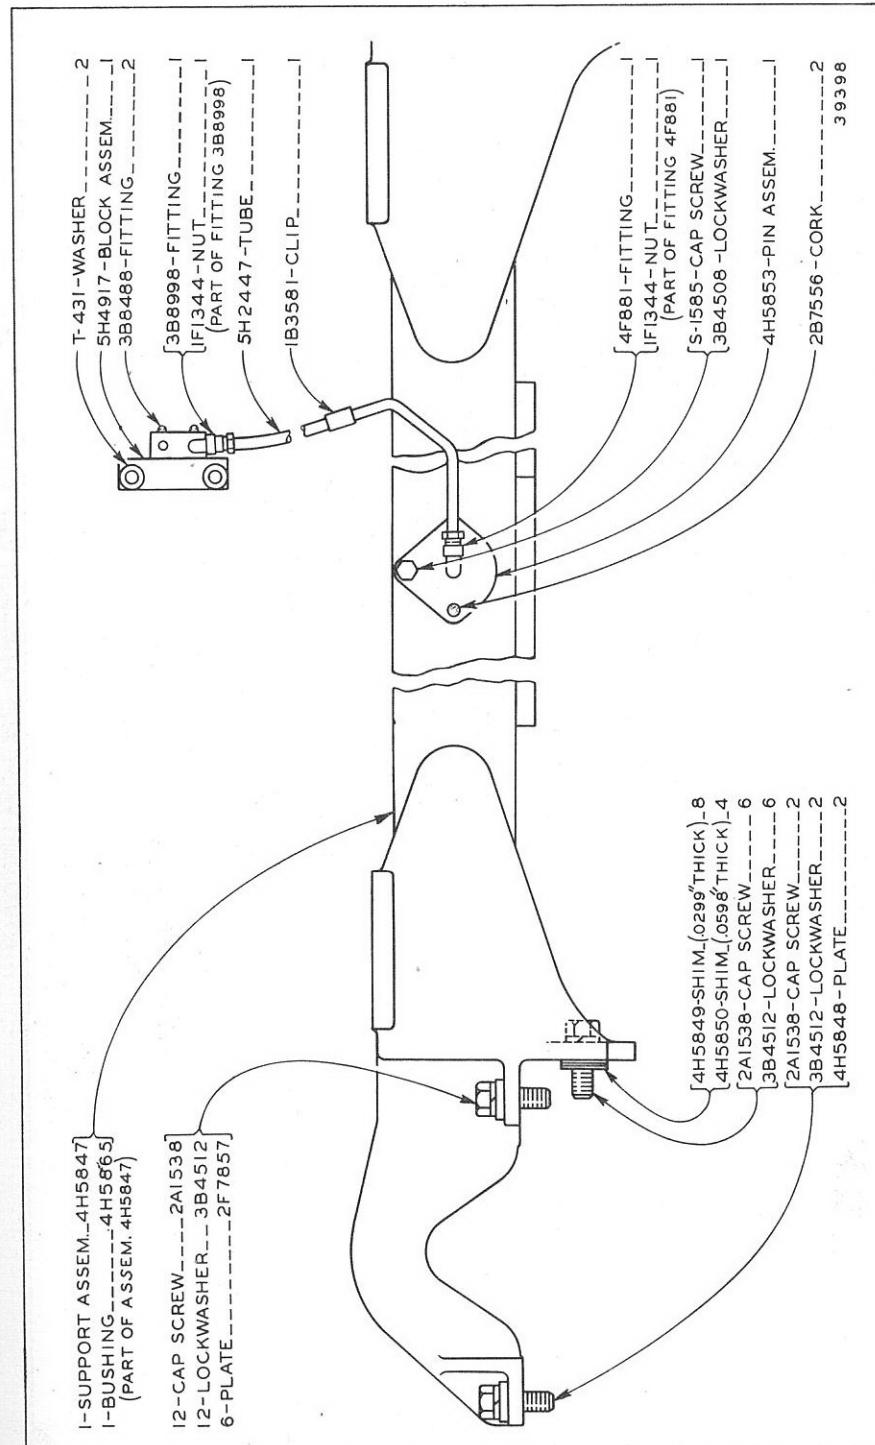


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

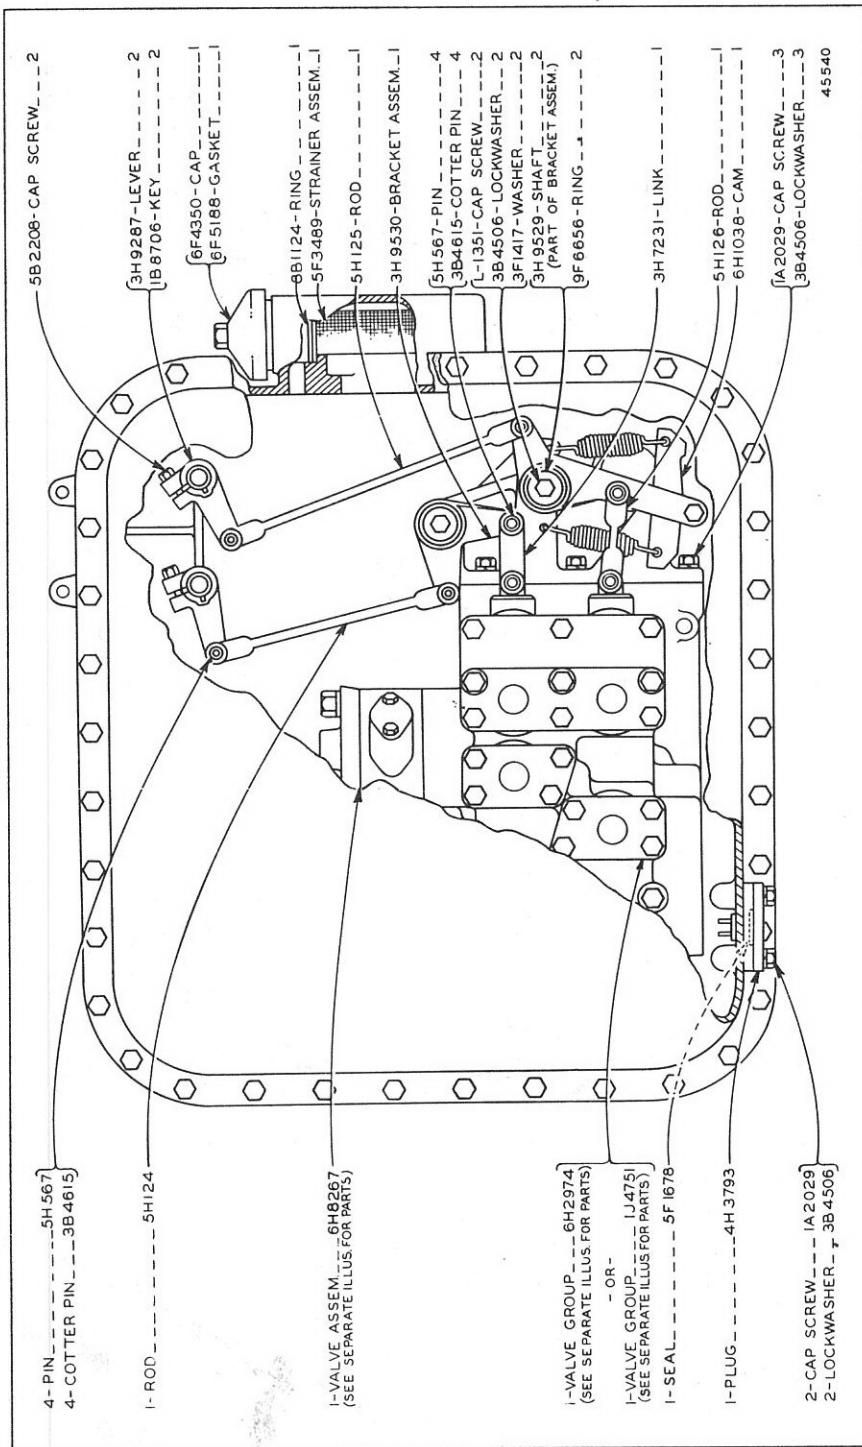

HYDRAULIC VALVE AND TANK—Front View
Serial No. 12A1 to 12A1965 inclusive
Relief Valve Assembly parts are shown on Pages 98, 100 and 101

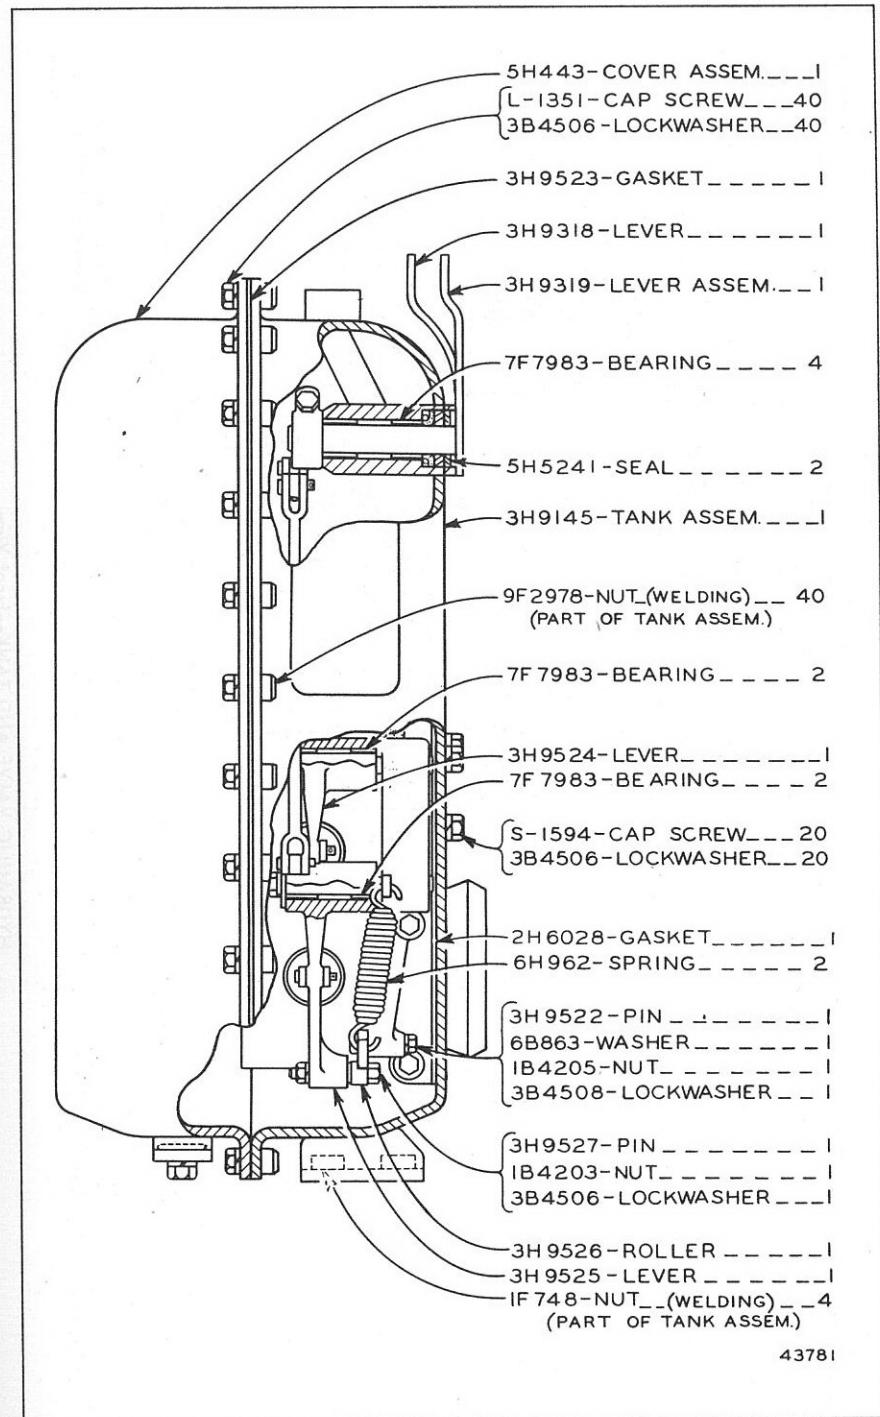


HYDRAULIC VALVE AND TANK—End View
Serial No. 12A1 to 12A1965 inclusive

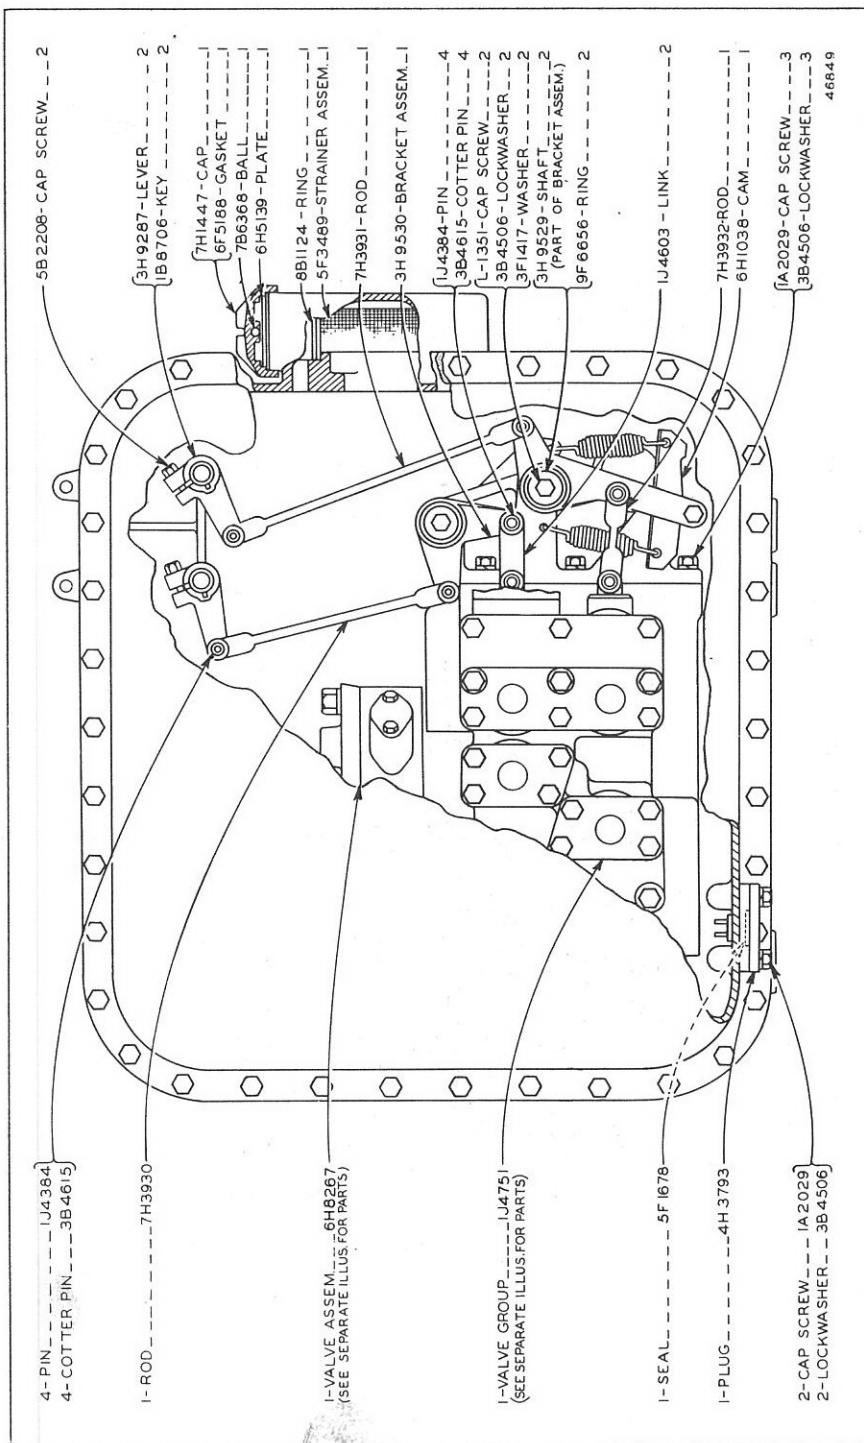

HYDRAULIC VALVE AND TANK—Front View


Serial No. 12A1966 to 12A2161 inclusive

I4751 Control Valve Group and 6H8267 Relief Valve Assembly parts are shown on Pages 98, and 101

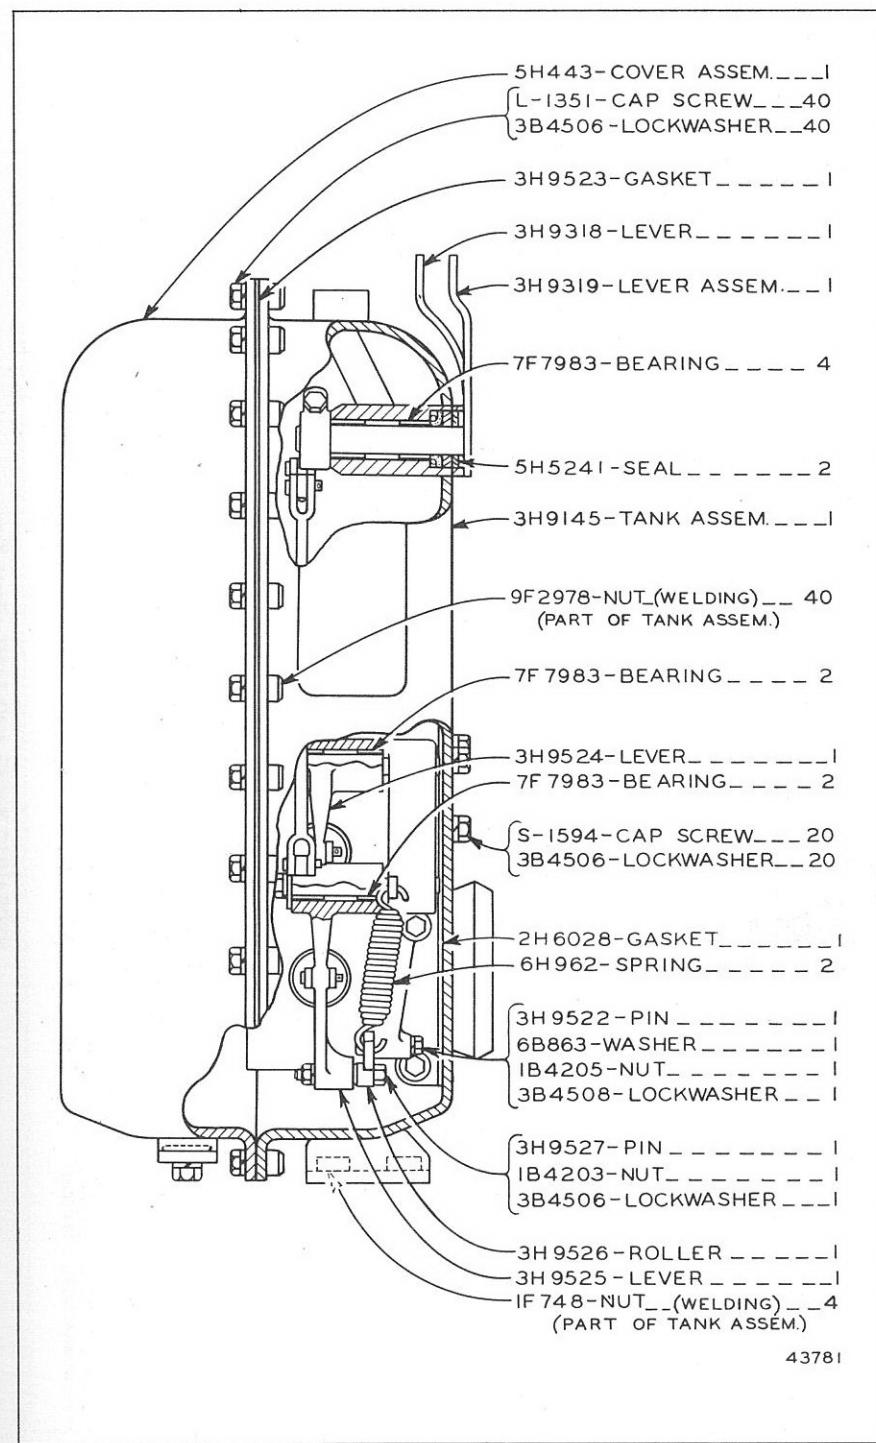

43781


HYDRAULIC VALVE AND TANK—End View
Serial No. 12A1966 to 12A2161 inclusive

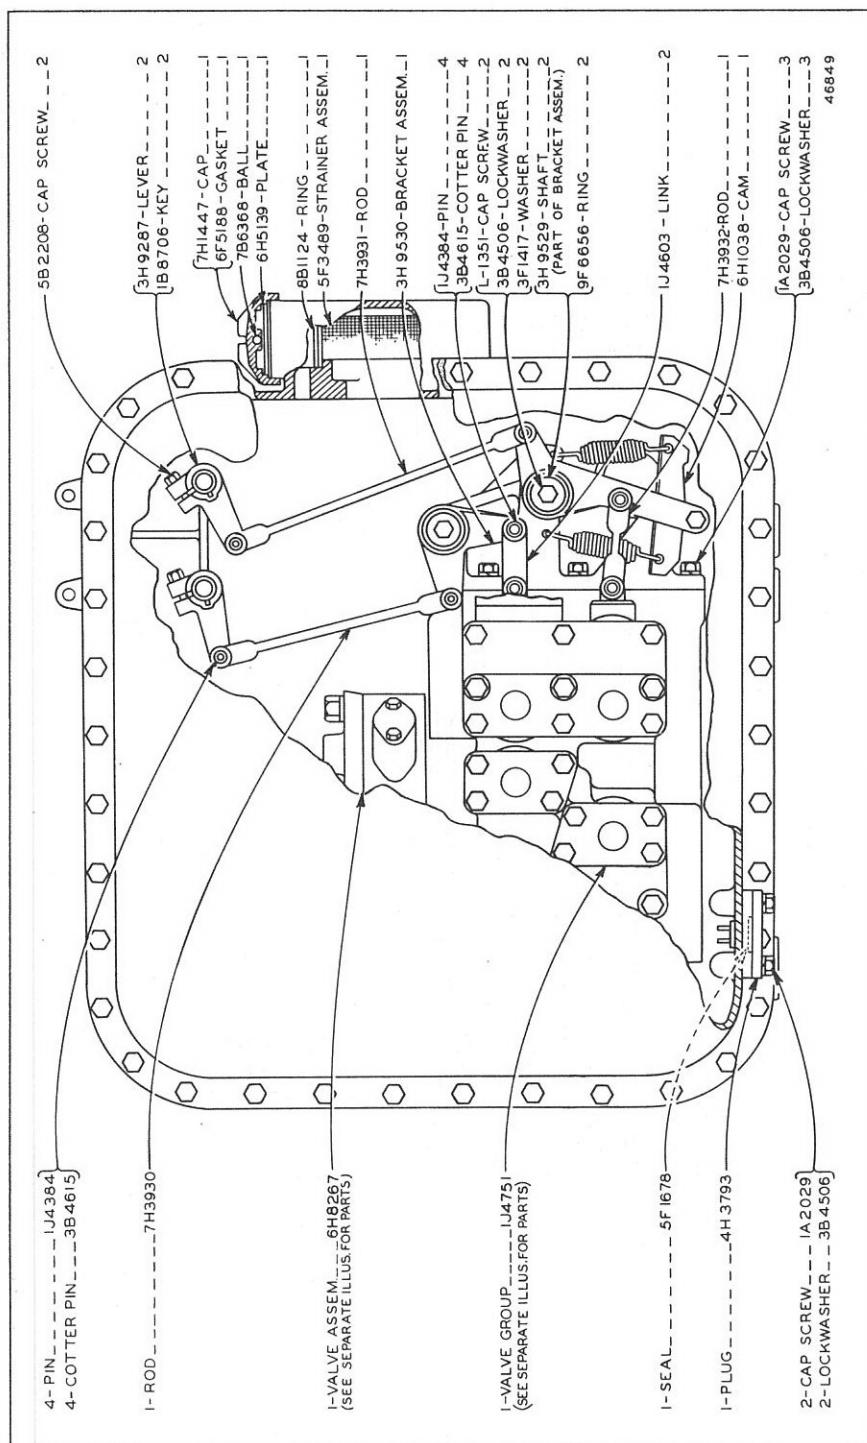


HYDRAULIC VALVE AND TANK—Front View

Serial No. 12A2162 to 12A2241 inclusive


IJ4751 Control Valve Group and 6H8267 Relief Valve Assembly parts are shown on Pages 98, and 101

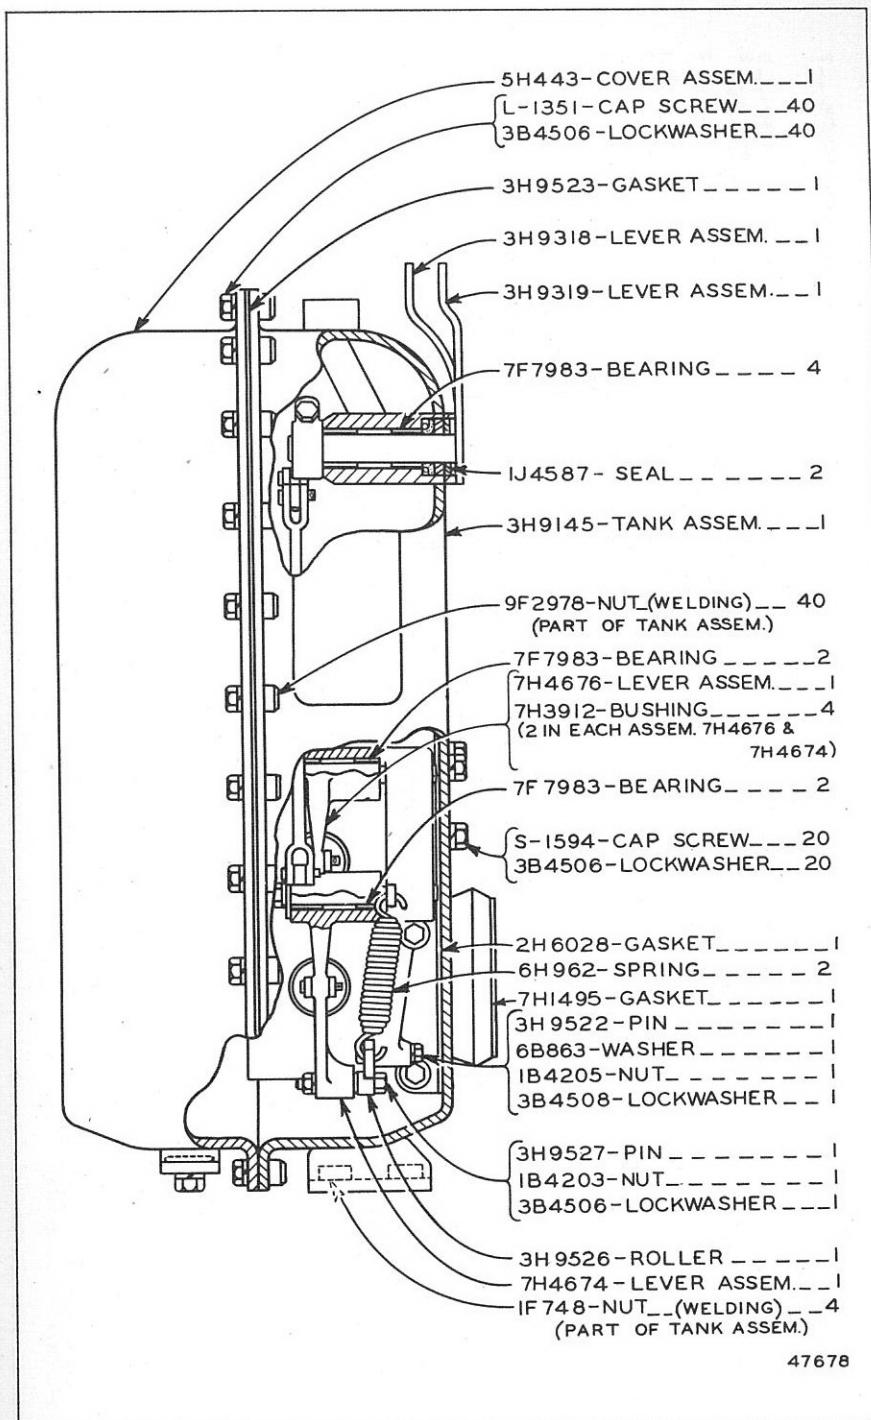HYDRAULIC VALVE AND TANK—End View
Serial No. 12A2162 to 12A2241 inclusive

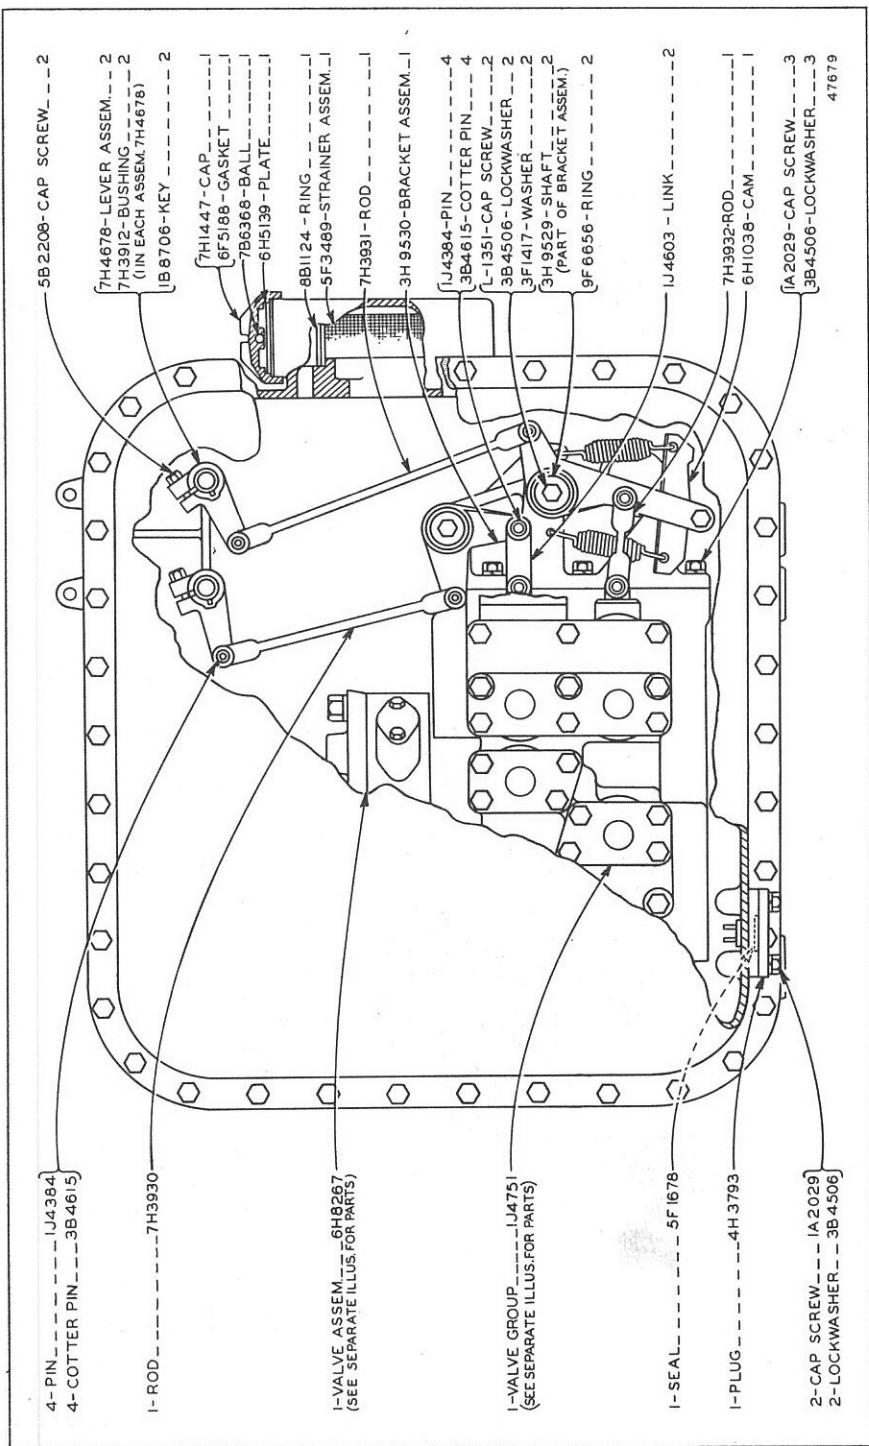

HYDRAULIC VALVE AND TANK—Front View
Effective with Serial No. 12A2242
Relief Valve Assembly parts are shown on Pages 98, 99 and 101

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

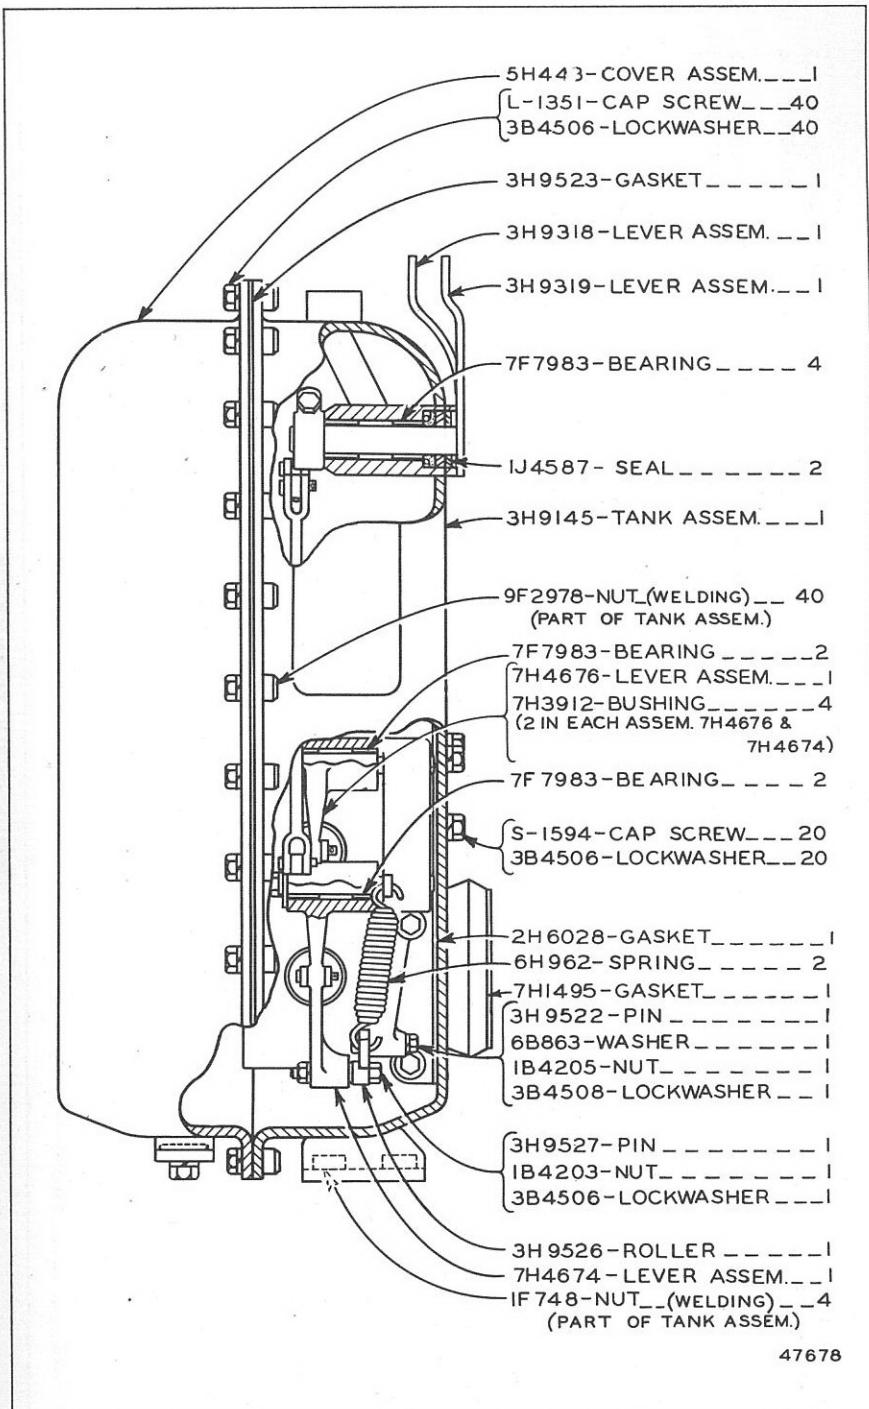

47678

HYDRAULIC VALVE AND TANK—End View
Effective with Serial No. 12A2242

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE