

TC-37A
MCCORMICK

(AND MCCORMICK-DEERING)



PARTS CATALOG

FARMALL

Cub

TRACTOR

INTERNATIONAL HARVESTER COMPANY

180 North Michigan Avenue

Chicago 1, Illinois, U.S.A.

The Importance of ADEQUATE PARTS and SERVICE


• •

The wise purchaser of a new machine gives consideration to the following factors:

- 1: Original quality*
- 2: Availability of service parts*
- 3: Availability of adequate service facilities*


In many cases the machine becomes the only means of performing certain tasks that must be done in a limited period of time. Wear and even breakage of parts are to be expected due to operating conditions. However, the user can still be assured of getting his work done on time if service parts and adequate service facilities are available.

Foresighted International Harvester dealers make every effort to provide good service and maintain a completely adequate stock of service parts.

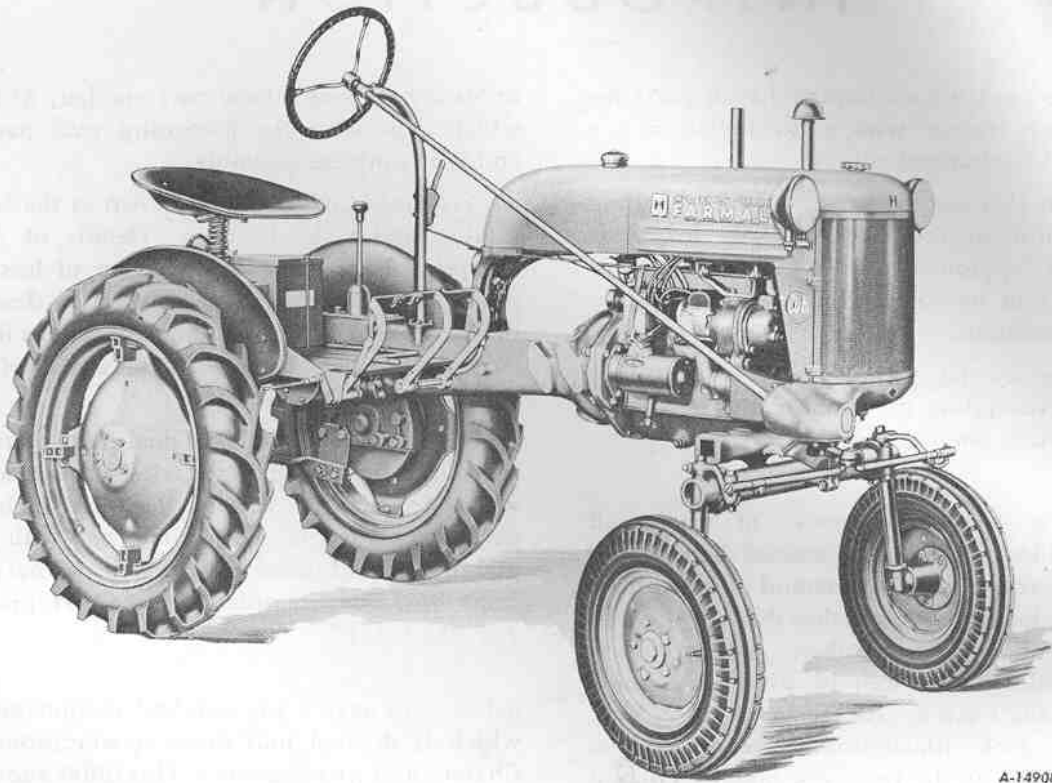


A-14908

Right side view of the Farmall Cub tractor. The adjustable front axle, electric starting, and lighting shown are special features.

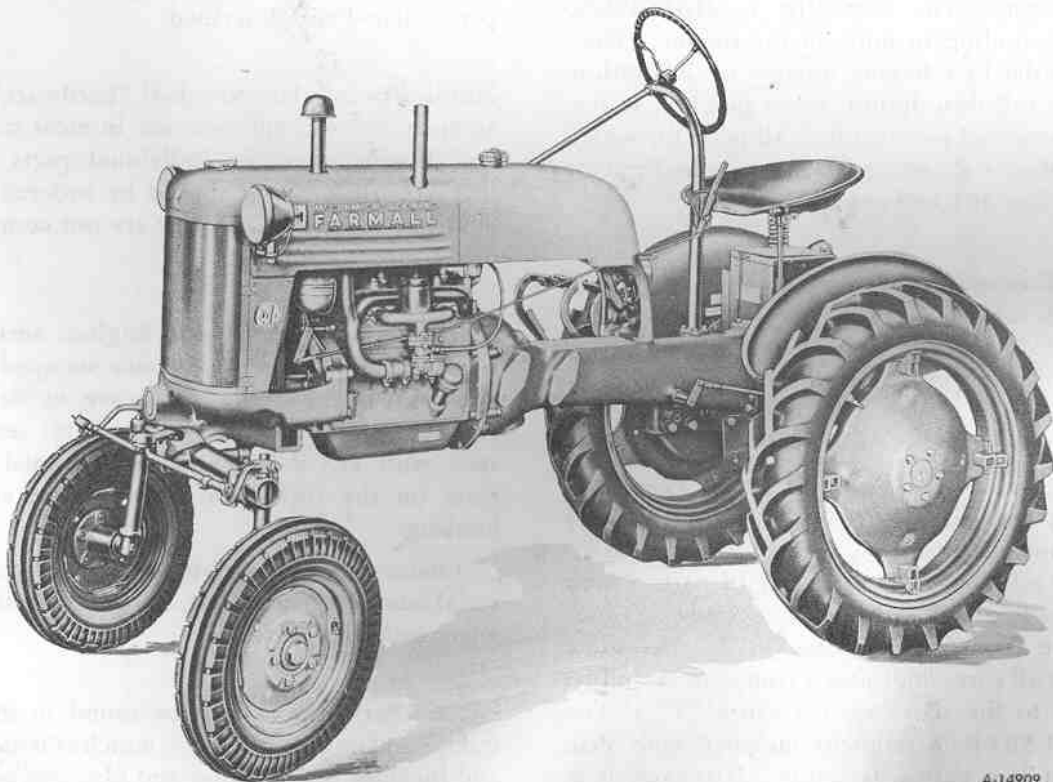

A-14909


Left side view of the Farmall Cub tractor.

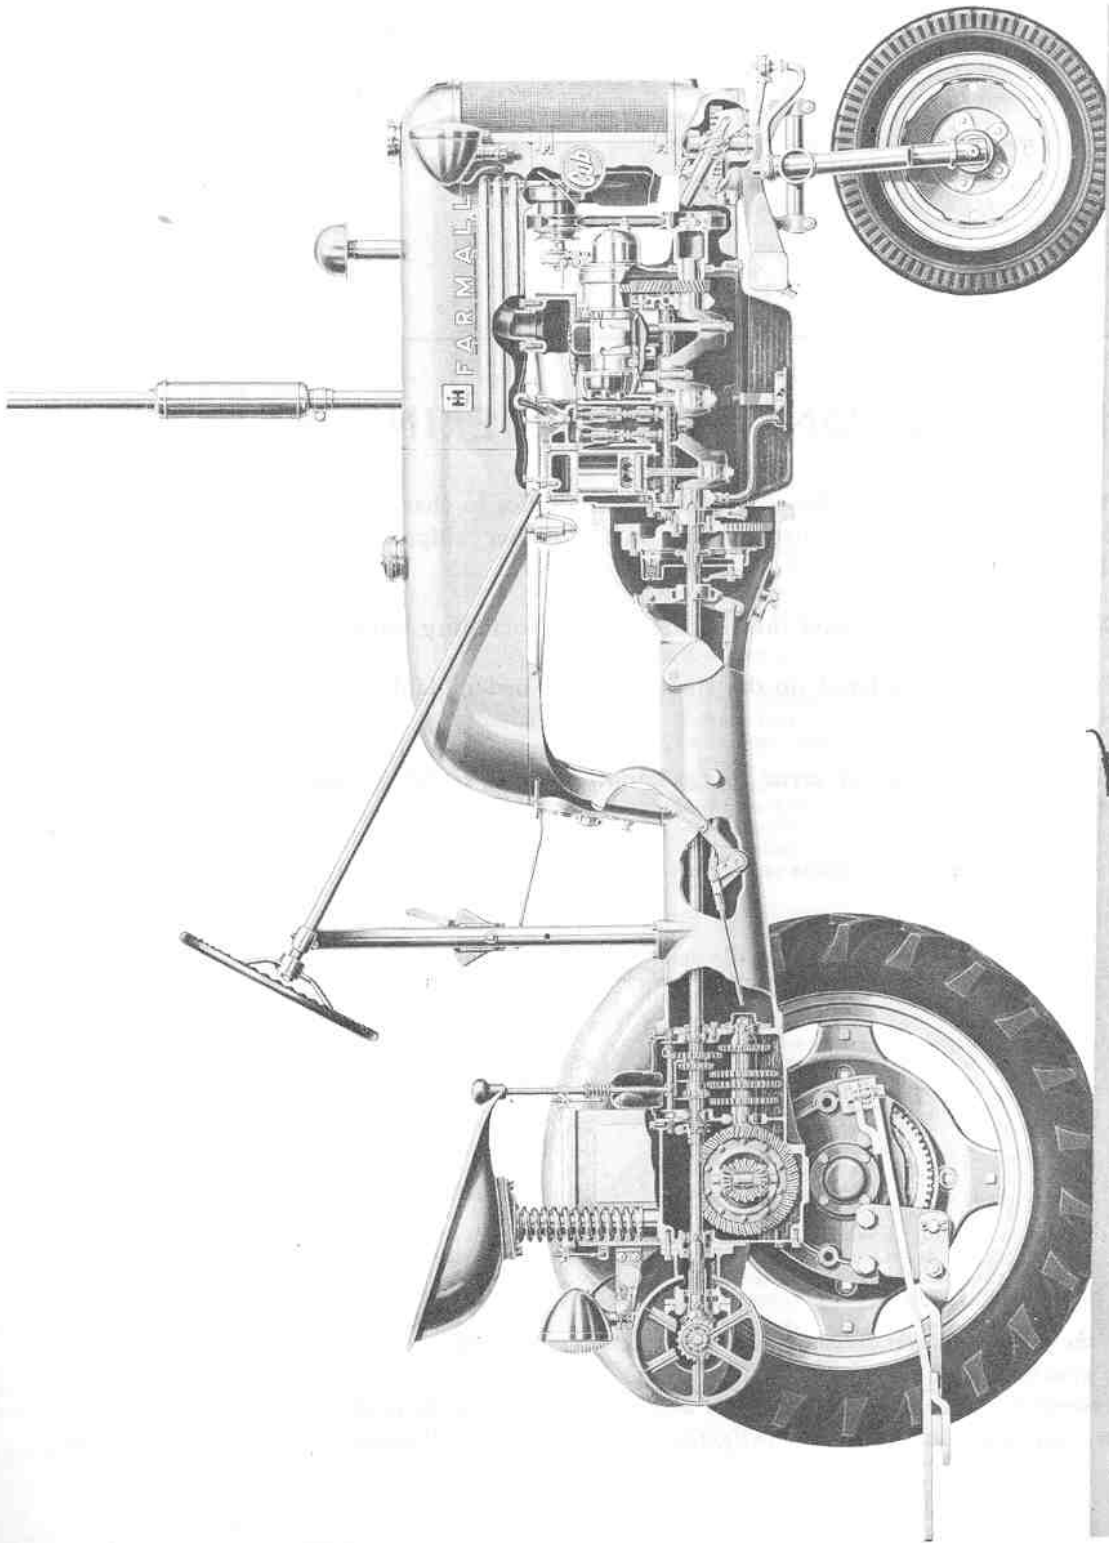

B-3078

Cut-away view of the Farmall Cub tractor showing the internal working parts. The belt pulley, power take-off, exhaust muffler, swinging drawbar, electric starting, and lighting shown in this illustration are special features.

ENGINE

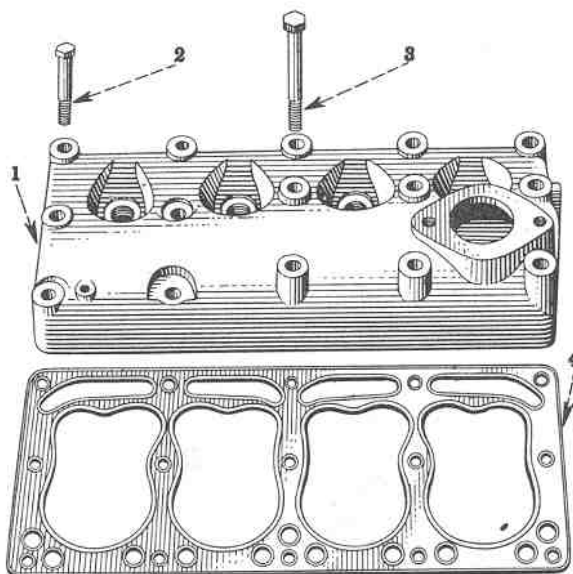


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

[illegible]




B-3008

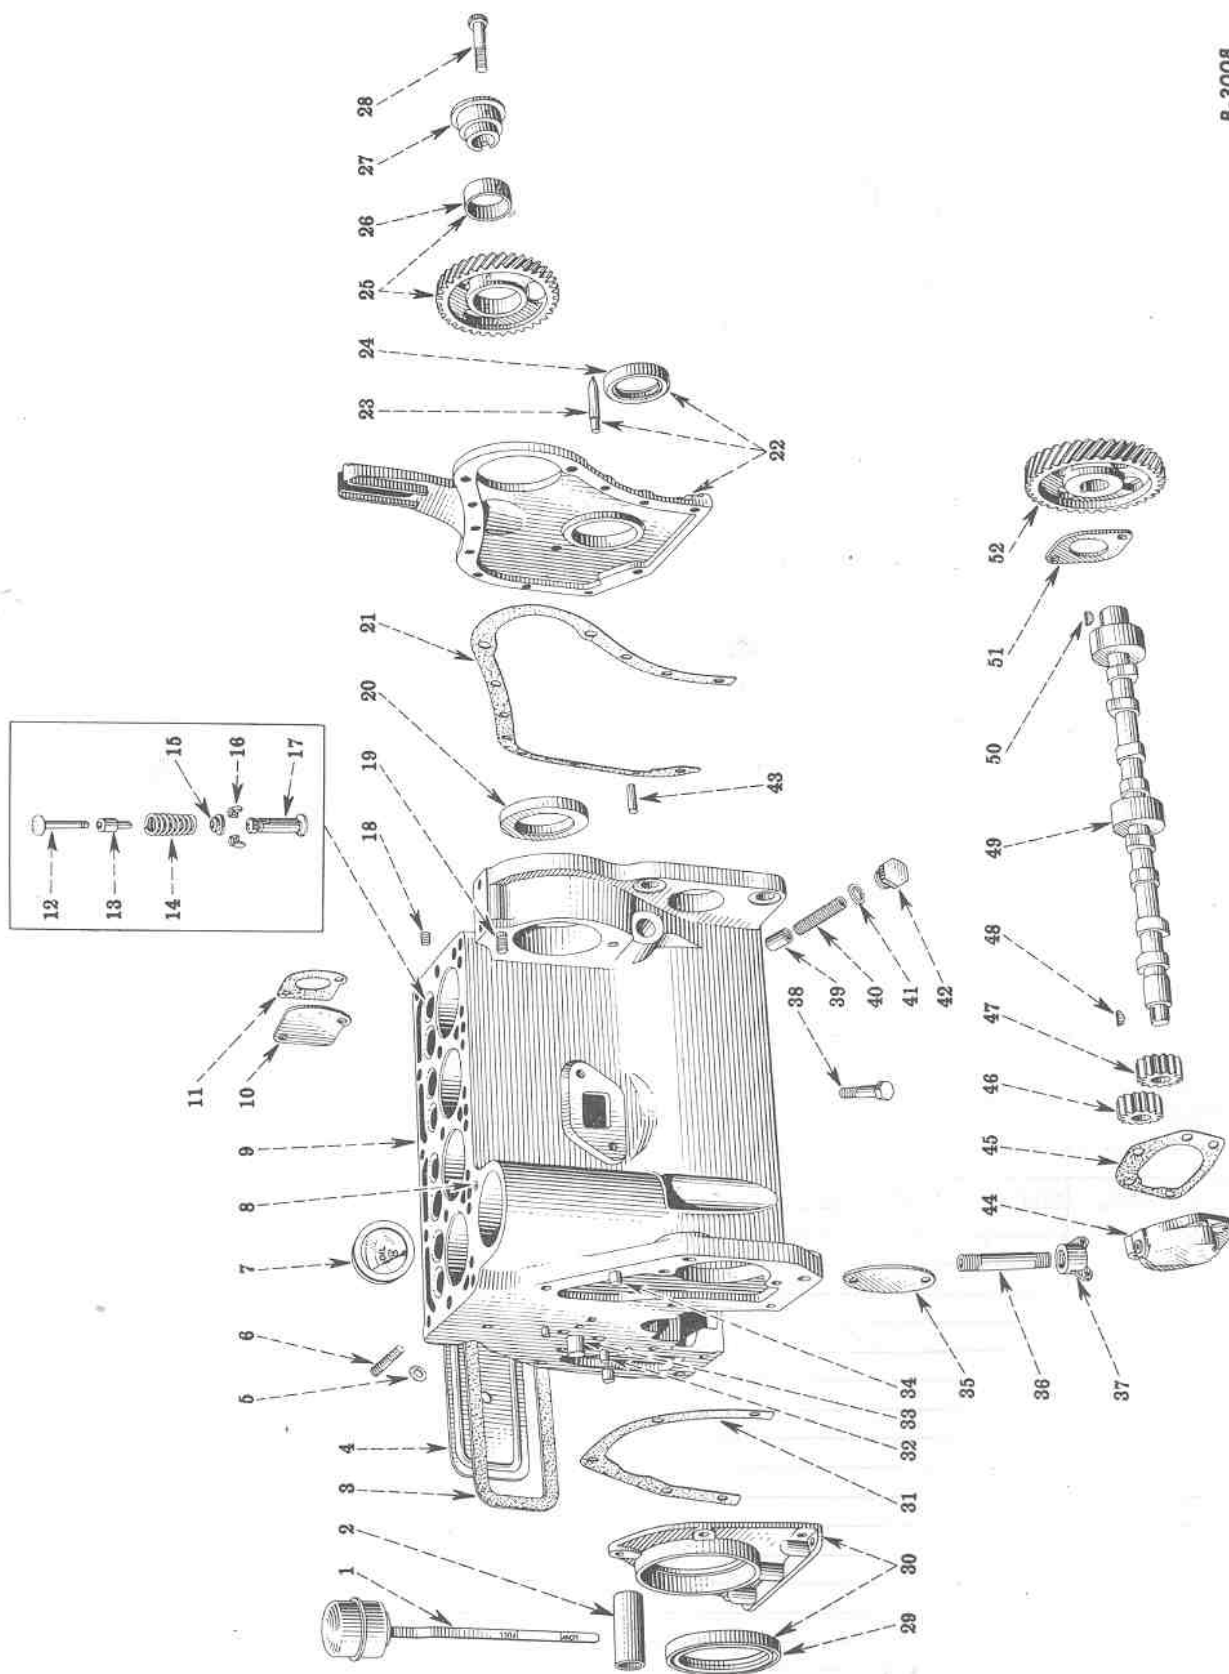

CRANKCASE, FRONT COVER, OIL PUMP BODY, CAMSHAFT AND RELATED PARTS

Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

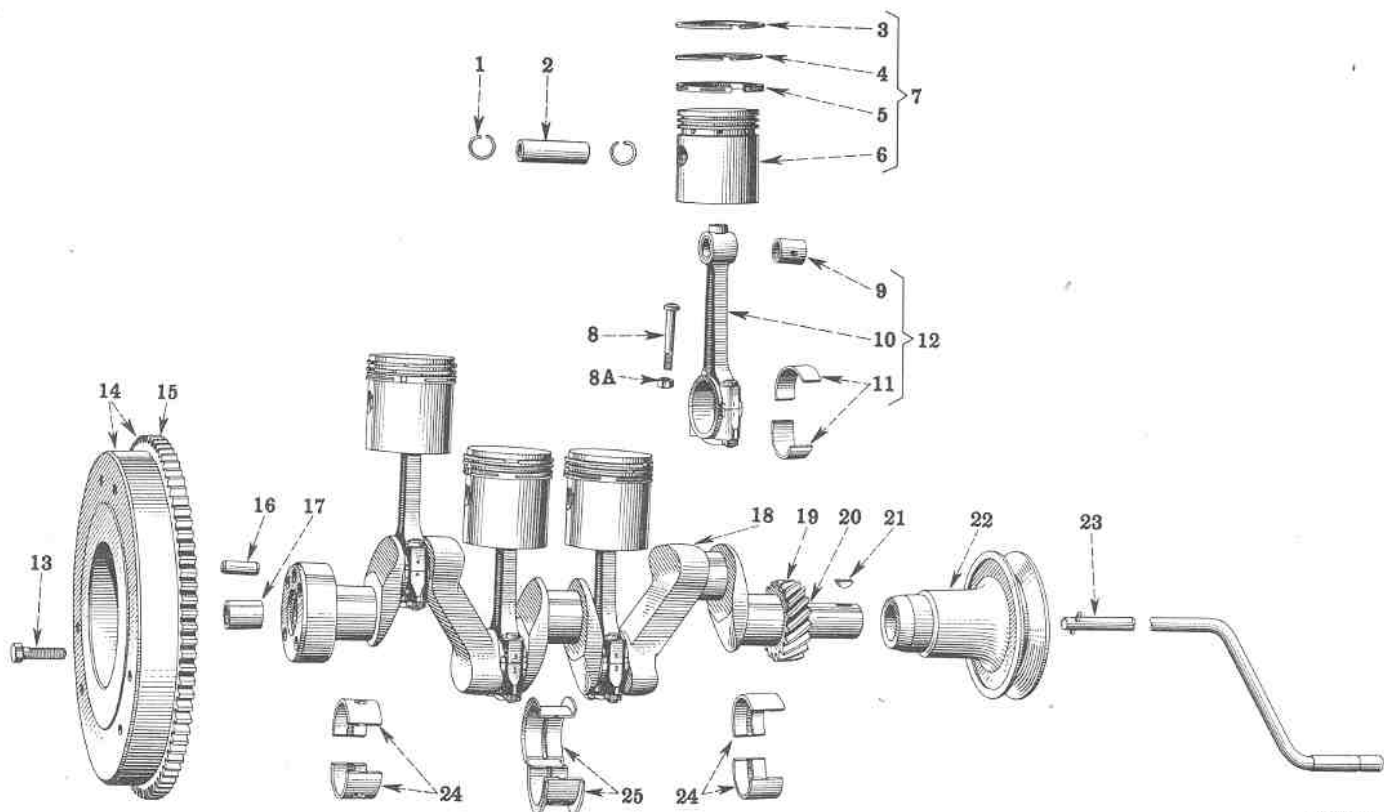


B-3009 A

Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

CRANKSHAFT AND RELATED PARTS, CONNECTING RODS, PISTONS AND STARTING CRANK

1	251 242 R1	PISTON PIN RETAINER	8
2	251 241 R1	PISTON PIN (STANDARD)	4
2	352 084 R1	PISTON PIN (.005" OVERSIZE)	4
3	251 243 R1	PISTON RING, 3/32" (COMPRESSION, PLAIN)	4
4	251 244 R1	PISTON RING, 3/32" (COMPRESSION)	4
5	251 245 R1	PISTON RING, 3/16" (OIL REGULATING)	4
6	251 240 R1	PISTON (STANDARD) (ORDER 251 250 R91)	4
6	352 182 R1	PISTON (.020" OVERSIZE)	4
7	251 250 R91	PISTON, COMPLETE (STANDARD)	4
7	352 183 R91	PISTON PACKAGE (.020" OVERSIZE)	1
8	251 249 R12	CONNECTING ROD BOLT WITH NUT, 353 791 R1	8
	145 003	HEX NUT, 5/16" - 24 N.F. (THIN) (ORDER 353 791 R1)	8
8A	353 791 R1	CONNECTING ROD BOLT NUT, 5/16" N.F.	8
9	251 247 R1	PISTON PIN BUSHING	4

ENGINE

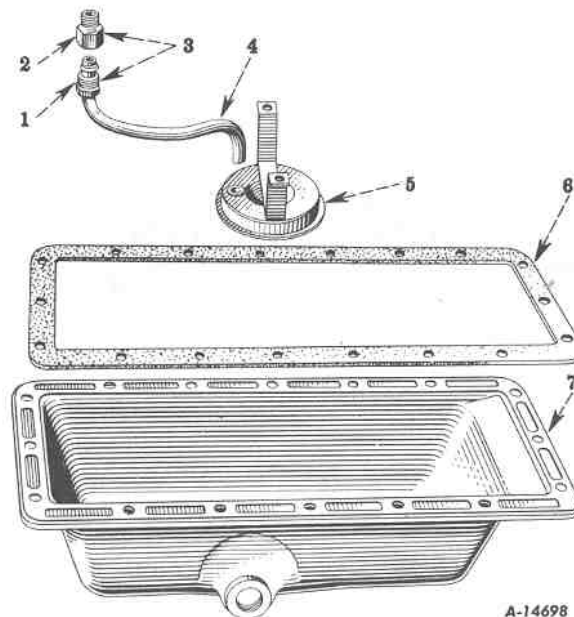


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

CRANKCASE OIL PAN, OIL PUMP SCREEN AND TUBE

[illegible]

ENGINE

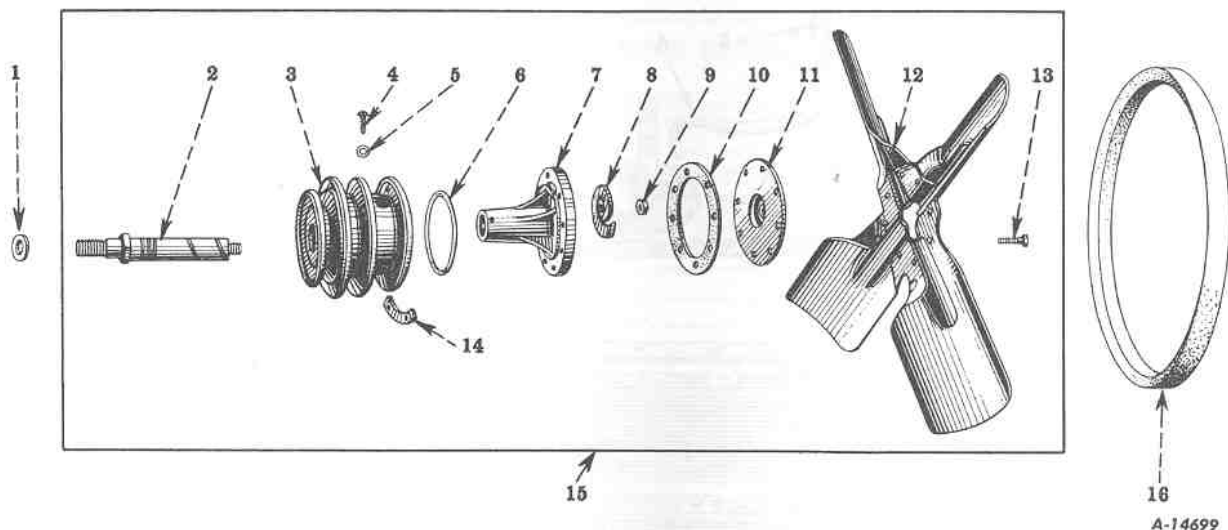


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

FAN (Schwitzer-Cummins Company)

1	43 293 D		FAN SHAFT WASHER	1
2		B115145	FAN SPINDLE (ORDER 251 647 R91)	1
	122 366		HEX JAM NUT, 5/8" N.F.	1
3		B115144	FAN HUB (ORDER 251 645 R91)	1
4	70 206 D	C112183	OIL RETAINING SCREW	1
5	70 208 D	C112834	OIL RETAINING SCREW GASKET	1
6	70 207 D	C112696	FAN HUB GASKET	1
7		B112037	FAN BEARING (ORDER 251 647 R91)	1
8		C8561	OIL IMPELLER (ORDER 251 647 R91)	1
9	70 209 D	C114033	LOCK NUT	1
10	70 200 D	C8560	FAN BEARING GASKET	1
11	70 204 D	B115768	FAN BEARING CAP	1
12	351 870 R91	A118840	FAN	1
13	70 202 D	C9089	CAP SCREW	8
	106 498	C112755	LOCKWASHER, No. 12	8
14	70 203 D	C11943	DOUBLE NUT	4
15	251 427 R91	L118839	FAN AND HUB, COMPLETE	1
16	251 428 R1		FAN BELT	1
	251 645 R91	B-118304	PULLEY AND HUB, COMPLETE	1
	251 647 R91	C-118306	SPINDLE AND BEARING, COMPLETE	1

ENGINE

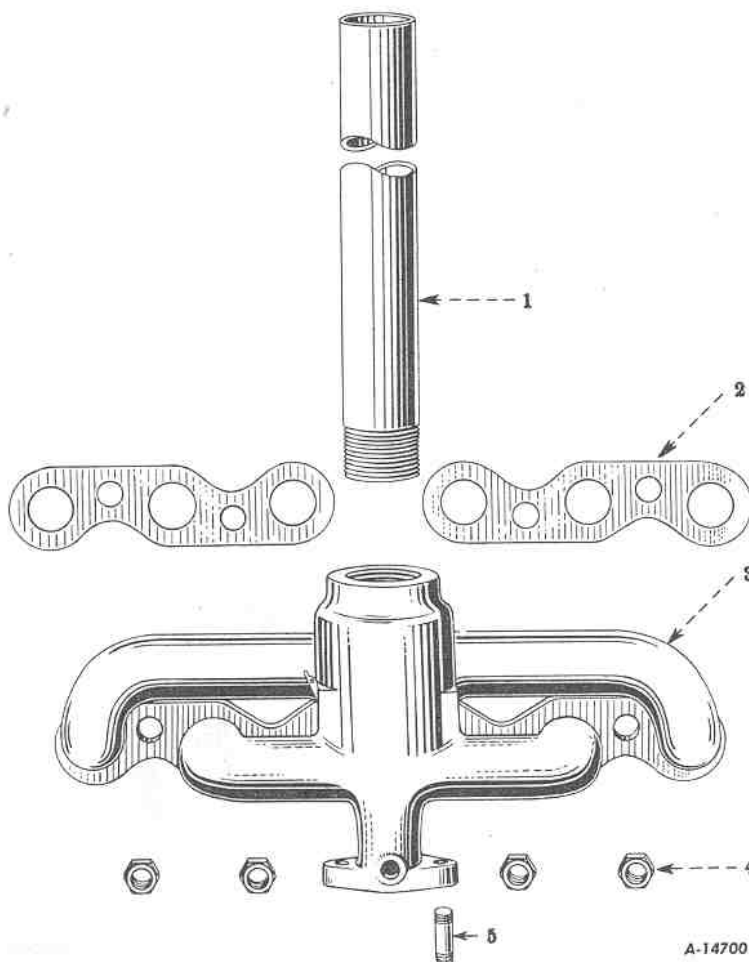


Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

MANIFOLD AND EXHAUST PIPE

1	350 960 RI	EXHAUST PIPE	1
2	251 233 RI	EXHAUST AND INTAKE MANIFOLD GASKET	2
3	251 232 RI	EXHAUST AND INTAKE MANIFOLD	1
	103 865	PIPE PLUG, 1/8" SQUARE HEAD	1
4	251 176 RI	EXHAUST AND INTAKE MANIFOLD STUD NUT	4
5	251 236 RI	CARBURETOR STUD	2
	103 024	HEX NUT, 1/4" N.F.	2
	103 319	LOCKWASHER, 1/4"	2

ENGINE

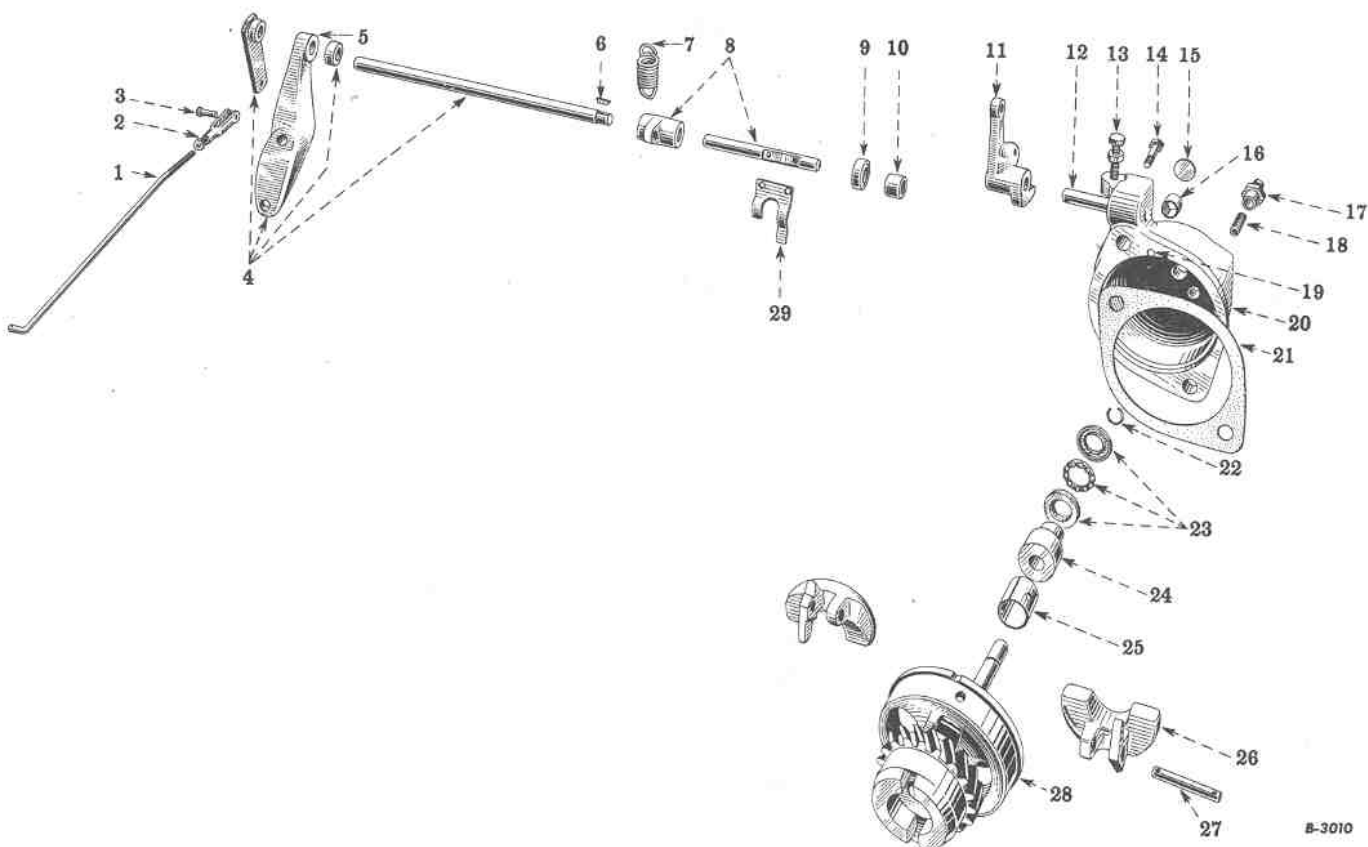


B-3010

Reference numbers only are shown in illustration. Use IH part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

GOVERNOR AND CONNECTIONS

1	251 470 R1	GOVERNOR CONNECTING ROD	1
	103 351	COTTER PIN, 1/16 x 1/2"	1
2	117 824	GOVERNOR CONNECTING ROD YOKE	1
	103 038	HEX NUT, NO. 10 - 32 N.F.	1
3	103 493	GOVERNOR CONNECTING ROD YOKE PIN	1
	103 351	COTTER PIN, 1/16 x 1/2"	1
4	251 472 R91	GOVERNOR ROCKSHAFT EXTENSION AND BRACKET, COMPLETE	1
	179 820	CAP SCREW, 5/16 x 1-1/4" N.C. HEX HEAD	2
	103 320	LOCKWASHER, 5/16"	2
	142 485	GROOV PIN, 1/8 x 5/8" (TYPE NO. 1)	2
5	251 469 R1	GOVERNOR ROCKSHAFT EXTENSION BRACKET	1
6	103 904	GOVERNOR ROCKSHAFT EXTENSION SHAFT KEY (WOODRUFF NO. 2, 3/32 x 1")	1
7	251 464 R1	GOVERNOR SPRING	1
8	251 461 R11	GOVERNOR ROCKSHAFT AND SPRING LEVER	1
	142 485	GROOV PIN, 1/8 x 5/8" (TYPE NO. 1)	1
9	251 449 R91	GOVERNOR ROCKSHAFT OIL SEAL	1
10	45 753 D	GOVERNOR ROCKSHAFT BEARING	1

ENGINE

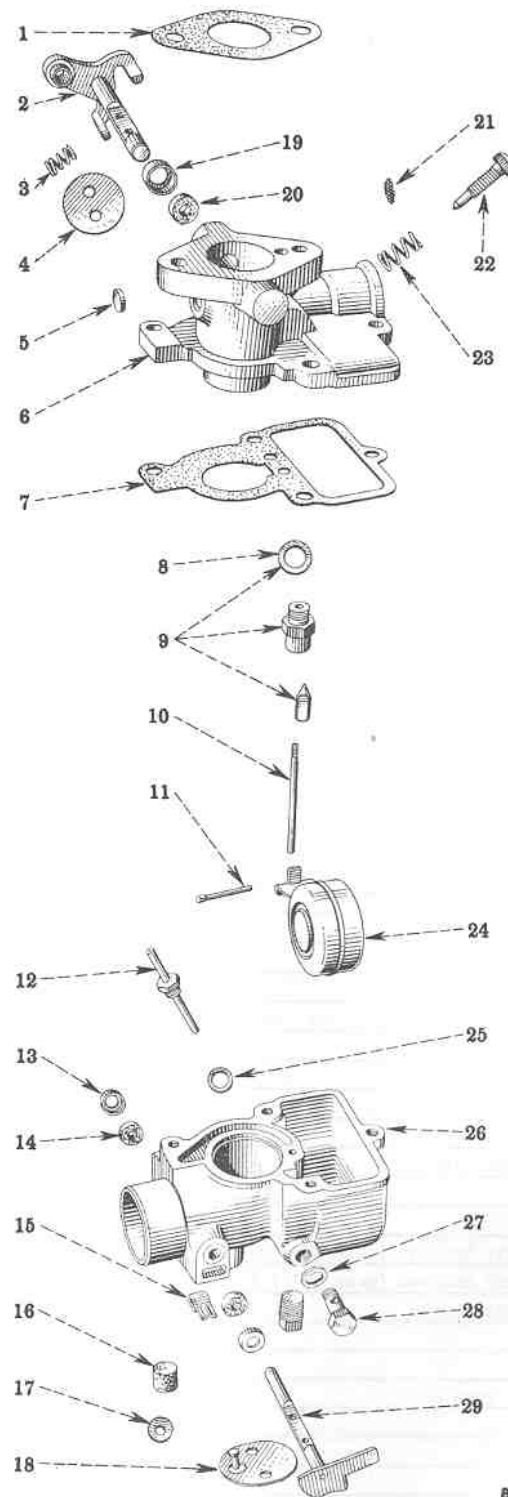


B-3011

CARBURETOR, International — $\frac{3}{4}$ " Updraft

Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

ENGINE

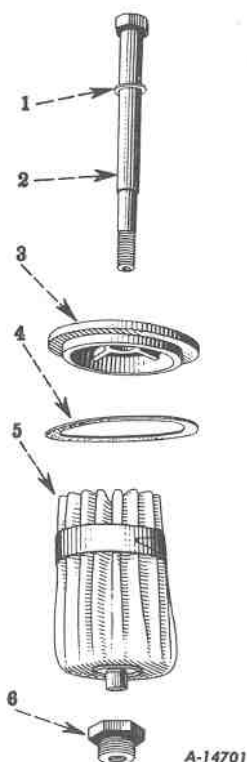


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

LUBRICATING OIL FILTER

[illegible]

ENGINE

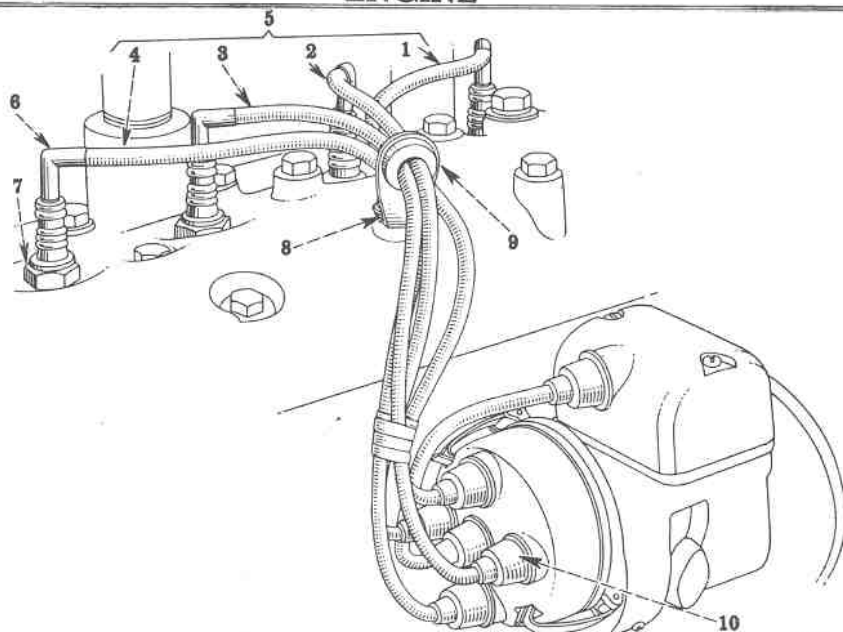

A-14702

Reference numbers only are shown in illustration. Use I H part numbers in ordering.

SPARK PLUGS, CABLES AND TERMINALS

1	65 343 D	SPARK PLUG CABLE, No. 1	1
2	65 333 D	SPARK PLUG CABLE, No. 2	1
3	65 323 D	SPARK PLUG CABLE, No. 3	1
4	65 343 D	SPARK PLUG CABLE, No. 4	1
5	351 621 R91	SET OF SPARK PLUG CABLES (ORDER 352 946 R91)	1
5	352 946 R91	IGNITION CABLE SERVICE PACKAGE (WILL WORK FOR 351 621 R91)	1
6	84 319 H	SPARK PLUG CABLE TERMINAL	4

SPARK PLUGS—Normal Service

7	43 403 DB	SPARK PLUG (CHAMPION No. 15-A)	4
7	108 350 H	SPARK PLUG (CHAMPION No. 15-A) (ORDER 43 403 DB)	4
7	60 638 DB	SPARK PLUG (AC-85-S COM)	4
7	65 239 D	SPARK PLUG (AC-87) (ORDER 60 638 DB)	4
7	353 180 R91	SPARK PLUG (AUTO-LITE BT-8)	4
7	353 260 R91	SPARK PLUG (EDISON Z-147)	4

SPARK PLUGS—Light or Moderate Service

7	250 304 R92	SPARK PLUG (CHAMPION C-15)	4
7	250 305 R92	SPARK PLUG (AC-88-S COM)	4
7	353 258 R91	SPARK PLUG (EDISON Z-146)	4
7	353 563 R91	SPARK PLUG (AUTO-LITE BT-10)	4

SPARK PLUGS—Severe Service


7	57 290 DA	SPARK PLUG (CHAMPION No. H-17-A)	4
7	61 497 DA	SPARK PLUG (AC-83-S COM)	4
7	353 182 R91	SPARK PLUG (AUTO-LITE BT-4)	4
7	353 262 R91	SPARK PLUG (EDISON Z-148)	4

SPARK PLUGS—Extremely Severe Service

7	57 289 DB	SPARK PLUG (CHAMPION No. H-16-A)	4
7	352 502 R91	SPARK PLUG (AC-81-S COM)	4
7	353 263 R91	SPARK PLUG (EDISON Z-149)	4
7	353 562 R91	SPARK PLUG (AUTO-LITE BT-3)	4

8	251 426 R1	SPARK PLUG CABLE BRACKET	1
9	71 198 H	SPARK PLUG CABLE BRACKET GROMMET	1
10	251 553 R1	SPARK PLUG CABLE NIPPLE	4
	37 291 D	SPARK PLUG CABLE TERMINAL (PUSH TYPE)	4
	37 762 H	SPARK PLUG GASKET	4

ENGINE

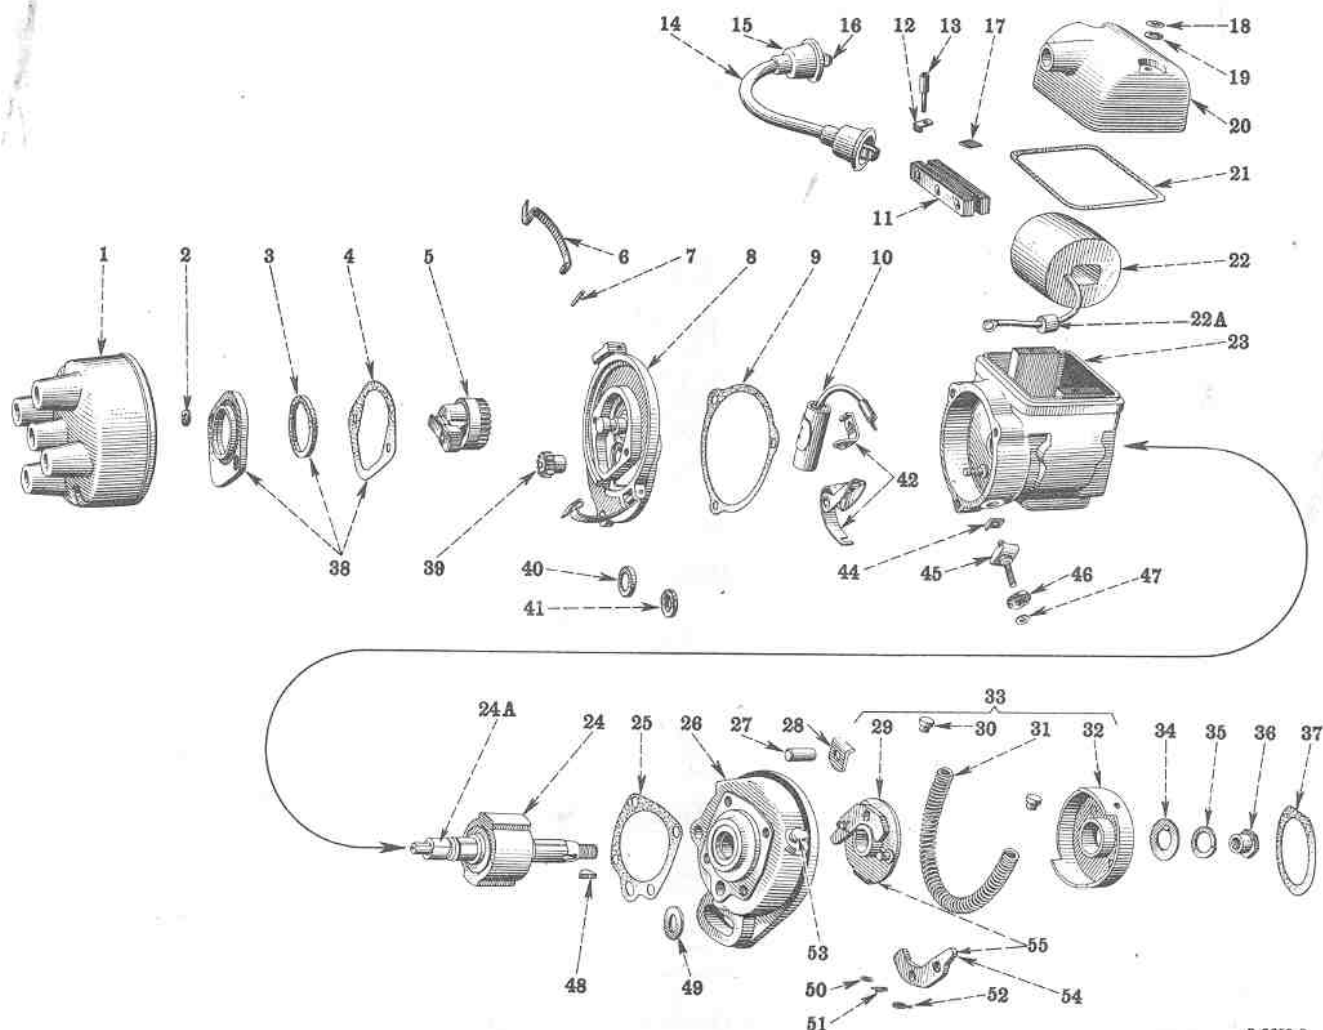

B-3012 B


Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

MAGNETO, International Type J-4

251 492 R91	MAGNETO, COMPLETE (CLOCKWISE)	
179 843	CAP SCREW, 3/8 x 1-1/2" N.C. HEX HEAD	1
114 494	HEX JAM NUT, 3/8" N.F.	1
103 321	LOCKWASHER, 3/8"	2

Always give MAGNETO NUMBER when ordering Parts.

CHASSIS

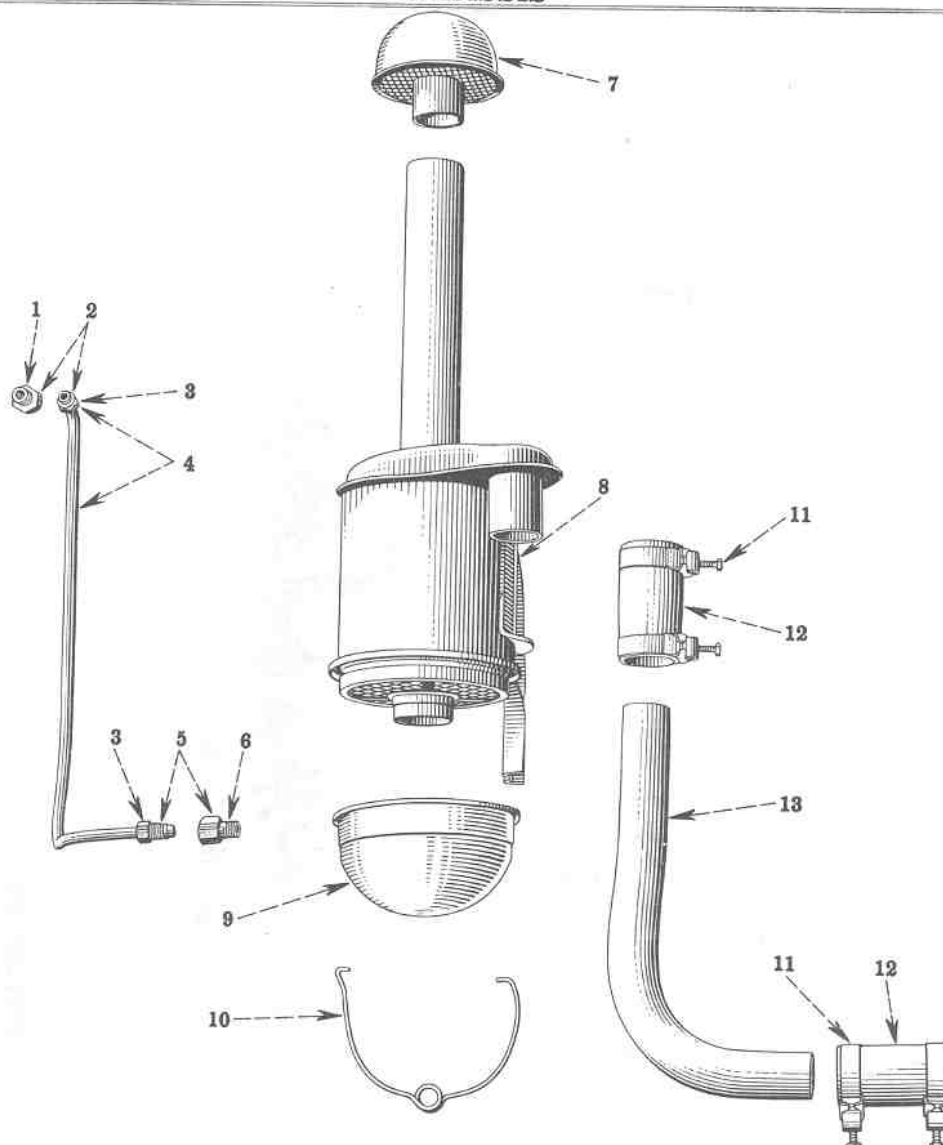


Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

A-14703

AIR CLEANER AND CONNECTIONS


	350 746 R91		AIR CLEANER, COMPLETE, 4" (DONALDSON)	1
	179 812		CAP SCREW, 5/16 x 1/2" N.C. HEX HEAD	2
	103 320		LOCKWASHER, 5/16"	2
1	350 755 R1		BREATHING PIPE CONNECTOR	1
2	350 755 R11		BREATHING PIPE CONNECTOR WITH NUT, 29 898 D	1
3	29 898 D		BREATHING PIPE CONNECTOR NUT	2
4	350 754 R11		BREATHING PIPE WITH 2 NUTS, 29 898 D	1
5	29 901 DX		BREATHING PIPE CONNECTOR WITH NUT, 29 898 D	1
6	29 901 D		BREATHING PIPE CONNECTOR	1
7	350 750 R91		AIR INTAKE CAP	1
8	352 161 R91	P-7149	AIR CLEANER BODY	1
9	352 162 R91	P-7143	AIR CLEANER OIL CUP	1
10	352 163 R1	P-7146	AIR CLEANER BAIL	1
11	39 135 H		AIR CLEANER PIPE HOSE CLAMP	4
12	350 753 R2		AIR CLEANER PIPE HOSE, 1-1/4" I.D. x 2-1/2" LONG, 8 PLY	2
13	350 752 R1		AIR CLEANER PIPE	1

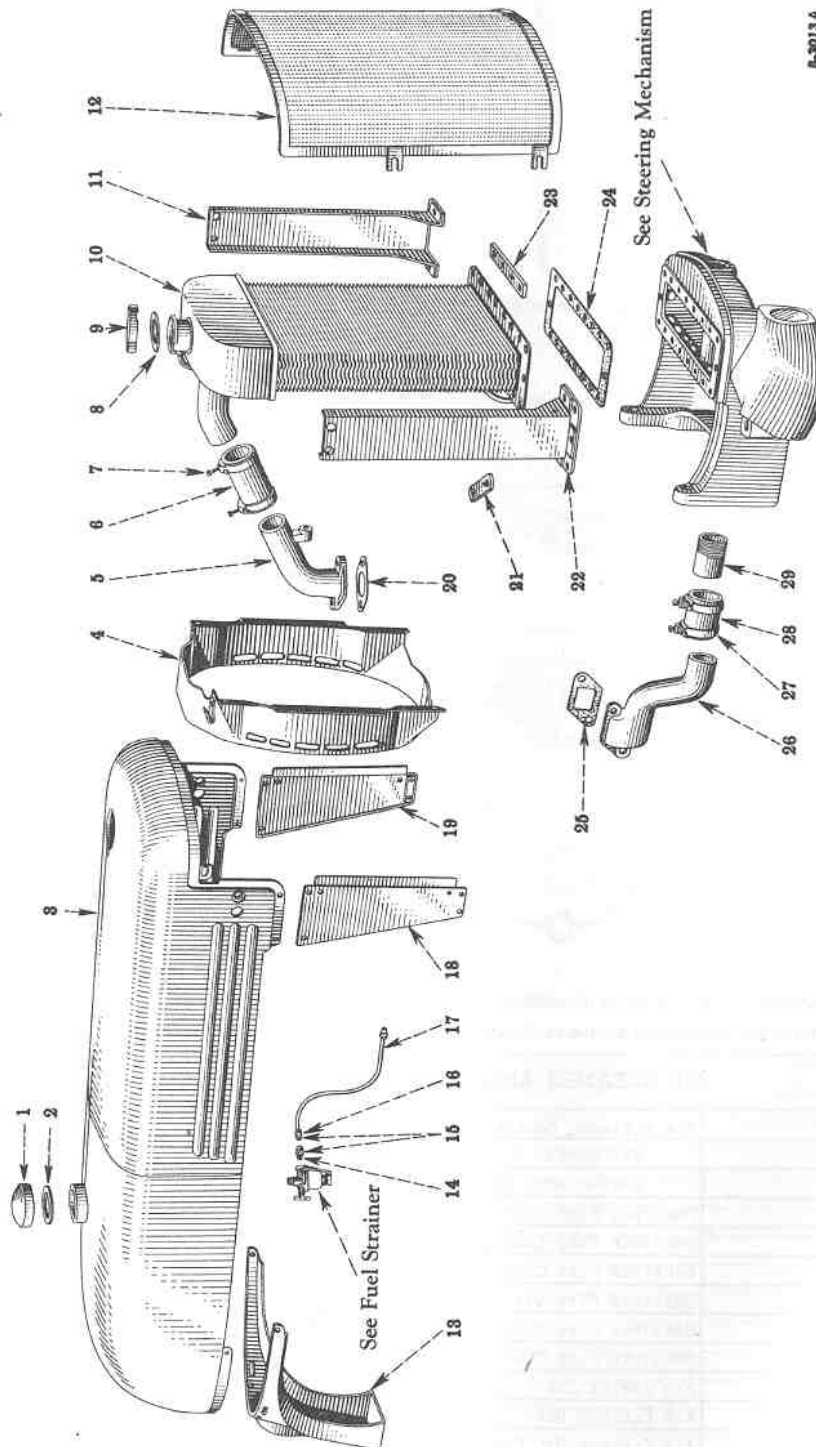

HOOD AND FUEL TANK, SUPPORT, RADIATOR, SCREEN AND CONNECTIONS

Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

CHASSIS

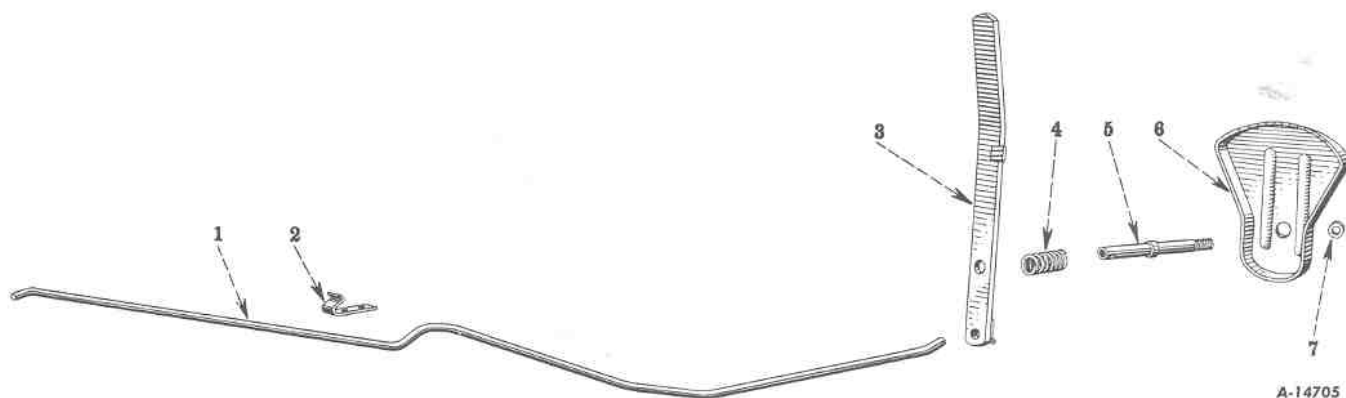


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

GOVERNOR CONTROLS

1	351 008 RI	GOVERNOR CONTROL ROD	1
	137 130	COTTER PIN, 1/16 x 7/16"	2
2	351 009 RI	GOVERNOR CONTROL ROD CLIP	1
	179 812	CAP SCREW, 5/16 x 1/2" N.C. HEX HEAD	1
	103 320	LOCKWASHER, 5/16"	
3	351 006 RI	GOVERNOR CONTROL LEVER	1
4	43 650 D	GOVERNOR CONTROL LEVER SPRING	1
5	351 007 RI	GOVERNOR CONTROL PIVOT PIN	1
	131 485	LOW CROWN NUT, 5/16" N.F.	1
	103 320	LOCKWASHER, 5/16"	1
	107 763	COTTER PIN, 1/8 x 5/8"	1
	Q 397	STEEL WASHER, 11/32" I.D. x 3/4" O.D. x No. 16 GA.	1
6	351 005 RI	GOVERNOR CONTROL SECTOR	1
7	351 549 RI	GOVERNOR CONTROL PIVOT PIN WASHER	1

CHASSIS

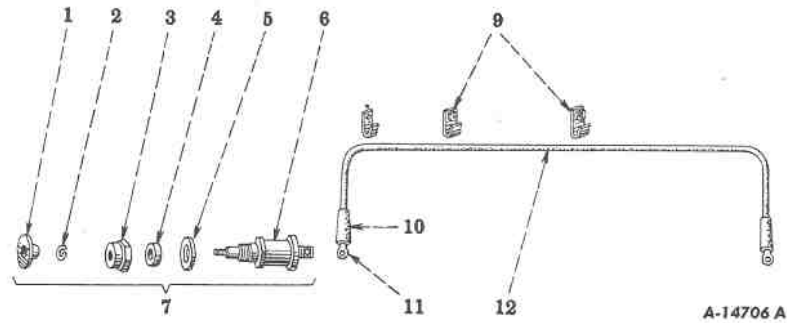


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

MAGNETO IGNITION SWITCH AND CABLE

1	8 732 D	SWITCH KNOB	1
2	120 217	LOCKWASHER, NO. 10 (CADMIUM PLATED)	1
3	56 517 D	SWITCH MOUNTING NUT	1
	138 553	LOCKWASHER, 9/16" (INTERNAL TEETH) (CADMIUM PLATED)	1
4	56 519 D	SWITCH PLUNGER DUST SEAL	1
5	59 109 D	MAGNETO IGNITION SWITCH SPACER	1
6		MAGNETO IGNITION SWITCH (ORDER 54 207 DA)	1
7	54 207 DA	MAGNETO IGNITION SWITCH, COMPLETE	1
	122 159	SLOTTED SCREW, NO. 8 - 32 x 1/4" ROUND HEAD (CADMIUM PLATED)	1
	121 841	LOCKWASHER, NO. 8 (CADMIUM PLATED)	1
9	352 107 R91	MAGNETO GROUNDING SWITCH CABLE CLIP	2
	138 132	SLOTTED SCREW, 1/4 x 3/8" N.C. TRUSS HEAD	1
	103 319	LOCKWASHER, 1/4"	1
10	28 500 H	MAGNETO IGNITION SWITCH CABLE SLEEVE	2
11	38 433 D	MAGNETO IGNITION SWITCH CABLE TERMINAL	2
12	58 189 D	MAGNETO IGNITION SWITCH CABLE WITH 2 TERMINALS, 38 433 D AND 2 SLEEVES	1
		28 500 H	1
	132 100	SLOTTED SCREW, NO. 10 - 32 x 5/16" FILLISTER HEAD (CADMIUM PLATED)	1
	131 183	LOCKWASHER, NO. 10 (CADMIUM PLATED)	1

CHASSIS

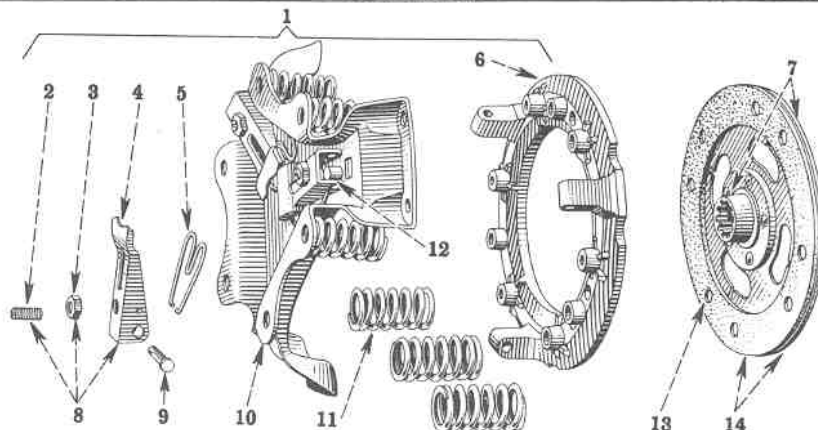


A-14707

Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

CLUTCH (Rockford Drilling Machine)

	350 941 R91	CLA-1933-1AD	CLUTCH (6-1/2") 351 760 R91 WITH DRIVEN MEMBER, 351 774 R91 (ATWOOD CLUTCH 350 933 R91 WILL WORK)	1
1	351 760 R91	UCLA-5-6453	CLUTCH, COMPLETE, LESS DRIVEN MEMBER	1
2	351 768 R1	CL-6456	RELEASE LEVER ADJUSTING SCREW	3
3	351 769 R1	CL-4195	ADJUSTING HEX NUT	3
4	351 767 R1	CL-6798	RELEASE LEVER	3
5	351 771 R1	CL-7494	RELEASE LEVER SPRING	3
6	351 765 R1	CL-6760	PRESSURE PLATE	1
7	351 773 R91	UCL-1-4229-7	DRIVEN MEMBER	1
8	351 766 R91	UCL-6798	RELEASE LEVER, COMPLETE	3
9	351 770 R1 103 372	CL-6458 CL-487	RELEASE LEVER PIN COTTER PIN, 3/32 x 1/2"	3 3
10	351 761 R91	UCL-1-6453	BACK PLATE WITH 3 ADJUSTING SCREW SEATS, 351 763 R1	1
11	351 772 R1	CL-6459	PRESSURE SPRING	6
12	351 763 R1	CL-6457-3	ADJUSTING SCREW SEAT	3
13	103 384 H	CL-1825-2	TUBULAR RIVET	8
14	351 469 R91		CLUTCH FACING PACKAGE WITH 8 RIVETS, 103 384 H	1

CHASSIS

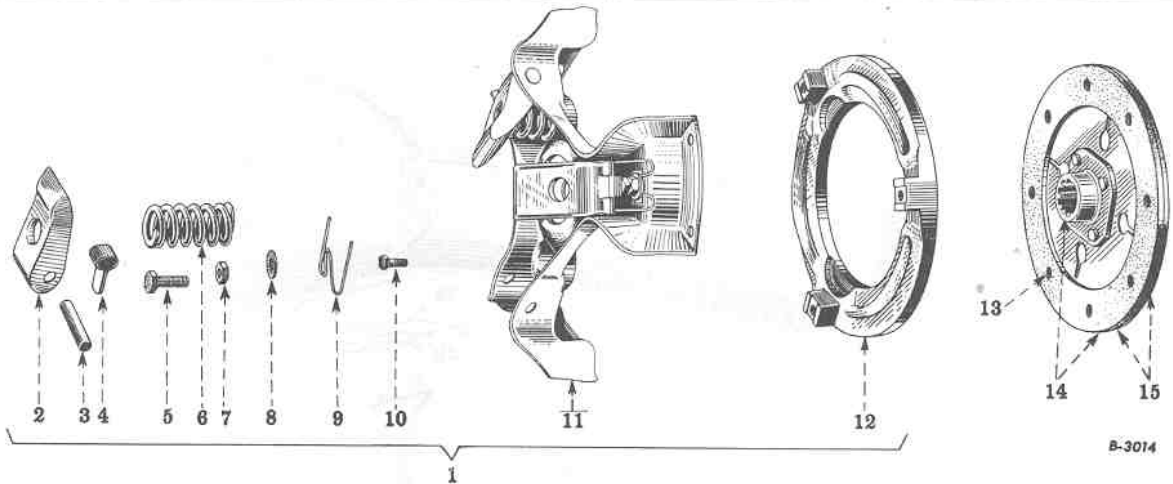


B-3014

Reference numbers only are shown in illustration. Use I H part numbers in ordering.

CLUTCH (Atwood Vacuum Machine Company)

	350 938 R91	6500-5	CLUTCH (6-1/2") 350 939 R91 WITH DRIVEN MEMBER, 350 940 R91 (ROCKFORD CLUTCH, 350 941 R91 WILL WORK)	1
1	350 939 R91	6501-7	CLUTCH, COMPLETE, LESS DRIVEN MEMBER	1
2	351 901 R1	1057	CLUTCH LEVER	3
3	351 902 R1	1130	CLUTCH LEVER PIVOT PIN	3
4	351 904 R1	1033	CLUTCH LEVER CUSHION SPRING	3
5	351 965 R1	2053	ADJUSTING SCREW	3
6	351 903 R1	583	CLUTCH LEVER PRESSURE SPRING	3
7	351 899 R1	2819	ADJUSTING SCREW LOCK NUT	3
8	351 900 R1	2827	ADJUSTING SCREW WASHER	3
9	351 898 R1	626	CLUTCH RETURN SPRING	3
10	2 049 Y 103 320		CLUTCH TO FLYWHEEL CAP SCREW LOCKWASHER, 5/16"	6 6
11	351 897 R1	581	CLUTCH BRACKET	1
12	351 896 R1	584	CLUTCH PRESSURE PLATE	1
13	63 974 D	366	CLUTCH FACING RIVETS	8
14	350 940 R91	6502-1	CLUTCH DRIVEN MEMBER	1
15	351 935 R91		CLUTCH FACING PACKAGE WITH 10 RIVETS, 63 974 D	1


CHASSIS

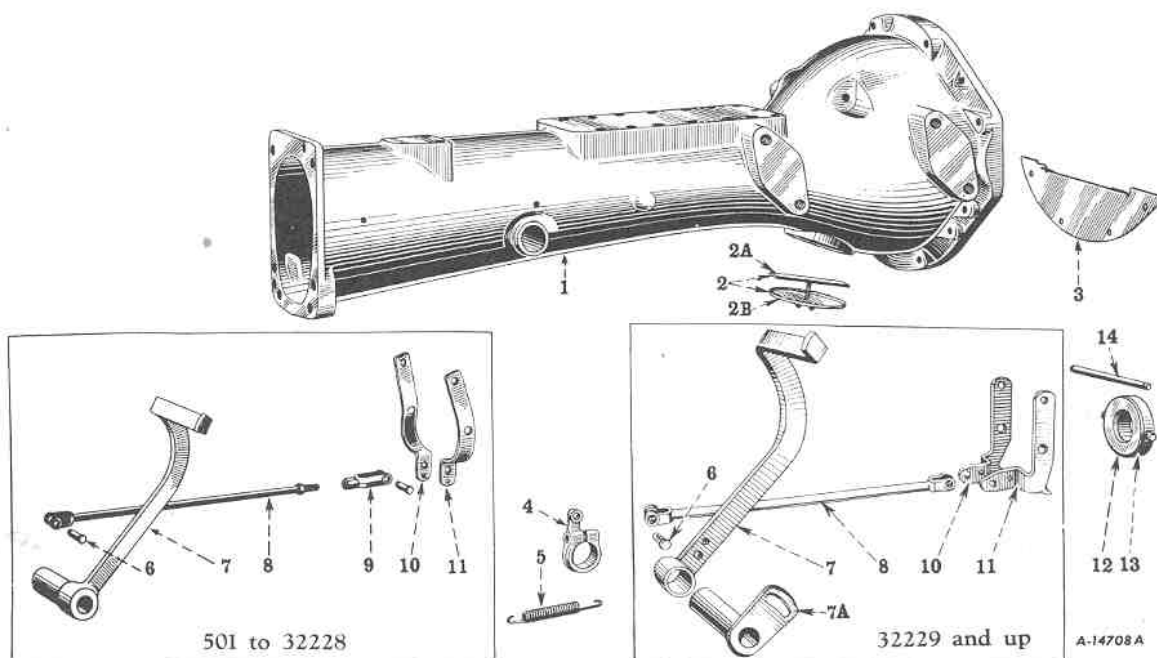

Reference numbers only are shown in illustration. Use I H part numbers in ordering.

CLUTCH HOUSING, CONTROLS AND CONNECTIONS


1	351 686 R11	CLUTCH HOUSING WITH CORKS	1
	179 866	CAP SCREW, 7/16 x 2" N.C. HEX HEAD	2
	190 679	CAP SCREW, 7/16 x 2-5/8" N.C. HEX HEAD	4
	179 834	CAP SCREW, 1/2 x 1-3/8" N.C. HEX HEAD	2
	179 838	CAP SCREW, 1/2 x 1-7/8" N.C. HEX HEAD	4
	220 067	HEX NUT, 7/16" N.C.	4
	103 322	LOCKWASHER, 7/16"	6
	103 323	LOCKWASHER, 1/2"	6
	104 938	CORK, No. 2, 1/2 x 11/16"	4
	104 940	CORK, No. 4, 5/8 x 13/16"	9
2	351 486 R11	CLUTCH HOUSING HAND HOLE COVER WITH 1/4" N.C. TYPE "A" WING NUT (ORDER 57 578 DX, 351 486 R1 AND 103 127)	1
2A	57 578 DX	CLUTCH HOUSING HAND HOLE COVER BAR	1
	103 127	WING NUT, 1/4" N.C.	1
2B	351 486 R1	CLUTCH HOUSING HAND HOLE COVER	1
3	351 485 R1	CLUTCH HOUSING COVER	1
	179 800	CAP SCREW, 1/4 x 1-3/8" N.C. HEX HEAD	4
	220 064	HEX NUT, 1/4" N.C.	4
	103 319	LOCKWASHER, 1/4"	4
4	350 953 R1	CLUTCH PEDAL LEVER	1
	179 844	CAP SCREW, 3/8 x 1-5/8" N.C. HEX HEAD	1
	103 321	LOCKWASHER, 3/8"	1

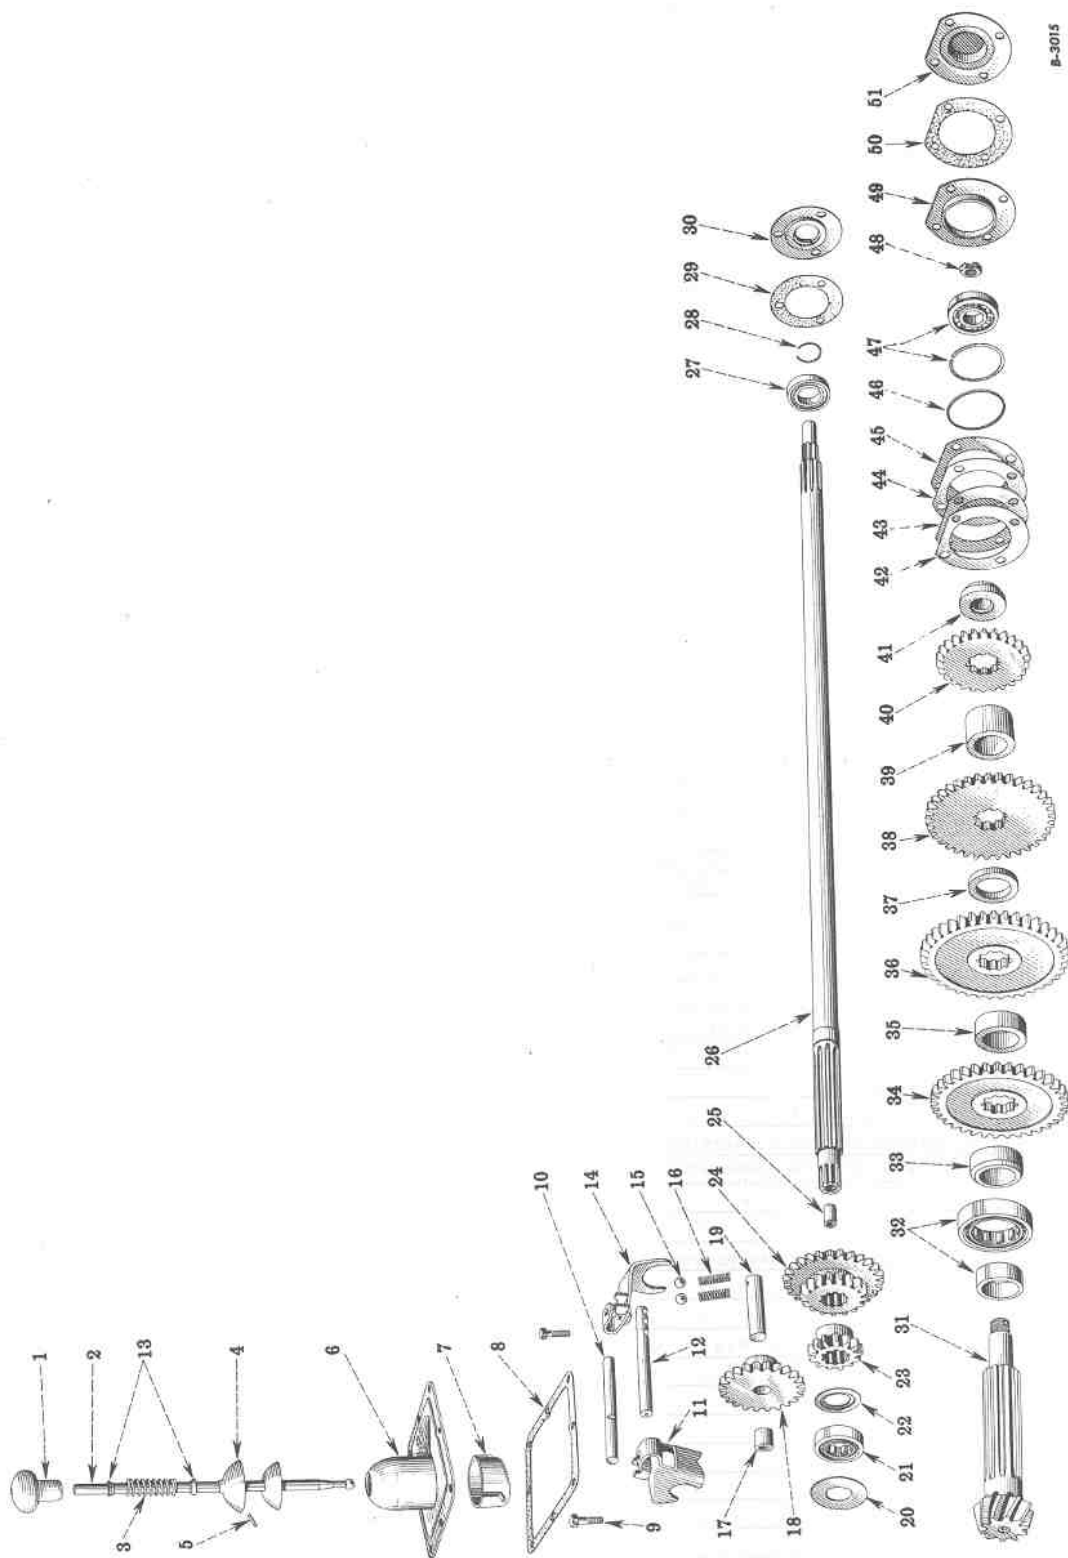

GEAR SHIFTER MECHANISM AND TRANSMISSION

Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

CHASSIS

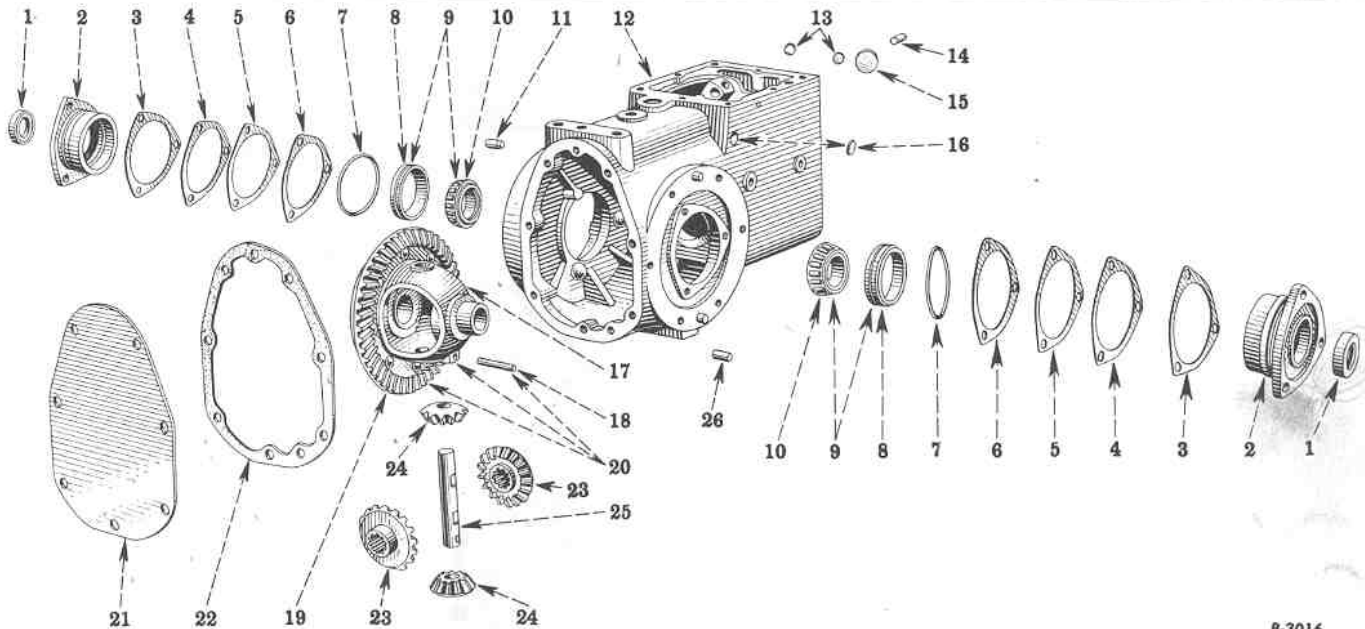

8-3016


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

TRANSMISSION CASE AND DIFFERENTIAL

1	18 674 K	DIFFERENTIAL SHAFT INNER BEARING RETAINER OIL SEAL	2
2	350 792 R11	DIFFERENTIAL SHAFT INNER BEARING RETAINER WITH CUP, 13 822 V AND OIL SEAL, 18 674 K	2
	179 839	CAP SCREW, 3/8 x 1" N.C. HEX HEAD	6
	103 321	LOCKWASHER, 3/8"	6
3	350 794 R1	DIFFERENTIAL SHAFT INNER BEARING RETAINER SHIM, FINE	x
4	350 795 R1	DIFFERENTIAL SHAFT INNER BEARING RETAINER SHIM, LIGHT	x
5	350 796 R1	DIFFERENTIAL SHAFT INNER BEARING RETAINER SHIM, MEDIUM	x
6	350 797 R1	DIFFERENTIAL SHAFT INNER BEARING RETAINER SHIM, HEAVY	x
7	350 793 R1	DIFFERENTIAL SHAFT INNER BEARING RETAINER SEALING RING	2
8	13 822 V	DIFFERENTIAL SHAFT INNER BEARING CUP (TIMKEN NO. 14274) (352 396 R1 WILL WORK)	2
8	352 396 R1	DIFFERENTIAL SHAFT INNER BEARING CUP (BOWER BT-14274) (13 822 V WILL WORK)	2
9	10 873 K	DIFFERENTIAL SHAFT INNER BEARING (CUP, 13 822 V, CONE, 10 880 K) (352 382 R91 WILL WORK)	2
9	352 382 R91	DIFFERENTIAL SHAFT INNER BEARING (CUP, 352 396 R1 AND CONE, 352 389 R91) (10 873 K WILL WORK)	2
10	10 880 K	DIFFERENTIAL SHAFT INNER BEARING CONE (TIMKEN NO. 14138-A) (352 389 R91 WILL WORK)	2
10	352 389 R91	DIFFERENTIAL SHAFT INNER BEARING CONE (BOWER 14138-A) (10 880 K WILL WORK)	2
11	350 799 R1	TRANSMISSION CASE TO REAR AXLE HOUSING DOWEL	2
12	351 530 R11	TRANSMISSION CASE, COMPLETE (ORDER 351 236 R91)	1
12	351 236 R91	TRANSMISSION CASE WITH DOWELS (WILL WORK FOR 351 530 R11)	1
13	172 528	GEAR SHIFTER ROD HOLE EXPANSION PLUG, 9/16"	2
14	350 799 R1	TRANSMISSION CASE TO CLUTCH HOUSING DOWEL	2
15	172 557	REVERSE IDLER GEAR SHAFT EXPANSION PLUG, 1-3/16"	1
16	172 530	POWER TAKE-OFF SHIFTER SHAFT BEARING EXPANSION PLUG, 11/16"	1
17	350 786 R1	DIFFERENTIAL CASE	1
	104 100	RIVET, 5/16 x 1-1/8" ROUND HEAD (STEEL)	8
18	350 788 R1	DIFFERENTIAL PINION SHAFT LOCK PIN	1
19	350 787 R1	DIFFERENTIAL DRIVE GEAR (46 TEETH)	1
20	350 785 R91	DIFFERENTIAL CASE WITH DRIVE GEAR, COMPLETE	1
21	350 836 R1	TRANSMISSION CASE REAR COVER PLATE	1
	179 835	CAP SCREW, 3/8 x 5/8" N.C. HEX HEAD	7
	103 321	LOCKWASHER, 3/8"	7
22	350 837 R1	TRANSMISSION CASE REAR COVER PLATE GASKET	1
23	350 791 R1	DIFFERENTIAL SIDE GEAR (16 TEETH)	2
24	350 790 R1	DIFFERENTIAL PINION (10 TEETH)	2
25	350 789 R1	DIFFERENTIAL PINION SHAFT	1
26	350 799 R1	TRANSMISSION CASE TO DIFFERENTIAL SHAFT HOUSING DOWEL	2

X - AS REQUIRED


CHASSIS

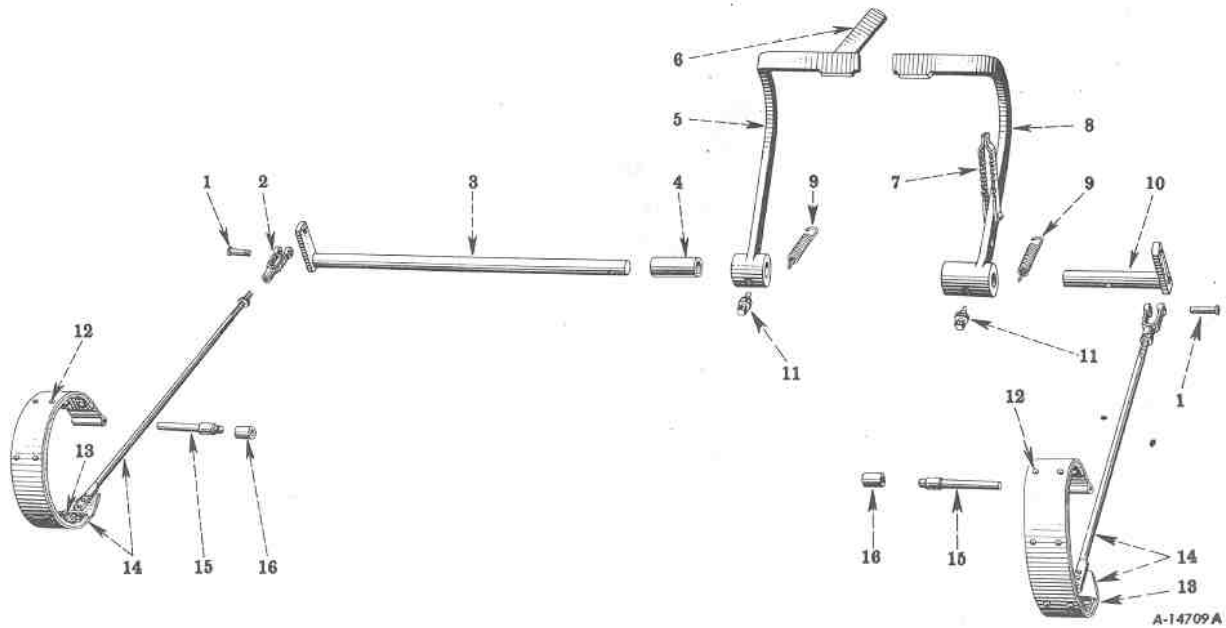

Reference numbers only are shown in illustration. Use I H part numbers in ordering.

FOOT BRAKES


1	39 374 D	BRAKE ROD ADJUSTABLE YOKE PIN	2
	103 372	COTTER PIN, 3/32 x 1/2"	2
2	104 037	BRAKE ROD ADJUSTABLE YOKE	2
3	351 487 R21	BRAKE SHAFT AND LEVER, L.H.	1
	103 346	WASHER, 13/16 x 1-1/2"	17528 UP
	103 386	COTTER PIN, 1/8 x 1-1/4"	17528 UP
4	351 488 R1	BRAKE SHAFT AND LEVER SPACER, L.H.	501 TO 17527
5	350 991 R11	BRAKE PEDAL, L.H., COMPLETE	1
6	350 993 R1	BRAKE LATCH	1
	104 086	STEEL RIVET, 1/4 x 1-1/8" ROUND HEAD	1
7	350 995 R91	BRAKE RATCHET	2
	104 083	STEEL RIVET, 1/4 x 3/4" ROUND HEAD	2
8	350 998 R11	BRAKE PEDAL WITH RATCHET, 350 995 R91, R.H.	1
9	350 951 R1	BRAKE PEDAL RETURN SPRING	2
10	351 003 R11	BRAKE SHAFT AND LEVER, R.H.	1
11	351 000 R1	BRAKE PEDAL LOCK SCREW	2
	218 438	HEX JAM NUT, 3/8" N.C.	2
12	57 323 D	BRAKE BAND RIVET	20
13	352 611 R91	BRAKE BAND LINING SERVICE PACKAGE (CONSISTS OF 1 LINING AND 10 RIVETS, 57 323 D)	2
14	350 967 R11	BRAKE BAND, COMPLETE	2
	103 025	HEX NUT, 5/16" N.F.	2
15	350 990 R1	BRAKE BAND ANCHOR PIN (ORDER 352 361 R1)	501 TO 18558
15	352 361 R1	BRAKE BAND ANCHOR PIN	18559 UP
16	56 151 D	BRAKE BAND SPACER (ORDER 352 361 R1)	501 TO 18558

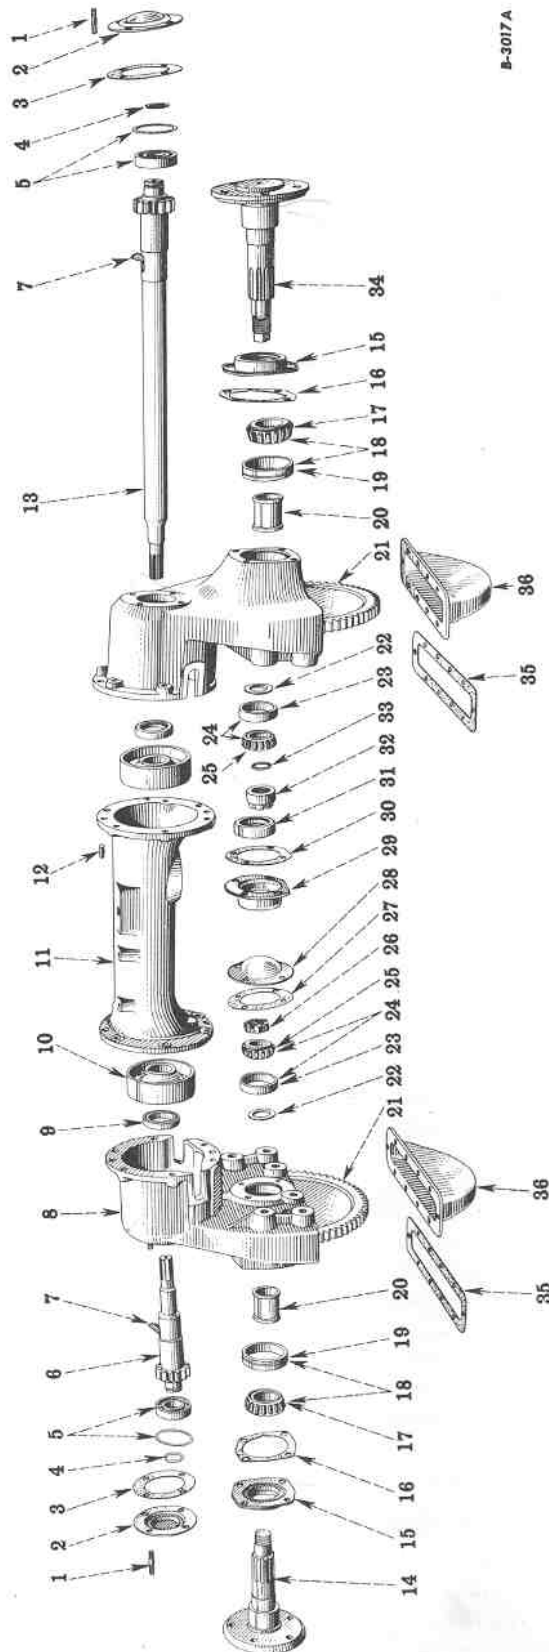

B-3017A

FINAL DRIVE


Reference numbers only are shown in illustration. Use I H part numbers in ordering.
 Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

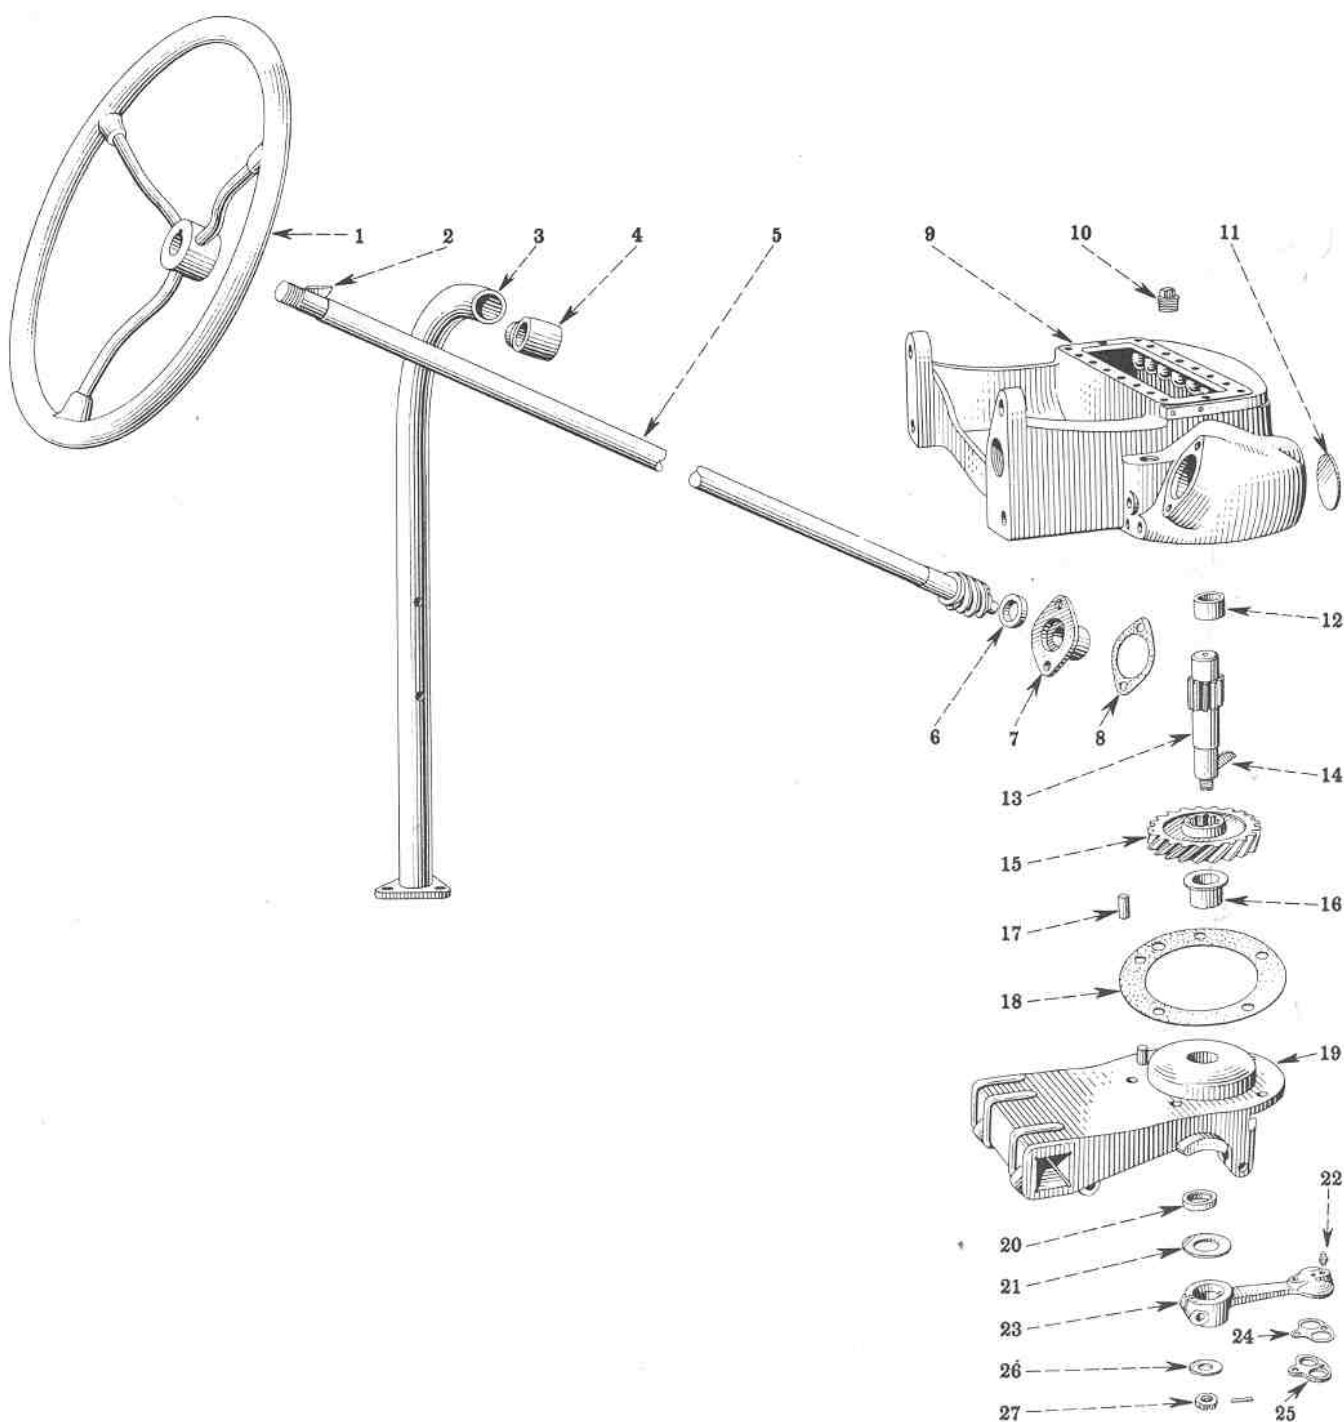


A-14710

STEERING MECHANISM

Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

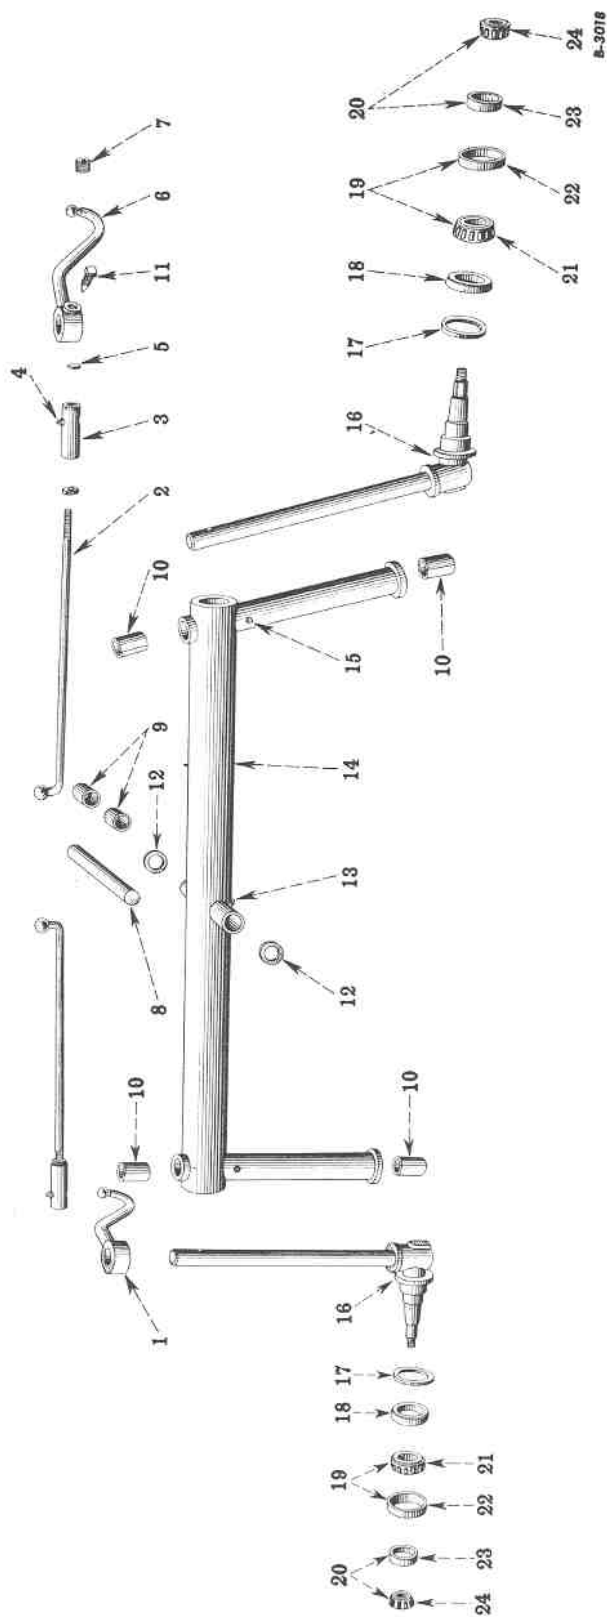


FRONT AXLE AND STEERING KNUCKLE

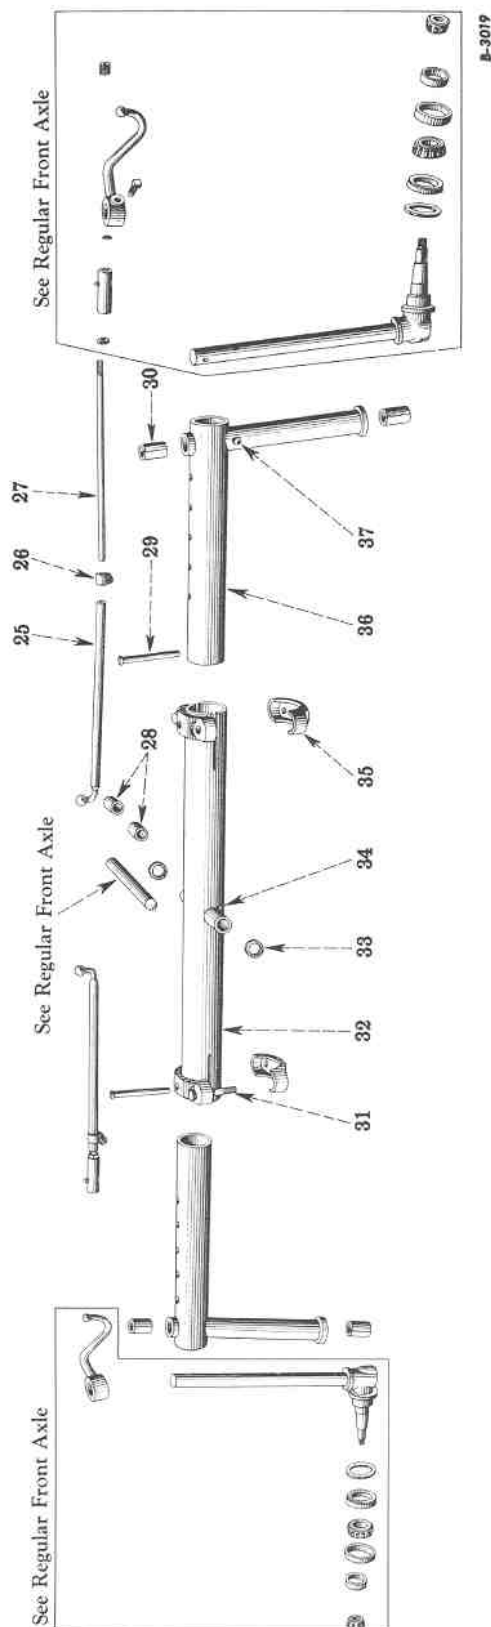

ADJUSTABLE FRONT AXLE ATTACHMENT (Special)

Reference numbers only are shown in illustration. Use I H part numbers in ordering. Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

CHASSIS

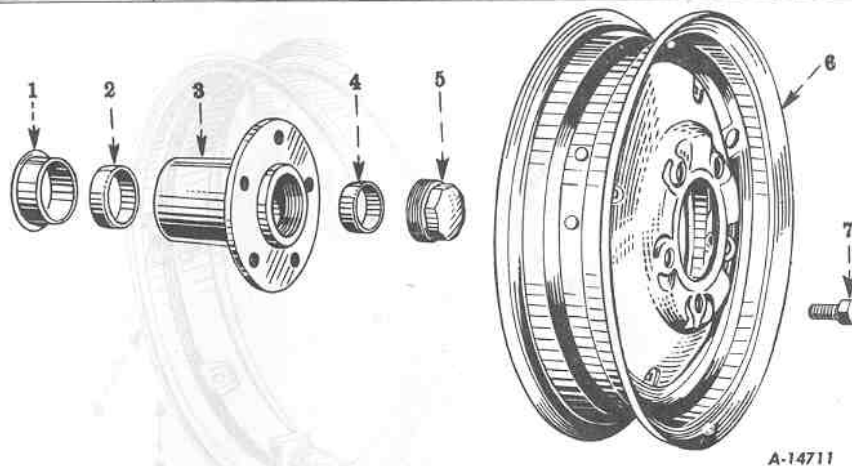


Reference numbers only are shown in illustration. Use IH part numbers in ordering.

FRONT WHEELS

1	351 076 R1	FRONT WHEEL OIL SEAL WEAR RING	2
2	350 772 R1	FRONT WHEEL INNER BEARING CUP (TIMKIN No. 15580) (352 392 R1 AND 353 527 R1 WILL WORK)	2
2	352 392 R1	FRONT WHEEL INNER BEARING CUP (BOWER No. BT 15520) (350 772 R1 AND 353 527 R1 WILL WORK)	2
2	353 527 R1	FRONT WHEEL INNER BEARING CUP (TYSON No. 15520) (350 772 R1 AND 352 392 WILL WORK)	2
3	351 075 R11	FRONT WHEEL HUB, COMPLETE	2
4	350 775 R1	FRONT WHEEL OUTER BEARING CUP (TIMKIN No. 17520) (352 393 R1 AND 353 528 R1 WILL WORK)	2
4	352 393 R1	FRONT WHEEL OUTER BEARING CUP (BOWER No. BT 17520) (350 775 R1 AND 353 528 R1 WILL WORK)	2
4	353 528 R1	FRONT WHEEL OUTER BEARING CUP (TYSON No. 17520) (350 775 R1 AND 352 393 R1 WILL WORK)	2
5	351 080 R1	FRONT WHEEL HUB CAP	2
6	351 074 R91	FRONT WHEEL (TIRE SIZE. 3.00 X 12 AND 4.00 X 12)	2
7	351 846 R1	FRONT WHEEL HUB BOLT	10

CHASSIS

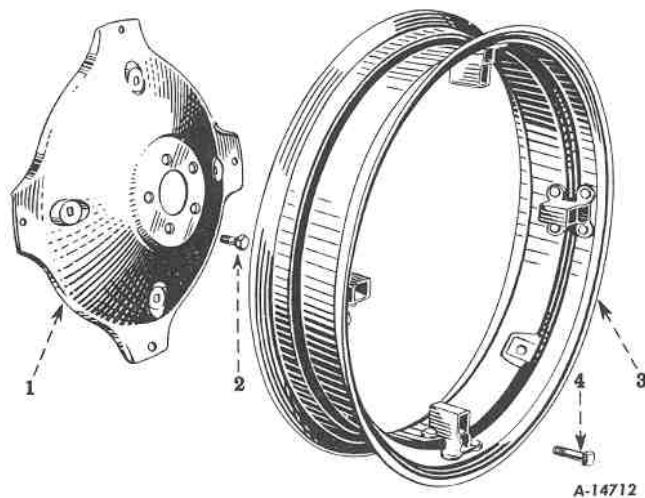


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

REAR WHEELS

[illegible]

CHASSIS

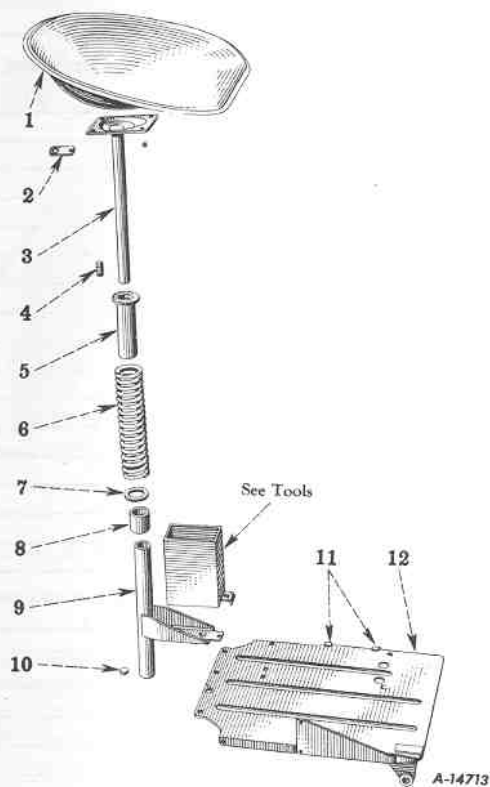


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

SEAT AND PLATFORM

1	351 880 R91	SEAT FRAME	1
2	352 118 R1	TRIP ROPE CLIP	1
3	351 888 R31	SEAT POST	1
	181 393	CAP SCREW, 5/8 x 1-1/4" N.C. HEX HEAD	4
	103 322	LOCKWASHER, 7/16"	4
4	351 882 R1	SEAT POST GUIDE	1
	181 341	CAP SCREW, 5/16 x 1-1/4" N.F. HEX HEAD	2
	103 320	LOCKWASHER, 5/16"	2
5	351 886 R11	SEAT SPRING RETAINER	1
6	351 872 R1	SEAT SPRING	1
7	351 048 R1	SEAT SPRING WASHER	1
8	351 881 R1	SEAT SPRING SPACER	1

CHASSIS

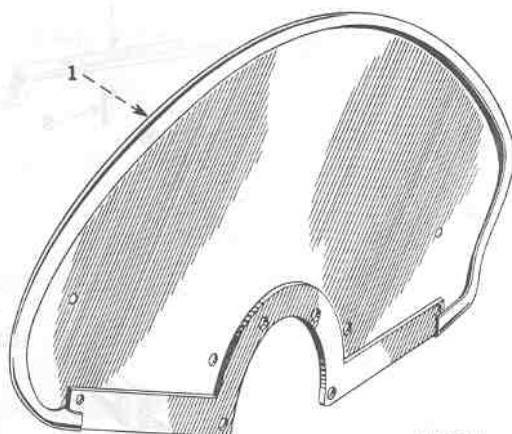


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

FENDER

[illegible]

CHASSIS

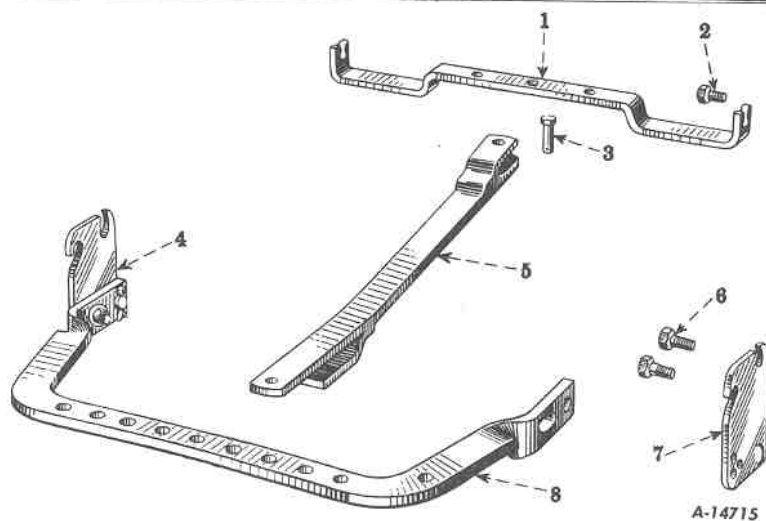


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

DRAWBAR

	351 429 R91	SWINGING DRAWBAR ATTACHMENT (SPECIAL) (MACHINE ATTACHMENT)	1
1	351 433 R1	SWINGING DRAWBAR ANCHOR BAR (SPECIAL)	1
2	351 679 R1	SWINGING DRAWBAR ANCHOR BAR BOLT (SPECIAL)	2
3	Q 3 558	SWINGING DRAWBAR PIVOT PIN (SPECIAL)	1
	103 408	COTTER PIN, 3/16 x 1-1/4"	1
4	350 964 R11	QUICK ATTACHABLE DRAWBAR BRACKET, L.H.	1
	103 520	COTTER PIN, 1/4 x 1-1/2"	1
5	351 430 R11	SWINGING DRAWBAR (SPECIAL)	1
6	351 679 R1	DRAWBAR BRACKET BOLT	4
7	350 965 R11	QUICK ATTACHABLE DRAWBAR BRACKET, R.H.	1
	103 520	COTTER PIN, 1/4 x 1-1/2"	1
8	350 963 R1	QUICK ATTACHABLE DRAWBAR	1
	179 887	CAP SCREW, 1/2 x 1-3/4" N.C. HEX HEAD	2
	220 068	HEX NUT, 1/2" N.C.	2
	103 323	LOCKWASHER, 1/2"	2
	106 265	STEEL WASHER, 9/16" I.D. x 1-3/8" O.D. x NO. 12 GA.	2
	352 714 R1	DRAWBAR ANCHOR BAR SPACER	X
	352 752 R1	DRAWBAR ANCHOR BAR SPACER	X

CHASSIS

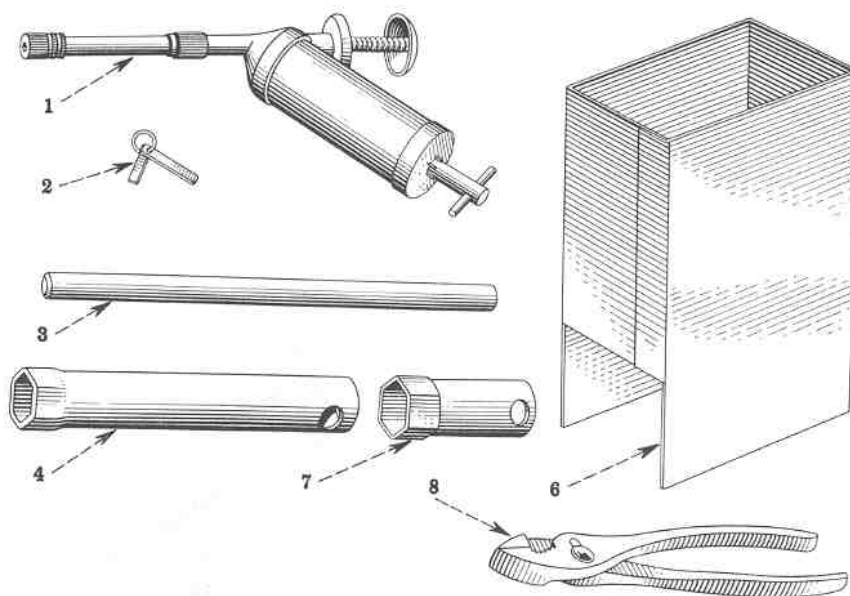


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

TOOLS AND TOOL BOX

1	QA 3 803	LUBRICATOR (FOR DETAIL PARTS SEE HAND LUBRICATOR)	1
2	65 064 DA	SPARK PLUG AND BREAKER POINT GAP GAUGE	1
3	25 466 D	SOCKET WRENCH HANDLE	1
4	28 252 D	SOCKET WRENCH	1
6	351 014 R91	TOOL BOX	1
	181 354	CAP SCREW, 3/8 x 1 1/2" N.F. HEX HEAD	1
	103 321	LOCKWASHER, 3/8"	1
7	46 190 DC	SPARK PLUG WRENCH	1
8	2 537 T	PLIERS	1

CHASSIS

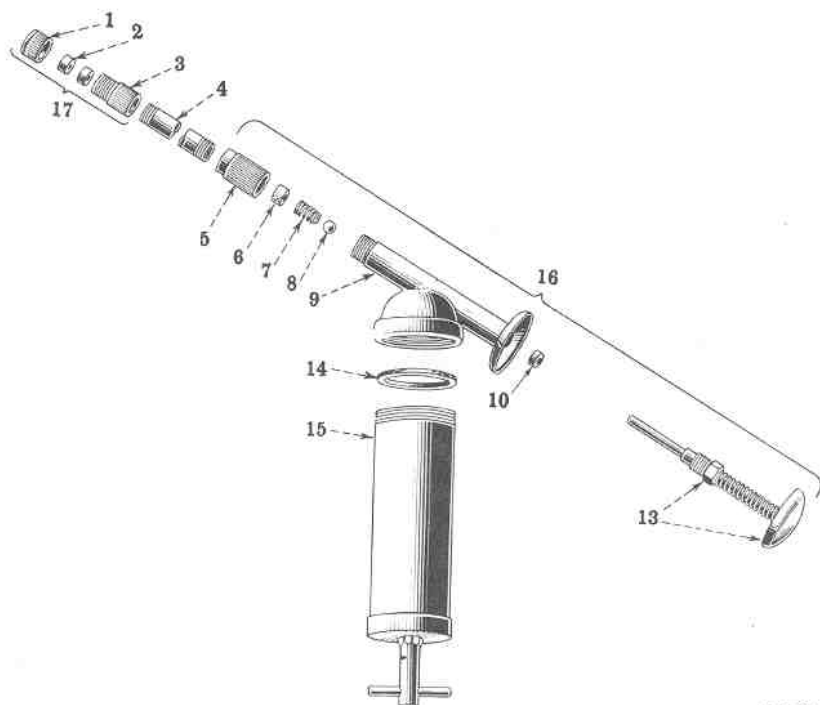


A-469A

Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

HAND LUBRICATOR (Lincoln Engineering Company)

	Q 3 803	5956	LUBRICATOR (3 OUNCE CAPACITY) (ORDER QA 3 803)	
1	39 653 D	10-733	CAP	1
2	39 656 DX	34-050	SET OF 2 WASHERS	1
3	39 652 D	10-539	NOZZLE BODY	1
4			FOLLOWS REFERENCE NO. 9	
5	40 555 DX	11-541-A	ADAPTER WITH GASKET	1
6	40 546 D	34-019	ADAPTER PACKING	1
7	40 553 D	56-022	SPRING	1
8	39 659 D	66-011	CHECK BALL	1
9	56 173 D	41-121	BODY CASTING	1
10		67-158	PIPE, 1/8 X 3" (STANDARD)	1
11	39 665 D	34-034	PLUNGER PACKING	1
12	56 164 D	89-961	PLUNGER	1
13	40 542 D	32-032	GASKET	1
14	52 034 DA	81097	CONTAINER	1
15	40 541 DA	89-995	HEAD	1
16	39 800 D	5804	NOZZLE WITH CAP AND WASHERS	1

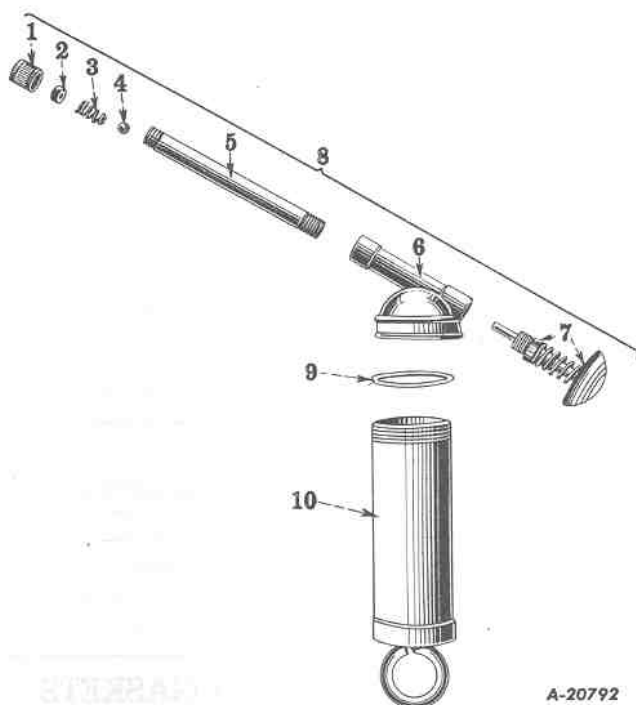


A-20792

Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

HAND LUBRICATOR (Lincoln Engineering Company)

	QA 3 803	5948	LUBRICATOR (3 OUNCE CAPACITY) (WILL WORK FOR Q 3 803)	1
1	353 867 R1	12152	NOZZLE CAP	1
2	39 656 D	34050-1	NOZZLE PACKING	1
3	353 863 R1	56041	CHECK BALL SPRING	1
4	39 659 D	66011	CHECK BALL, 7/32"	1
5	353 864 R1	12154	NOZZLE EXTENSION	1
6	353 862 R1	41168	HEAD	1
7	353 861 R91	90773	PLUNGER	1
8	353 858 R91	89951	HEAD, COMPLETE	1
9	353 855 R1	33063	HEAD GASKET	1
10	52 034 DA	81097	CONTAINER TUBE	1

ATTACHMENTS

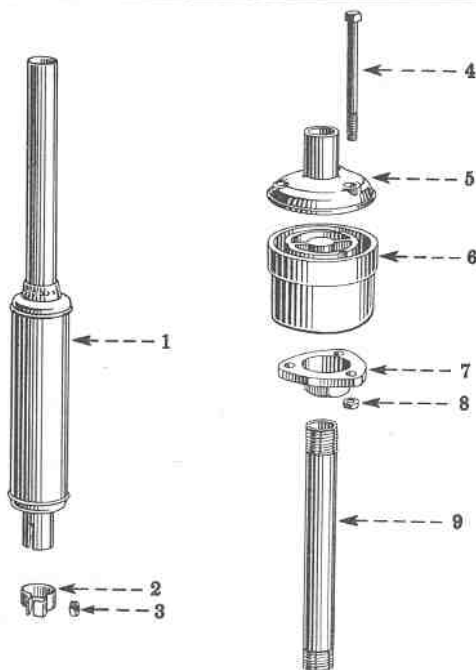


A-14717

Reference numbers only are shown in illustration. Use I H part numbers in ordering.

EXHAUST MUFFLER AND SPARK ARRESTER (Special)

	351 435 R91	EXHAUST MUFFLER ATTACHMENT (MACHINE ATTACHMENT)	
	351 642 R91	SPARK ARRESTER ATTACHMENT (MACHINE ATTACHMENT)	
1	351 436 R91	EXHAUST MUFFLER	1
2	351 437 R1	EXHAUST MUFFLER CLAMP	1
	181 374	CAP SCREW, 3/8 x 1-1/2" N.F. HEX HEAD	1
	103 321	LOCKWASHER, 3/8"	1
3	93 082 H	EXHAUST MUFFLER CLAMP NUT	1
4		FOLLOWS REFERENCE NO. 5	
5	351 645 R1	SPARK ARRESTER TOP	1
4	16 290 R1	CAP SCREW, 3/8 x 4-1/2" N.F. HEX HEAD	3
6	4 910 D	SPARK ARRESTER BODY	1
7	351 644 R1	SPARK ARRESTER BASE	1
8	93 082 H	SPARK ARRESTER BASE NUT	3
9	351 643 R1	EXHAUST PIPE	1

ATTACHMENTS

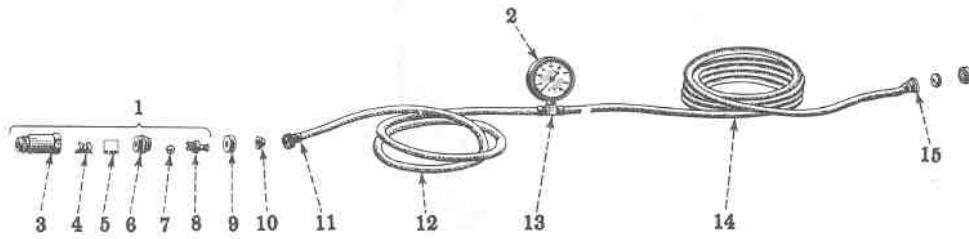


A-1640

Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

PNEUMATIC TIRE PUMP (Enginair) (Special)

	39 604 DA	18 G	TIRE PUMP, COMPLETE WITH GAUGE (FOR 18 MM THREAD SPARK PLUG HOLE) (SCHRADER PUMP 39 622 D WILL WORK)	1
1	40 617 DA	18PE	PUMPING ELEMENT, COMPLETE	1
2	37 895 DA	AG	AIR GAUGE	1
3	61 560 D	18 BN	BARREL, 18 MM	1
4	70 313 D	VCN	VALVE CAGE (2 HALVES)	1
5	61 564 D	VN	FLAP VALVE (2 HALVES)	1
6	69 911 D	HS AT	HEAD	1
7	37 886 D	All 2	STAINLESS STEEL BALL, 5/16"	1
8	70 312 D	UNIV	UNIVERSAL NIPPLE	1
9	61 566 D	ACCN	AIR CHUCK CAP, 3/4"	1
10	61 567 D	182 CR	AIR CHUCK RUBBER, 11/16"	2
11	37 890 D	HCR	HOSE CLAMP RING	4
12	37 892 D	4 H	HOSE (4 FOOT)	1
13	37 893 D	GC	GAUGE CONNECTION	1
14	37 891 D	12 H	HOSE (12 FOOT)	1
15	61 565 D	ACBN	AIR CHUCK BODY, 3/4"	1
	37 896 DA	All 3	CLOTH BAG (WITH INSTRUCTIONS)	1
	69 912 D	SNA	SWIVEL NUT	1

ATTACHMENTS

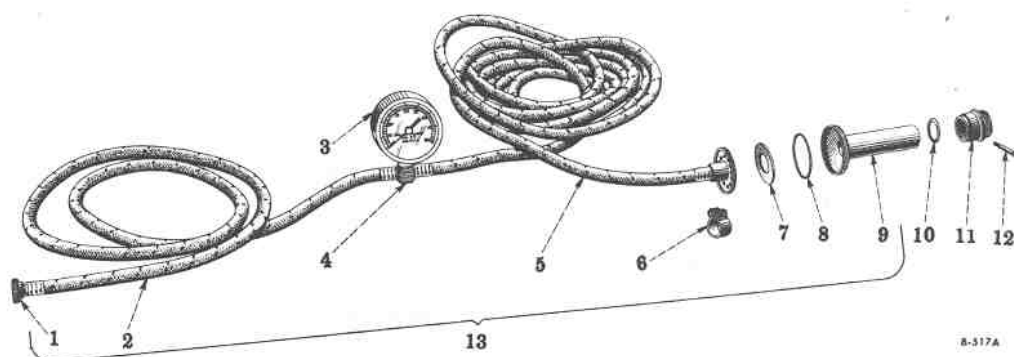

8-317A

Reference numbers only are shown in illustration. Use I H part numbers in ordering.

PNEUMATIC TIRE PUMP (Schrader) (Special)


NO. REQ'D	
A	B

KEY TO LETTERS IN CAPTIONS -

- A. 39 622 D 8888-CG PNEUMATIC TIRE PUMP, 350 489 R91, COMPLETE WITH ADAPTER (FOR 18 MM THREAD SPARK PLUG HOLE) (ENGINEAIR PUMP, 39 604 DA WILL WORK)
- B. 350 342 R91 8888-TGK PNEUMATIC TIRE PUMP, 350 489 R91 WITH ADAPTERS (FOR 10, 14, 18 MM, 1/2 AND 7/8" THREAD SPARK PLUG HOLE)

1	42 813 D	2615-D	PUMP CONNECTOR	1	1
2	42 808 D	8888-9	HOSE (4 FT.)	1	1
3	42 809 D	8888-11	DIAL GAUGE	1	1
4	42 806 D	8888-7	GAUGE CONNECTOR	1	1
5	42 807 D	8888-8	HOSE (12 FT.)	1	1
6	62 602 D	8380	HOSE CLAMP	4	4
7	42 802 D	8888-2	RUBBER DISC	1	1
8	42 812 D	8888-17	FIBRE WASHER	1	1
9	42 800 D	8888-1	SHELL, LONG	1	1
10	42 811 D	8888-16	RUBBER WASHER IN ADAPTER	1	1
11	⊕ 39 625 D	8888-78	ADAPTER, 7/8", 18 MM		1
11	⊕ 39 626 D	8888-18	ADAPTER, 18 MM	1	1
11	⊕ 39 627 D	8888-14	ADAPTER, 14 MM		1
11	⊕ 350 490 R1	8888-12	ADAPTER, 1/2"		1
11	⊕ 350 491 R1	8888-10	ADAPTER, 10 MM		1
12	42 810 D	8888-15	SCREW FOR ADAPTER	1	1
13	350 489 R91	8888-G	TIRE PUMP WITH GAUGE, COMPLETE	1	1
	65 814 D	8954-A	AIR-WATER ADAPTER		1
	140 249 H	4000 MBS-5	VALVE CORES (SET OF 5)		1
	350 483 R91	880 MBS-5	VALVE CAPS (SET OF 5)		1
	350 484 R1	3263	VALVE REPAIR TOOL		1
	350 485 R1	8104	VALVE FISHING TOOL		1
	350 486 R91	9251 BR	AIR-WATER TIRE VALVE		1
	350 488 R1	9350	TIRE PRESSURE GAUGE		1
			⊕ - ADAPTERS ARE INTERCHANGEABLE ON EACH OF THE ABOVE ATTACHMENTS		

ATTACHMENTS

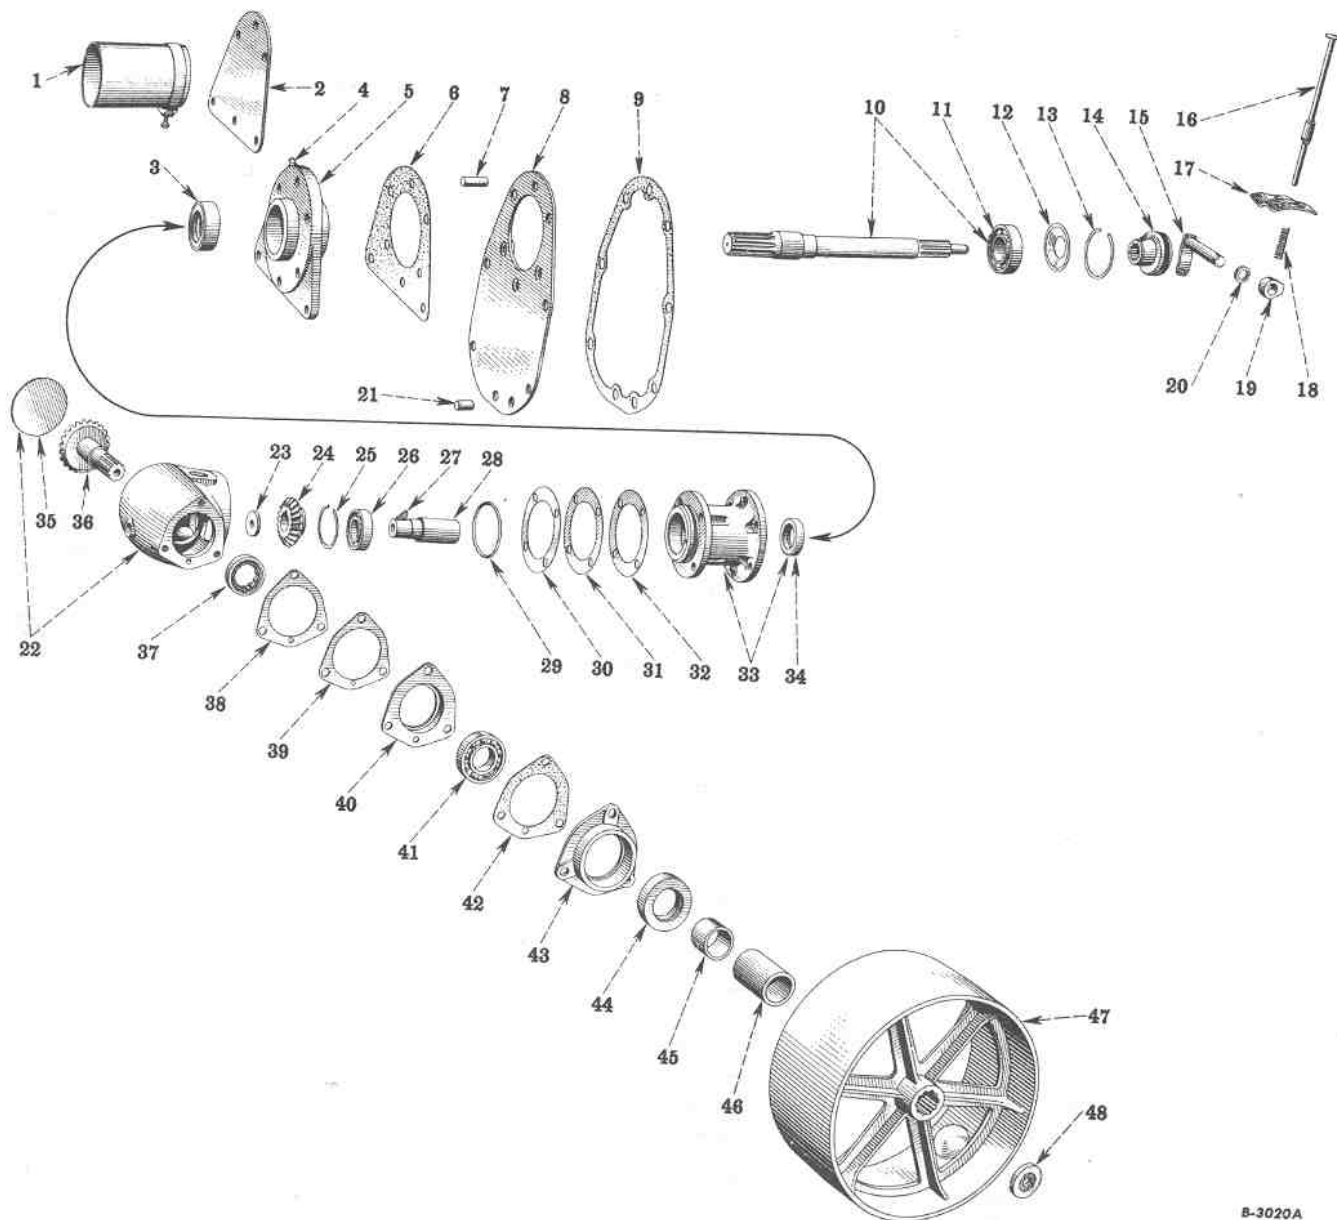


B-3020A

BELT PULLEY AND POWER TAKE-OFF ATTACHMENT (Special)

Reference numbers only are shown in illustration. Use I H part numbers in ordering.

ATTACHMENTS

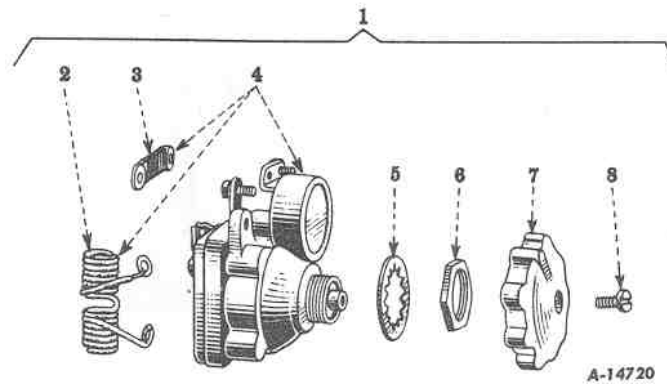


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

LIGHTING SWITCH (Delco-Remy) (Special)

[illegible]

ATTACHMENTS

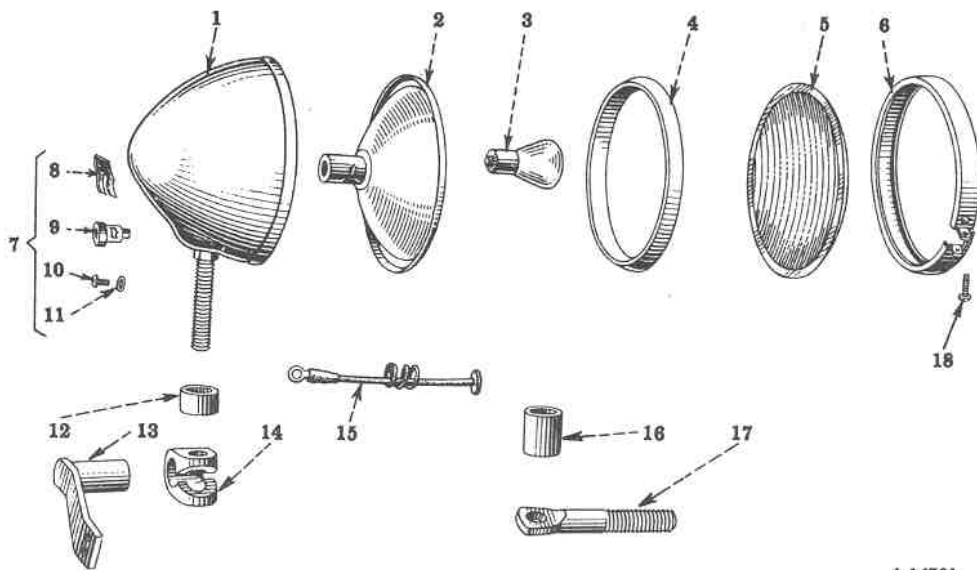

A-14721


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

HEAD LAMPS, REAR LAMP AND BRACKETS (Guide Lamp Corporation) (Special)

1	53 522 D	924009	HEAD OR REAR LAMP BODY	1
	221 120	5930006	GROUND SCREW, NO. 4-40 X 3/16" (SELF-TAPPING)	1
2	53 523 D	5935534	HEAD OR REAR LAMP REFLECTOR	1
3	103 643	MAZDA 1133	HEAD OR REAR LAMP BULB (SC-6, 8 VOLT, 32 CANDLEPOWER) SAME AS 27 369 D	1
4	53 527 D	924639	HEAD OR REAR LAMP GASKET	1
5	350 478 RI	5936059	HEAD OR REAR LAMP LENS	1
6	53 525 D	924188	HEAD OR REAR LAMP MOULDING	1
7	68 417 D	5935509	HEAD OR REAR LAMP TERMINAL PLATE, COMPLETE	1
8	79 408 H	922785	HEAD OR REAR LAMP TERMINAL PLATE SPRING (ORDER 68 417 D)	1
9	79 407 H	922786	HEAD OR REAR LAMP TERMINAL PLATE (ORDER 68 417 D)	1
10	37 536 H	121749	HEAD OR REAR LAMP TERMINAL SCREW	2
11	48 716 H	138530	HEAD OR REAR LAMP TERMINAL LOCKWASHER (SHAKEPROOF NO. 1208)	2
12	49 069 D		REAR LAMP SPACER	1
13	352 121 RI		REAR LAMP BRACKET	1
	181 314		CAP SCREW, 1/4 X 7/8" N.F. HEX HEAD	2
	103 024		HEX NUT, 1/4" N.F.	2
	103 319		LOCKWASHER, 1/4"	2
14	6 780 D		REAR LAMP CLAMP (ORDER 350 920 RI)	1
14	350 920 RI		REAR LAMP CLAMP (WILL WORK FOR 6 780 D)	1
15	53 524 D	924209	HEAD OR REAR LAMP WIRING	1
16	45 569 D		FRONT LAMP SPACER	2
17	351 341 RI		FRONT LAMP POST	2
	218 442		HEX JAM NUT, 5/8" N.C.	2
	103 325		LOCKWASHER, 5/8"	2
18	53 526 D	912048	HEAD OR REAR LAMP MOULDING SCREW	1
	45 640 DA	873 A	HEAD OR REAR LAMP, COMPLETE (6-VOLT DELCO-REMY)	X
	114 774		HEX NUT, 1/2" N.C.	1
	103 323		LOCKWASHER, 1/2"	1

X - AS REQUIRED

ATTACHMENTS

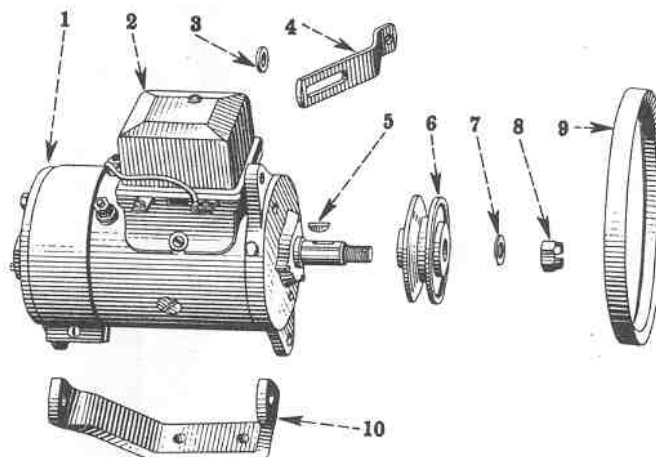


A-14722

Reference numbers only are shown in illustration. Use I H part numbers in ordering.

GENERATOR (Delco-Remy) AND CONNECTIONS (Special)

1	45 634 D	GENERATOR WITH RELAY, 46 412 D (DELCO-REMY No. 1101355)	1
	181 340	CAP SCREW, 5/16 x 1-1/8" N.F. HEX HEAD	2
	103 025	HEX NUT, 5/16" N.F.	1
8	102 644	CASTELLATED HEX NUT, 1/2" N.F.	1
7	Q 1 520	STEEL WASHER, 17/32" I.D. x 1" O.D. x No. 14 GA.	1
	103 320	LOCKWASHER, 5/16"	2
	103 374	COTTER PIN, 3/32 x 1"	1
2	46 412 D	GENERATOR RELAY (DELCO-REMY No. 1116766)	1
3	28 065 D	GENERATOR BRACE SPACER	1
4	351319 RI	GENERATOR BRACE	1
	179 816	CAP SCREW, 5/16 x 3/4" N.C. HEX HEAD	2
	103 320	LOCKWASHER, 5/16"	1
	103 340	STEEL WASHER, 11/32" I.D. x 11/16" O.D. x No. 16 GA.	1
5	7 699 TM	GENERATOR PULLEY HUB KEY (WOODRUFF No. 5, 1/8 x 5/8")	1
6	351 320 RI	GENERATOR PULLEY	1
7		FOLLOWS REFERENCE No. 1	
8		FOLLOWS REFERENCE No. 1	
9	351 321 RI	GENERATOR BELT	1
10	351 318 RI	GENERATOR BRACKET	1
	179 839	CAP SCREW, 3/8 x 1" N.C. HEX HEAD	2
	103 321	LOCKWASHER, 3/8"	2

ATTACHMENTS

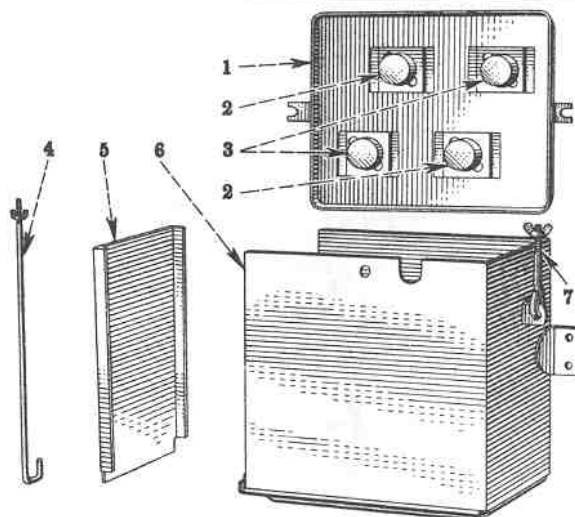


Reference numbers only are shown in illustration. Use I H part numbers in ordering.

BATTERY BOX (Special)

1	351 336 RII	BATTERY BOX COVER, COMPLETE	1
2	65 054 DA	BATTERY HOLD-DOWN RUBBER, LONG	2
3	51 690 D	BATTERY HOLD-DOWN RUBBER, SHORT	2
4	351 339 RI	BATTERY BOX SCREW, FRONT	1
	103 127	WING NUT, 1/4" N.C.	1
	103 339	WASHER, 9/32" I.D. x 5/8" O.D. x No. 16 GA.	1
5	351 334 RI	BATTERY BOX FRONT COVER	1
6	351 330 RII	BATTERY BOX BODY	1
	179 837	CAP SCREW, 3/8 N.C. x 3/4" HEX HEAD	2
	103 321	LOCKWASHER, 3/8"	2
7	351 340 RI	BATTERY BOX SCREW, REAR	1
	103 127	WING NUT, 1/4" N.C.	1
	103 339	WASHER, 9/32" I.D. x 5/8" O.D. x No. 16 GA.	1

ATTACHMENTS

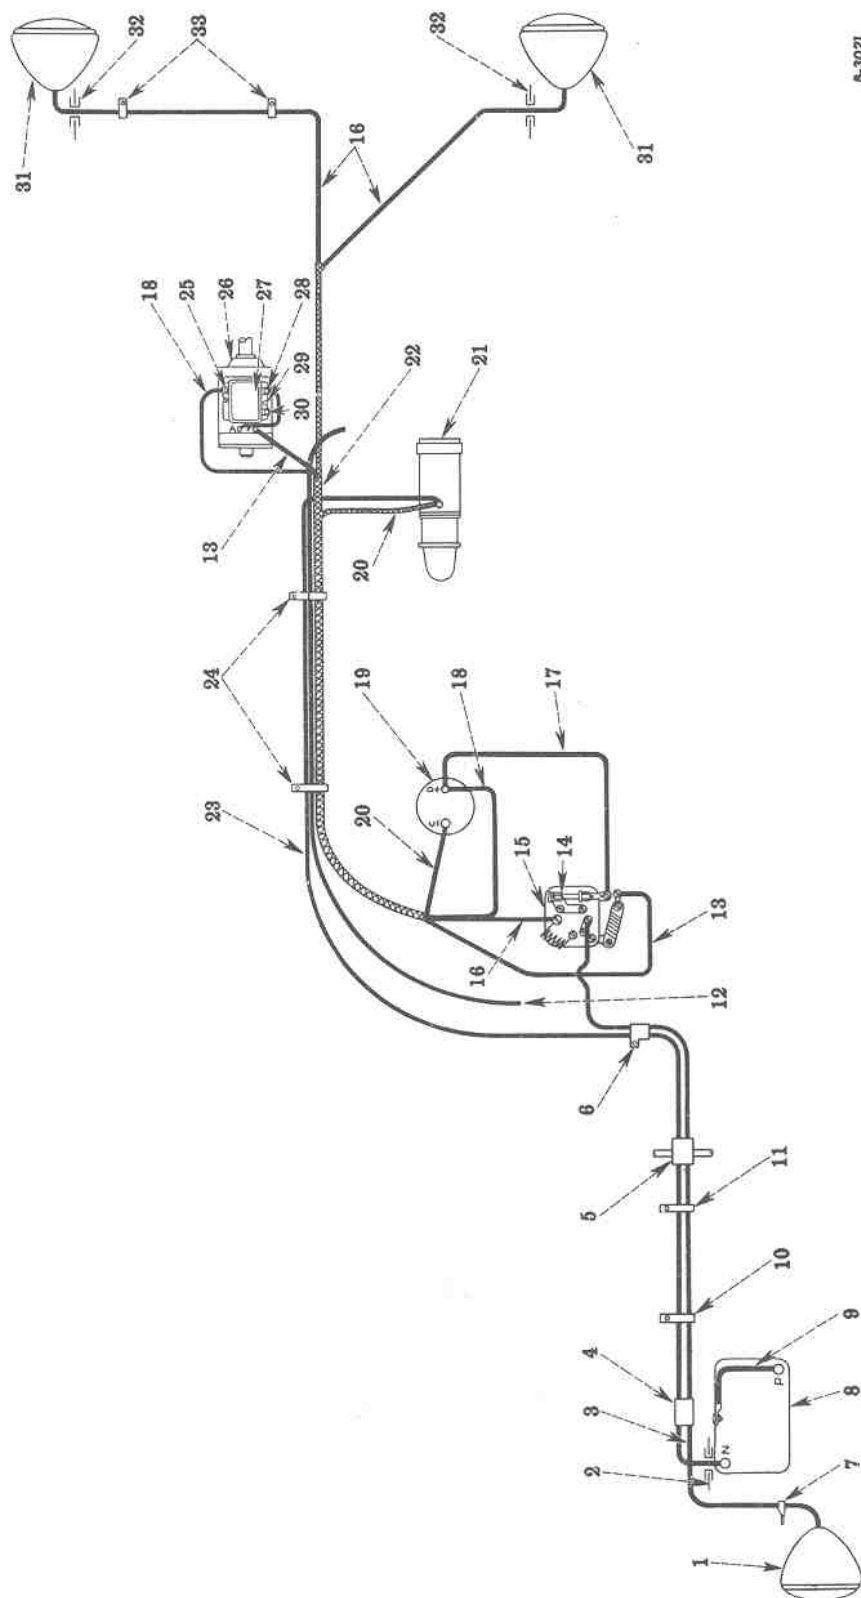


WIRING DIAGRAM — ELECTRIC LIGHTING AND STARTING (Delco-Remy) (Special)

Reference numbers only are shown in illustration. Use I H part numbers in ordering.

Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

ATTACHMENTS

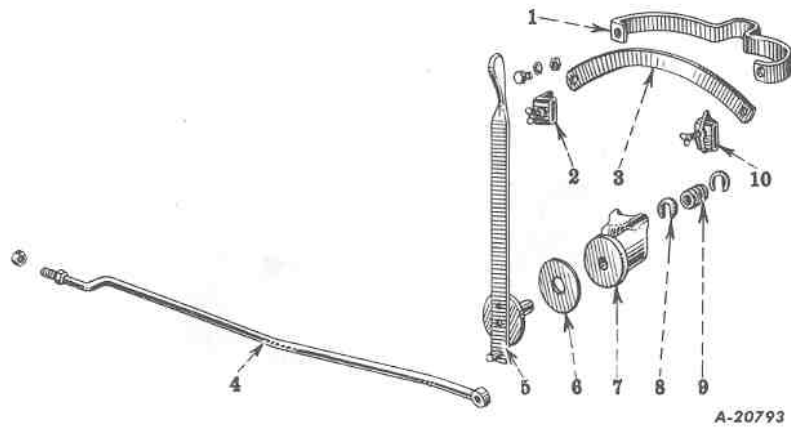


Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

TOUCH-CONTROL LEVER, ROD, QUADRANT AND SUPPORT

1	352 044 R1	TOUCH-CONTROL HAND CONTROL QUADRANT SUPPORT	1
2	350 717 R91	TOUCH-CONTROL STOP INDICATOR WITH THUMB SCREW	1
3	350 712 R1	TOUCH-CONTROL CONTROL QUADRANT	1
	181 311	CAP SCREW, 1/4 x 5/8" N.F. HEX HEAD	2
	103 024	HEX NUT, 1/4" N.F.	2
	103 319	LOCKWASHER, 1/4"	2
4	352 045 R11	TOUCH-CONTROL CONTROL ROD	1
	103 025	HEX NUT, 5/16" N.F.	2
5	352 040 R11	TOUCH-CONTROL HAND CONTROL LEVER	1
	103 372	COTTER PIN, 3/32 x 1/2"	1
6	350 912 R1	TOUCH-CONTROL HAND CONTROL FRICTION DISC	1
7	352 039 R1	TOUCH-CONTROL HAND CONTROL BRACKET	1
	179 847	CAP SCREW, 3/8 x 2" N.C. HEX HEAD	1
	103 321	LOCKWASHER, 3/8"	1
8	351 128 R1	TOUCH-CONTROL HAND CONTROL FRICTION SPRING RETAINER	2
9	350 724 R1	TOUCH-CONTROL HAND CONTROL FRICTION SPRING	1
10	350 713 R91	TOUCH-CONTROL POSITION INDICATOR WITH THUMB SCREW	1


ATTACHMENTS

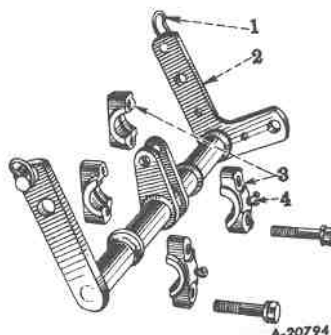

Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

TOUCH-CONTROL ROCKSHAFT AND SUPPORT

[illegible]

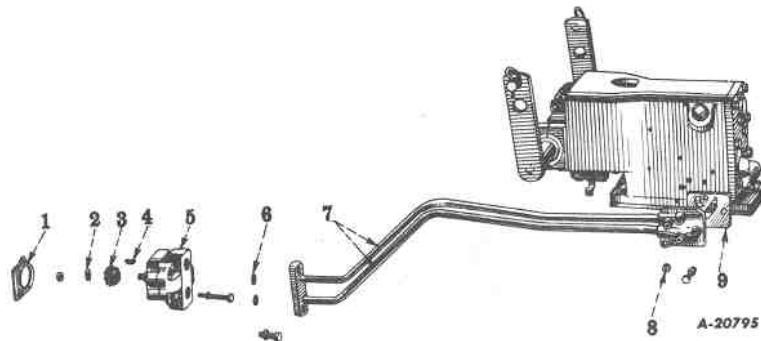


Reference numbers only are shown in illustration. Use I H part numbers in ordering.
Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

TOUCH-CONTROL PUMP, DRIVE GEAR AND MANIFOLD TUBES

1	351 677 R1	TOUCH-CONTROL PUMP GASKET	1
2	352 037 R1	TOUCH-CONTROL PUMP DRIVE GEAR WASHER	1
3	352 038 R1	TOUCH-CONTROL PUMP DRIVE GEAR (10 TEETH)	1
4	106 749	WOODRUFF KEY No. 3, 1/8 x 1/2"	1
5	352 035 R91	TOUCH-CONTROL PUMP (PESCO PRODUCTS No. 051004-040)	1
	179 828	CAP SCREW, 5/16 x 2-1/2" N.C. HEX HEAD	2
	103 320	LOCKWASHER, 5/16"	2
	122 230	LOCK NUT, 3/8" N.F. HEX	1
6	350 429 R1	MANIFOLD FRONT FLANGE SEALING RING	2
7	352 029 R91	TOUCH-CONTROL MANIFOLD WITH 2 PLUGS, 50 410 DA	1
	179 821	CAP SCREW, 5/16 x 1-3/8" N.C. HEX HEAD	3
	179 842	CAP SCREW, 3/8 x 1-3/8" N.C. HEX HEAD	2
	103 320	LOCKWASHER, 5/16"	3
	103 321	LOCKWASHER, 3/8"	2
8	50 410 DA	PIPE PLUG, 1/8" HOLO-KROME	2
9	352 034 R1	MANIFOLD FLANGE GASKET	1
	353 185 R1	TOUCH-CONTROL PUMP BEARING PIN (PESCO PRODUCTS No. 466-12E)	1
	353 826 R1	TOUCH-CONTROL PUMP SHAFT SEAL RING (PESCO PRODUCTS No. 99-435)	1
	353 827 R91	TOUCH-CONTROL PUMP BUSHING SEAL RING (PESCO PRODUCTS No. 99-23)	2
	353 828 R1	TOUCH-CONTROL PUMP BODY SEAL RING (PESCO PRODUCTS No. 99-84)	1



ATTACHMENTS

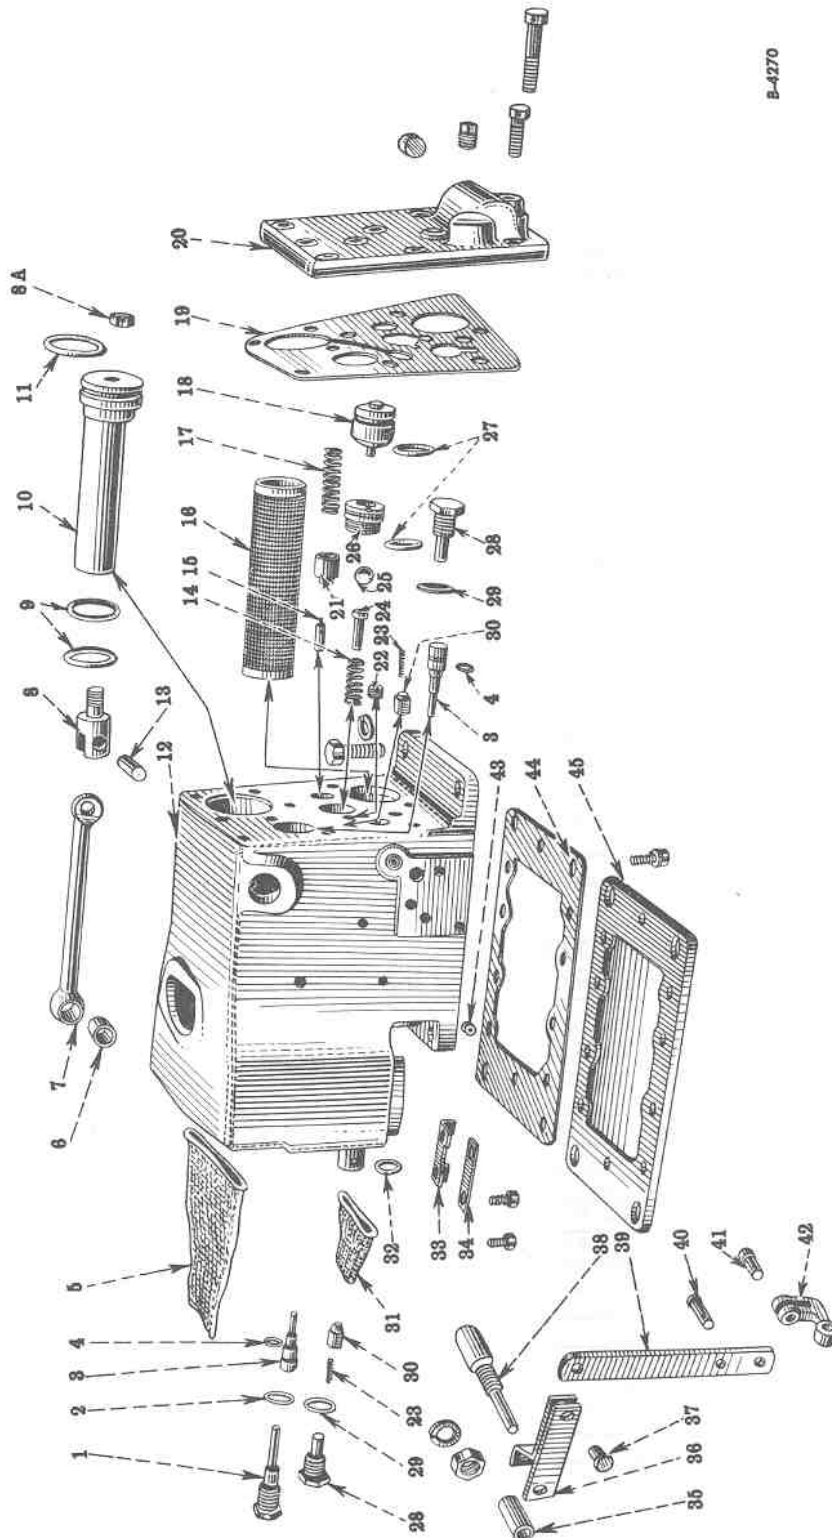

TOUCH-CONTROL CYLINDER BLOCK, CYLINDER HEAD, PISTON, CONNECTING ROD, REGULATOR VALVE, CHECK VALVE AND CONNECTIONS

Reference numbers only are shown in illustration. Use IH part numbers in ordering. Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

ATTACHMENTS

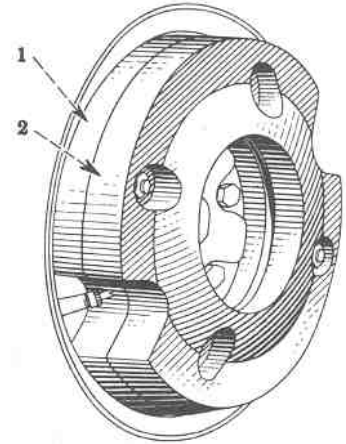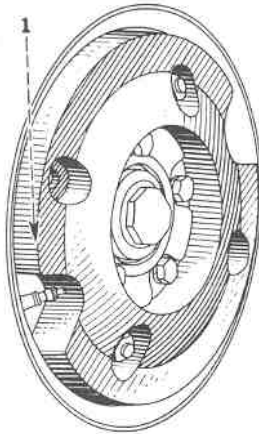



A-14718

Reference numbers only are shown in illustration. Use I H part numbers in ordering.

FRONT WHEEL WEIGHTS ASSEMBLED (Special)

[illegible]

ATTACHMENTS

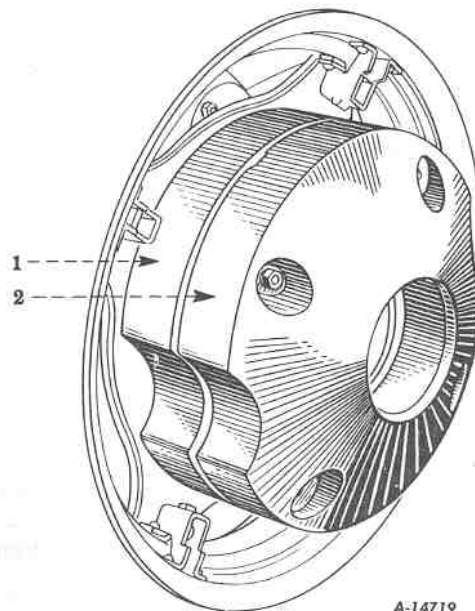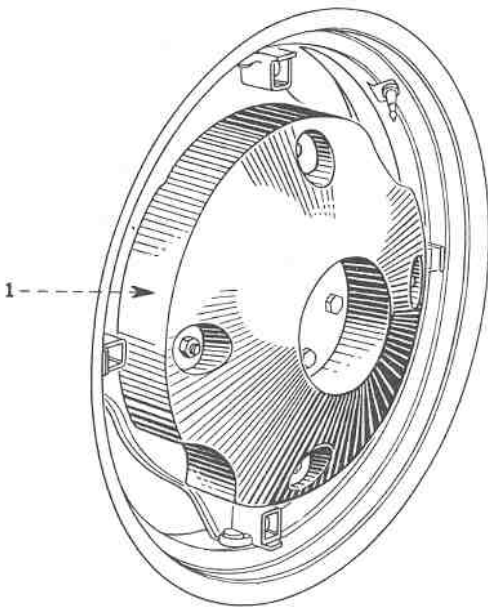

A-14719

Reference numbers only are shown in illustration. Use I H part numbers in ordering.

REAR WHEEL WEIGHTS (Special) (For Tractors equipped with Pneumatic Tires)

[illegible]



**INTERNATIONAL
HARVESTER**

**Order Parts
for Replacements**

Satisfactory and efficient service in the operation of any machine is endangered by the use of inferior parts, as cheap parts invariably mean short life and high cost.

If parts could be manufactured at a lower cost and sold at lower prices without sacrificing quality, this would be done. The right material for the purpose and the knowledge acquired through many years of manufacturing enables International Harvester to produce quality that will not be found in "will fit" parts.