

H. L. Willey

REPAIR
MANUAL
FORD
4-CYLINDER ENGINE
1941-1947

Ford Motor Company

**REPAIR
MANUAL
FORD
4-CYLINDER ENGINE
1941-1947**

*Belongs to: James Warner
3125 Shoemaker Rd
Almont Mi 48003*

Copyright 1947
FORD MOTOR COMPANY
DEARBORN, MICHIGAN
All rights reserved

Ford Motor Company

3695-47

PRICE 25 CENTS

July 7, 1947

FOREWORD

This manual contains information and instructions for the overhaul or repair of the Ford 4-cylinder engines built during 1941-1947. Due to the differences in the various models using these engines, no attempt has been made in this manual to cover the procedures necessary to remove the engine from the vehicle. The procedures start with the engine already removed.

Each chapter in this manual is divided into sections as shown in the table of contents.

Chapter IV gives fits, tolerances, and wear limits in tabulated form. Maximum clearances are included since it is possible for two parts, either of which is satisfactory for further use when considered alone, to have excessive clearance when used together.

Throughout this book, on the first page of each chapter, a list of the major subjects in the chapter is given, each with an assigned section number.

In the inspection and repair chapter, each section contains complete inspection instructions, with wear limits which clearly point out when a part should be reworked or replaced.

Numbers appearing in the various illustrations in bold type are basic part numbers. When ordering parts from Your Ford dealer by these numbers, specify the year and model number of the vehicle.

This is a Repair Manual rather than a Reconditioner's Manual, and some acceptable repair practices would not be acceptable reconditioning practices. In this book, the word "repair" is used to indicate "restore to good working condition" rather than to a "like new" condition.

This book is one of a series of illustrated repair manuals to be published by the Ford Motor Company. These manuals will be available from your local authorized Ford dealer, upon request.

FORD MOTOR COMPANY
Service Department

CONTENTS

	Page
FOREWORD	2
CHAPTER I DESCRIPTION AND DISASSEMBLY	4-9
Section 111 Data	4
112 Accessory Removal	5
113 Engine Disassembly	6-9
CHAPTER II INSPECTION AND REPAIR	10-35
Section 121 Crankshaft and Flywheel	10-12
122 Cylinder Block	12-16
123 Pistons and Connecting Rods	17-22
124 Camshaft and Valve Mechanism	22-26
125 Cylinder Head and Front Cover	26
126 Oil Pump	26-28
127 Water Pump	28-30
128 Governor	30-34
129 Oil Pan, Intake and Exhaust Manifolds	34-35
CHAPTER III ASSEMBLY OF ENGINE	36-43
Section 131 Assembly	36-42
132 Installation of Accessories	42-43
CHAPTER IV FITS AND TOLERANCES	44-47
Section 141 Definition of Fits	44-45
142 Fits and Tolerances	46-47
143 Torque Wrench Readings	47

Chapter

I

DESCRIPTION AND DISASSEMBLY

	Section
Data	111
Accessory Removal	112
Engine Disassembly	113

The Ford 4-cylinder engine (figs. 1 and 2) is of the L-head type, having all cylinders and the upper half of the crankcase cast in one piece. Steel cylinder sleeves are used, which are easily replaced when rebuilding the engine. The distributor is driven directly from the front end of the camshaft.

111. DATA

Type	L-head
Taxable horsepower	16.2
Number of cylinders	4
Bore	3.187 in.
Piston displacement	119.5 cu. in.
Torque	85 lbs. ft. at 1200 RPM
Firing order	1-2-4-3


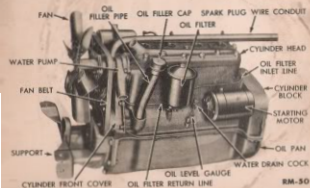


Fig. 1—Left 3/4 Front View of Engine

RM-501

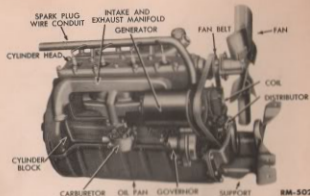

RM-502

Fig. 2—Right 3/4 Front View of Engine

Valve stem clearance to push rods:

Intake	0.010 to 0.012 in.
Exhaust	0.014 to 0.016 in.
Valve lifters	Non-adjustable

112. ACCESSORY REMOVAL.

In the disassembly procedures throughout this manual, disassembly is carried out only to the extent necessary for complete inspection of the parts subject to wear. The replacement or repair of the individual parts thus inspected is referred to as repair.

a. **Remove Generator.** Remove the nuts that secure the generator adjustment bracket to the timing gear side cover and generator. Disconnect the generator wiring. Remove the bolt and washer that secure the generator to the cylinder front cover, and remove the generator (fig. 2).

b. **Remove Oil Filter.** Disconnect the oil inlet line at the cylinder block. Disconnect the oil return line from the governor. Remove the two cap screws that secure the oil filter bracket to the cylinder head. Remove the oil filter and lines (fig. 1).

c. **Remove Distributor and Spark Plug Wires.** Remove the two nuts that secure the spark plug wire conduit to the cylinder head. Remove the two cap screws and lock washers that secure the

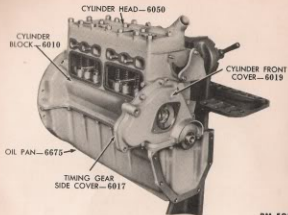


Fig. 3—Stripped Engine

RM-503

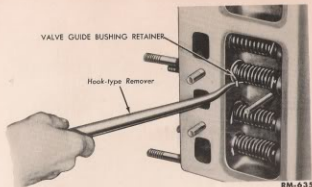


Fig. 4—Removing Valve Guide Bushing Retainer

RM-635

distributor to the cylinder front cover. Remove the distributor and wires.

d. **Remove Carburetor.** Remove the two nuts and lock washers that secure the carburetor to the intake manifold. Remove the carburetor (fig. 2).

e. **Remove Starting Motor.** Loosen the two starting motor cap screws until the starting motor is free of the clutch housing. Lift the starting motor from the engine (fig. 1).

113. ENGINE DISASSEMBLY.

This section contains instructions for the complete disassembly of the stripped engine.

a. **Remove Intake and Exhaust Manifolds.** Remove the nuts and washers that secure the intake and exhaust manifolds to the cylinder block. Lift the manifolds off the cylinder block as an assembly (fig. 2).

b. **Remove Water Pump.** Remove the cap screw and nuts which secure the water pump to the cylinder block. Lift the water pump from the cylinder block.

c. **Remove Clutch Disk.** Press in on the clutch release levers, and install three wood wedges between the clutch release levers and pressure plate cover (fig. 48). Remove the six pressure plate cap screws, pressure plate, and clutch disk.

d. **Remove Flywheel.** Remove the lock wire from the four flywheel cap screws. Remove the four flywheel cap screws and dowel retainer. Tap the flywheel off the dowel pins with a rawhide hammer. Lift the flywheel out of the clutch housing.

e. **Remove Cylinder Head.** Remove all the nuts that hold the head to the cylinder block. Remove the cylinder head and gasket (fig. 3).

f. **Remove Valve Assemblies and Camshaft.** Remove the cylinder front cover (fig. 3) from the cylinder block. Remove the nut and flat washer from each valve chamber cover. Remove the valve guide bushing retainer with a hook-type remover (fig. 4) from all valves that are in the closed position. Turn the crankshaft until those valves which were in an open position are closed. Repeat the above procedure, and remove the remaining valve guide bushing retainers. Remove the valve assemblies from the cylinder block with

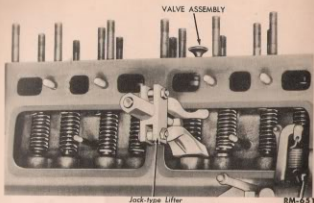


Fig. 5—Removing Valve Assembly

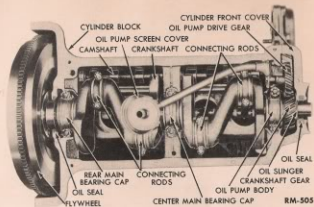


Fig. 6—Underside of Engine with Oil Pan Removed

i. **Remove Crankshaft.** Remove the lock wire and castellated nuts or self-locking nuts from the main bearing caps (fig. 7), and remove the bearing caps. Lift the crankshaft from the cylinder block.

a jack-type lifter (fig. 5). As the valves are removed, tag or otherwise identify them as to the cylinders from which they were removed. Lift the push rods from the cylinder block. Slide the camshaft out of the cylinder block, being careful not to injure the camshaft bearing surface with the sharp corners of the cams.

g. **Remove Oil Pump and Oil Pump Screen Cover Assembly.** Remove the cap screws that secure the oil pan to the cylinder block, and remove the oil pan. Remove the lock wires and cap screws that secure the oil pump screen cover assembly to the oil pump (fig. 6). Remove the oil pump screen cover assembly from the engine.

h. **Remove Connecting Rod and Piston Assemblies.** Remove the two nuts from No. 1 connecting rod. Lift the connecting rod bearing cap from the connecting rod. Tap the connecting rod and piston out of the cylinder block with the handle end of a hammer (fig. 7). Install the connecting rod bearing cap on the connecting rod to prevent the bearing inserts from becoming mixed. Repeat the above procedure to remove the remaining connecting rod and piston assemblies.

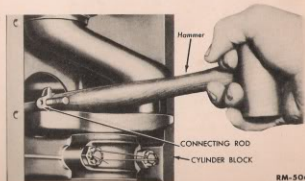


Fig. 7—Removing Connecting Rod and Piston Assembly

Chapter

II

INSPECTION AND REPAIR

Section

Crankshaft and Flywheel.....	121
Cylinder Block.....	122
Piston and Connecting Rods.....	123
Camshaft and Valve Mechanism.....	124
Cylinder Head and Front Cover.....	125
Oil Pump.....	126
Water Pump.....	127
Governor.....	128
Oil Pan, Intake and Exhaust Manifolds.....	129

121. CRANKSHAFT AND FLYWHEEL.

The disassembled crankshaft and flywheel assemblies are shown in figs. 10 and 11.

a. **Crankshaft.** Clean out the drilled oil passages in the crankshaft journals with a piece of wire. Clean the crankshaft thoroughly with cleaning solvent. Replace the crankshaft flange dowels if they are damaged. Replace a crankshaft gear that has chipped, broken, or worn teeth (subpar. (2) below). If the main journals or the crankpin journals are grooved or scored, the crankshaft must be remachined or replaced (subpar. (1) below). Light scores or scratches can be honed, then polished with No. 320 grit polishing paper. Measure


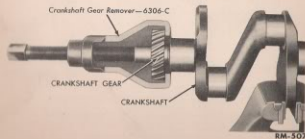


Fig. 8—Removing Crankshaft Gear

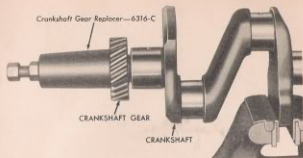

RM-508

Fig. 9—Installing Crankshaft Gear

each journal diameter at a minimum of four places to determine size, out-of-round, and taper. Remachine any journals that are out-of-round more than 0.0015 inch. Remachine journals that taper more than 0.001 inch (subpar. (1) below). Journals that are worn evenly with less than 0.001-inch taper, or less than 0.0015-inch out-of-round, need not be reground if the available bearings will provide not more than 0.003 inch clearance for the main bearings, or not more than 0.005 inch for the crankpin bearings.

(1) **REMACINING CRANKSHAFTS.** Subtract the amount of undersize of the bearings to be used from the original size, and remachine the crankshaft by grinding it to this new size, then polish with No. 320 grit polishing paper, removing not more than 0.0009 inch from the diameter.

(2) **CRANKSHAFT GEAR REPLACEMENT.** Remove the crankshaft gear with a puller that pulls the gear evenly (fig. 8). Remove the woodruff key. To install the crankshaft gear, tap the woodruff key into the crankshaft, and install the gear on the crankshaft with a replacer as shown in fig. 9.

b. **Flywheel.** Clean the flywheel (fig. 11) thoroughly. Replace or reface a flywheel that has an excessively worn or scored friction face. Replace a flywheel ring gear (subpar. (1) below) that is cracked, chipped, or has excessively worn teeth.



RM-585

Fig. 10—Crankshaft Assembly, Disassembled

(1) **FLYWHEEL RING GEAR REPLACEMENT.** Drill a $\frac{1}{4}$ -inch hole nearly through the flywheel ring gear on the engine side of the gear. Split the ring gear at the drilled hole with a chisel, and lift the ring gear off the flywheel. Clean the ring gear recess on the flywheel. Heat the ring gear evenly to 360° F., and place it on the cold flywheel, making sure it is seated in the recess of the flywheel.


(2) **REFACE FLYWHEEL.** Remove just enough material from the clutch friction surface to obtain a smooth, flat surface parallel with the flywheel mounting flange. The same amount of material must also be removed from that portion of the flywheel to which the clutch pressure plate is attached. If the thickness of the flywheel, measured between the friction surface and the flywheel mounting flange, is reduced to less than 0.855 inch in order to obtain a smooth, flat, surface, the flywheel must be discarded.

(3) **CLUTCH PILOT BEARING REPLACEMENT.** Drive the pilot bearing out of the flywheel. Install the pilot bearing into the flywheel with a fiber block or a rawhide hammer (fig. 11).

122. CYLINDER BLOCK.

* Strip off the old gaskets from all the surfaces of the cylinder block. Remove the oil passage plugs from the front and rear of the cylinder block, and clean all oil passages in the cylinder block with steam or compressed air. Scrape all of the carbon from the cylinder block.

a. **Inspection and Repair.** If the valve springs in the cylinder block are corroded or rusted or if there is an excessive amount of sludge in the valve chamber, it is an indication that the cylinder

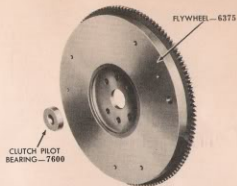

RM-589

Fig. 11—Flywheel and Clutch Pilot Bearing

block might be cracked and should be checked thoroughly. Replace the cylinder block if it is cracked. Replace any expansion plugs (fig. 1) that are loose.


(1) **STUDS.** Replace damaged or broken studs (par. d below).

(2) **VALVE SEATS.** Replace any valve seat insert that is cracked or that is loose in the cylinder block (par. f below). Reface valve seats where there is any indication that the valve has not been seating, if new guides are to be installed, or if the width of the seat (fig. 16) measures more than 0.125 inch (par. e below).

NOTE: If the engine has been completely disassembled, reface all valve seats.

(3) **CYLINDER SLEEVES.** Replace the cylinder sleeves (par. b. below) if a ridge is present at the top, or if the sleeves are collapsed or scored.

(4) **OIL RELIEF VALVE.** Replace the oil relief valve spring (fig. 12) located in the cylinder front cover if its tension is less than 44 ounces or more than 46 ounces when the length of the spring is compressed to 1.40 inches. Install the valve, spring, and valve nut in the cylinder front cover.

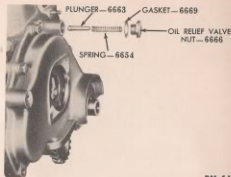

RM-511


Fig. 12—Oil Relief Valve, Disassembled

b. **Steel Sleeve Replacement.** Remove the sleeves from the cylinder block, using a crushing tool (fig. 14). Drive the tool all the way to the bottom of the cylinder, then pull the crushed sleeve out of the cylinder. Install new sleeves, using the replacer as shown in fig. 15. After the sleeves are installed, use a piston (without rings) or a plug gauge in the cylinder to determine if the sleeve was properly installed. If the piston or plug gauge has a tendency to stick, the sleeve was buckled during installation. Remove the damaged sleeve, install a new sleeve, and recheck it (fig. 15).



RM-639

Fig. 13—Removing Cylinder Head Stud

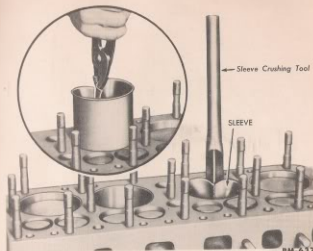

RM-637

Fig. 14—Removing Cylinder Sleeve

c. **Stud Replacement.** Remove all damaged studs with a standard stud puller (fig. 13). To remove a broken stud, indent the end of the broken stud exactly in the center with a center punch. With a small drill, drill into the broken stud to a depth of approximately two-thirds of the length of the remaining portion of the stud, then follow up with a larger drill. The larger drill selected must leave a wall thicker than the depth of the threads. Select an extractor (EZ-out) of the proper size and insert it into the drilled hole, and screw out the remaining part of the broken stud. Install a new stud with a stud driver. Drive all studs until no threads show at the bottom of the stud.

d. **Valve Seat Insert Replacement.** Remove the valve seat inserts, being careful not to damage the cylinder block. If the counterbore is worn, remachine it to obtain a 0.0015 inch to 0.003 inch press fit on the replacement insert. Make sure that the counterbore is clean. Pack the new insert in dry ice for at least 15 minutes, and drive the insert in place in the counterbore, using a driver that assures the insert going into place evenly. Reface the valve seat insert (par. e below).


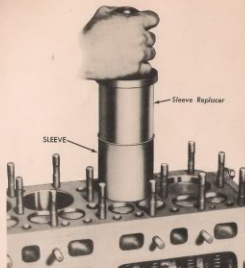


Fig. 15—Installing Cylinder Sleeve

RM-636

e. Valve Seat Refacing. Reface each valve seat with a 90 degree (included angle) valve seat grinding wheel or valve seat cutter until the face of the seat is "cleaned up" and free from pits or nicks. If a valve seat cutter is used, it will be necessary to lap the valves into the seat. The time ordinarily required to lap the valves is saved by using an eccentric type valve seat grinder with which the grinding wheel contacts only one portion of the seat at any given time. If the grinder, including the pilot, is in good condition and the grinding wheel is kept sharp and properly dressed, it ordinarily is not necessary to lap the valves into the seats. After refacing, the width of the valve seat should not be more than 0.125 inch, measured across the face of the seat (fig. 16). If the seat is too wide, remove just enough stock from the top and/or bottom of the seat to reduce the width to 0.062 inch. Use a 120 degree (included angle) valve seat cutter for removing stock from the top of the seat and a 60 degree (included angle) cutter for removing stock from the bottom of the seat.

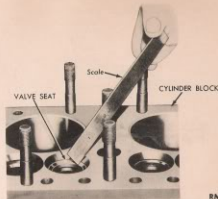

RM-512

Fig. 16—Measuring Width of Valve Seat

123. PISTONS AND CONNECTING RODS.

To disassemble the piston and connecting rod, remove the piston rings with a piston ring expander. Remove the two piston pin retainers (fig. 17), and push the piston pin out of the piston. Scrape the carbon from the piston ring grooves and also from the top of the pistons. Clean all carbon and sludge from the oil holes in the oil ring groove. Make sure all of the oil holes in the connecting rod are open. Clean all parts thoroughly.



RM-513

Fig. 17—Connecting Rod and Piston Assembly, Disassembled

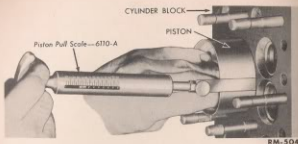


Fig. 18—Fitting Piston to Cylinder Bore

a. Inspection.

NOTE: Usually, the type of wear, or the condition of one of the reciprocating parts, can indicate a fault in other reciprocating parts, i.e. a bent connecting rod could result in unusual wear, on either, or both, the piston or the connecting rod bearing.

(1) **PISTONS.** Discard pistons which are cracked, scored, damaged or have burned spots.

(a) **FITTING PISTONS.** To check the clearance of a piston in a cylinder bore, use a thickness gauge $\frac{1}{2}$ -inch wide and long enough to cover the entire length of a piston, and attach it to a tension scale. Place the gauge on the side of the piston bore, and push the piston in the cylinder so that the side of the piston, which is 90 degrees (right angle) from the piston pin hole, is against the thickness gauge. Withdraw the gauge and observe the reading on the tension scale (fig. 18). The thickness of the gauge to be used and the pounds pull for the various combinations of pistons and cylinder bores are as follows:

Cylinder Bore and Piston Combinations	Steel Piston	
	Gauge Thickness	Pull Pounds
New steel sleeve—new piston.....	0.003	5-8
Worn steel sleeve—new piston.....	0.004	5-8
Worn steel sleeve—worn piston.....	0.005	5-8

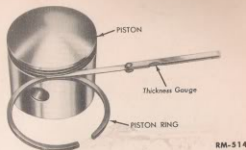


Fig. 19—Checking Ring Groove Width

(b) **PISTON PIN BORES.** Use a new piston pin as a gauge, and insert it in the piston pin bore. If the pin falls through by its own weight, the pin bore is excessively worn and must be reamed and burnished or honed to accommodate an oversize piston pin (par. h below).

(c) **PISTON RING GROOVES.** Check the width of the ring grooves with a new piston ring and a thickness gauge (fig. 19). Discard a piston if the clearance between the ring and the piston exceeds 0.004 inch.

(2) **PISTON PINS.** Replace piston pins that have become worn and measure to less than 0.749 inch.

(3) **CONNECTING RODS.** Replace connecting rods which have damaged studs. To check the piston pin bushing for wear, use a new piston pin as a gauge. If any looseness is felt, rebush the connecting rod (par. c below), or fit an oversize piston pin in both the connecting rod and the piston (par. b below). Check the connecting rods for being twisted. Bent or twisted connecting rods must be aligned (figs. 20 and 21). Where possible, use the original connecting rod for each cylinder. If any of the old rods are used in a different cylinder, file off the old number. Number each rod and cap as follows: Use $\frac{3}{8}$ -inch steel stamps for numbering the connecting rods and caps, placing the new number in the same position as the old one.

§ 123. a. (3)

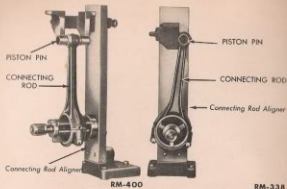


Fig. 20—Checking Connecting Rod for Bend

Fig. 21—Checking Connecting Rod for Twist

(4) **CONNECTING ROD BEARINGS.** Replace connecting rod bearings that are worn, pitted, scored, or discolored (due to overheating). Bearings otherwise satisfactory but with small pits need not be replaced. Bearings must be replaced where pits extend to the side of the bearing and permit oil to escape. Place a plug gauge (a round piece of accurately ground or rolled bar stock) on the inside surface of the bearing, and measure the thickness of the two pieces (fig. 22). Deduct the thickness of the bar stock from the reading obtained to determine the thickness of the connecting rod insert bearing. Replace each connecting rod bearing that measures 0.005 inch or more under its original size.

b. Fitting Oversize Piston Pins.

NOTE: This procedure applies only when piston pins are to be fitted to old pistons. When new pistons are used, the connecting rod bushings must be replaced if the old bushing does not provide the correct fit for a standard piston pin (par. d below).

If a connecting rod bushing or a piston pin hole is worn and its inside diameter does not measure more than 0.7535 inch, it can be reamed and burnished or honed to fit a 0.001 inch or a 0.002 inch oversize piston pin. The correct fit for a piston pin in the connecting rod bushing exists when the pin to be used will pass slowly through the bushing by its own weight when the piston and pin are dry. The

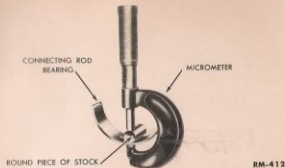


Fig. 22—Measuring Connecting Rod Bearing for Wear

correct fit for a piston pin in the piston exists when it can be inserted in the piston by a light push by hand with the piston and pin temperature at approximately 70 degrees.

e. **Connecting Rod Bushing Replacement.** Drive the bushing from the connecting rod with a suitable driver. Press a new bushing into the connecting rod. Drill the four oil holes in the bushing to the same size as the holes in the connecting rod. Ream and burnish or hone the bushing to 0.7505 inch. Check the alignment of the connecting rod, correcting any misalignment (figs. 20 and 21).

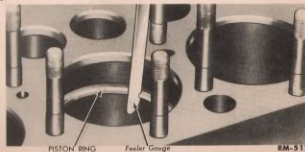


Fig. 23—Measuring Piston Ring End Gap



Fig. 24—Installing Piston Ring on Piston

d. **Assemble Piston, Piston Pin, and Connecting Rod.** Install the piston which was previously fitted (par. a (1) (a) above) for the particular cylinder to the connecting rod previously selected and having the number of that cylinder. Hold the piston in place on the connecting rod. Install a piston pin in the piston and connecting rod, and install a piston pin retainer in each piston pin bore groove.

e. **Fitting and Installing Piston Rings.** Place a new piston ring in the cylinder, and press it about half-way down into the cylinder bore with the bottom of a piston so the ring will be square with the cylinder wall. Measure the ring end gap with a thickness gauge (fig. 23). If the gap is less than 0.012 inch, remove the ring. Place the ring in a jig, and file it with a fine cut file until the correct gap (0.012 to 0.017 inch) is established. If the gap exceeds 0.035 inch, an oversize ring must be used. Roll the new piston ring around its groove in the piston. The top ring should roll freely and not have a clearance of less than 0.0015 inch or more than 0.0035 inch. The lower rings should roll freely and not have a clearance of less than 0.001 inch or more than 0.004 inch. Install the piston ring on the pistons with a piston ring expander (fig. 24). Repeat the entire above procedure for each piston ring.

124. CAMSHAFT AND VALVE MECHANISM.

The disassembled camshaft and valve assemblies are shown in figs. 25 and 26.

a. **Camshaft.** Thoroughly clean the camshaft and camshaft gear. Replace a camshaft that has excessively scored or damaged



Fig. 25—Camshaft, Disassembled

cracks, or worn, corroded, scored, or discolored journals. Replace a camshaft if any of the journals measure less than 1.795 inches. Replace a camshaft gear that is visibly worn, broken, or has chipped teeth.

To remove the camshaft gear, straighten the four tabs on the camshaft gear locking ring. Remove the four cap screws and locking ring. Lift the camshaft gear from the camshaft (fig. 25). To install the camshaft gear, place it on the camshaft, and install the locking ring and the four cap screws. Bend the tabs on the locking ring down onto the cap screws.

b. **Valve Push Rods.** Clean the push rods thoroughly. Replace push rods if the diameter is worn to less than 0.998 inch, or if they

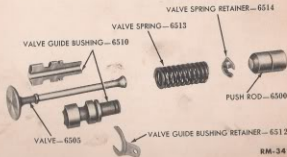


Fig. 26—Valve Assembly, Disassembled



RM-71

Fig. 27—Disassembling Valve Assembly

are scored or cracked. Pressed-steel type push rods may be resurfaced at the bottom end only. Replace any push rods that are less than 1.710 inches long after resurfacing.

c. **Valves, Guides, and Springs.** Hold the valve assembly in the hand, and compress the valve spring as shown in fig. 27. Lift one-half of the valve guide bushing from the assembly. Remove the other half of the valve guide bushing, spring, and spring retainer (fig. 26).

NOTE: *Keep the two halves of each valve guide together in pairs.*


(1) **CLEANING, INSPECTION, AND REPAIR.** Scrape the carbon off the valve heads and stems. Clean the valves, springs, and valve guide bushings.

WARNING: *Do not use caustic or any material that will injure the protective coating of paint on the valve springs. This paint is necessary to protect the spring from crankcase moisture.*

Replace valves that have bent or scored stems. Replace any valves the stems of which are worn to less than 0.3065 inch. Reface pitted, corroded, or burned valves. Replace valves that are pitted, burned, or warped that will not clean up with a light cut of the grinding wheel. If a cutter was used to reface the valve seats in the cylinder block, lap each valve into its seat.

(a) **VALVE SPRINGS.** Replace a valve spring if it has lost its protective coating of paint, or if the tension is less than 30 pounds or is more than 34 pounds when compressed to 2.13 inches (fig. 28).

§ 124. c. (1) (a)

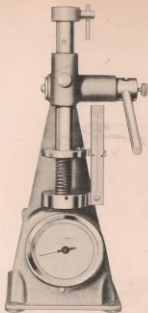

RM-69

Fig. 28—Checking Valve Spring Tension

(b) **VALVE GUIDES.**

NOTE: *Any new valve guides that are to be used should be used as intake valve guides in order to keep the intake valve guide clearance to a minimum.*

Using a valve with a stem diameter of 0.311 inch as a gauge, place the valve in each half of the valve guide bushing, and measure each side with a micrometer, as shown in fig. 29. Replace both halves of any valve guide bushing if the measurement is less than 0.6665 inch. Select guides for each valve, measuring each half with the valve with which it is to be used. Any new guides being used and the old guides having the least wear should be used with the intake valves. Any guide and valve combination measuring more than 0.666 inch is satisfactory for exhaust valves.



RMX-416

Fig. 29—Checking Valve Guide Bushing for Wear

(2) **ASSEMBLING VALVE ASSEMBLY.** Place the valve spring retainer and spring on the valve, and slide both halves of the valve guide bushing in place.

125. CYLINDER HEAD AND FRONT COVER.

Scrape all of the carbon from the cylinder head. Replace a cracked cylinder head or a head where the gasket surface is warped $\frac{1}{32}$ inch or more over the full length of the head. Replace the head if either the threads in the spark plug holes or the water temperature gauge hole is stripped. Repair any threads that are not stripped but are otherwise damaged. If the threads are damaged in either the spark plug holes or the water temperature gauge hole, clean up the threads with the correct size tap.


Replace the cylinder front cover and timing gear side cover if cracked or damaged in any way.

Check the gasket surface of the covers for nicks or damage, and make repairs as required.

126. OIL PUMP.

Clean all parts thoroughly, and blow out all oil passages with compressed air. Lift the driven gear from the pump (fig. 31). Press the drive gear from the driven gear and body (fig. 30).


a. Inspection and Repair. Replace an oil pump body if cracked or damaged. If the inside diameter of the drive gear bushing exceeds 0.566 inch, or the outside diameter of the driven gear shaft is less than 0.560 inch, replace the bushing or shaft (subpars. (1) and (2) below). Replace the fibre drive gear if it is worn, or if it has broken

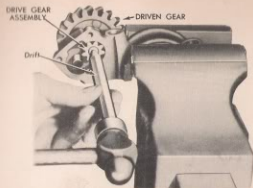

RM-528


Fig. 30—Removing Oil Pump Drive Gear From Driven Gear and Body

or chipped teeth. Replace the driven gear if it is less than 0.560 inch long, or if the teeth are worn, chipped, or broken. Replace a broken or damaged oil pump screen cover assembly.

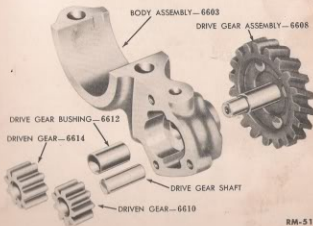

RM-515

Fig. 31—Oil Pump, Disassembled

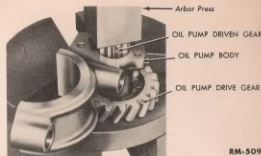

RM-509

Fig. 32—Pressing Oil Pump Driven Gear Onto Oil Pump Drive Gear and Shaft

(1) **DRIVEN GEAR SHAFT REPLACEMENT.** Drive the driven gear shaft from the oil pump body (fig. 31). To install the driven gear shaft, press it into the oil pump body until the end of the shaft is flush with the outside of the oil pump body.

(2) **DRIVE GEAR BUSHING REPLACEMENT.** Drive the bushing from the oil pump body with a driver. To install the bushing, press it into the oil pump body until the inner edge of the bushing is flush with the oil pump body. Ream the bushing from 0.5625 to 0.5630 inch diameter.


b. **Assembly.** Place the drive gear in the oil pump body. Press the driven gear on the drive gear shaft, making sure the flat in the gear is in line with the flat side of the shaft. Install the driven gear in the oil pump body.

127. WATER PUMP.

The disassembled water pump is shown in fig. 34.

a. **Disassembly.** Place the water pump in a vise. Drive the shaft out of the pulley with a driver as shown in fig. 33. Remove the snap ring (fig. 34) from the water pump body. Press the shaft and bearing assembly out of the water pump body (fig. 34).

Remove the water pump seal snap ring, washer, seal and spring from the impeller (fig. 34).

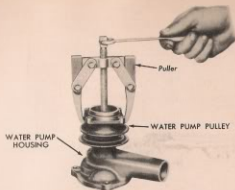

RM-595

Fig. 33—Removing Water Pump Pulley

b. **Cleaning.** Clean all of the metal parts thoroughly with cleaning fluid.

e. **Inspection.** Replace a cracked or damaged water pump body (fig. 34). Replace the water pump seal if it is worn. Replace an impeller if it is cracked, excessively pitted, or if it has broken or damaged fins. Replace a pulley hub that is cracked or has stripped threads. Rotate the water pump bearing. If the bearing binds or has a tendency to stick, replace the bearing assembly. Replace the bearing assembly if there is end play or side play in the shaft.

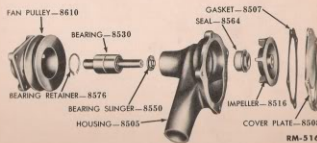


Fig. 34—Water Pump, Disassembled



Fig. 35—Pressing Bearing and Shaft from Pulley Hub

d. Assembly. Press a new bushing in the body if the old one was removed. Dip a new seal and seal washer (fig. 31) in hydraulic brake fluid. Install the spring and seal assembly, seal washer, and snap ring in the impeller. Press the bearing and shaft assembly into the body (fig. 31). Press the impeller onto the shaft until it is flush with the end of the shaft. Install the water pump body snap ring in the body. Press the pulley onto the shaft until the pulley is flush with the shaft.

128. GOVERNOR.

Remove the screw (fig. 36) that secures the driver unit to the body. Lift the driver unit from the body. Remove the hairpin clip, then remove the flat washer, shims, fork base, thrust bearing, upper race and balls (fig. 37) from the shaft. Remove the oil tube elbow connection from the body. Drive the grooved pin out of the fork and lever as shown in fig. 38. Pull the levers out of the body. Remove the dust seal and needle bearing from the body.

a. Inspection. Inspection of the governor should follow the nine procedures as given below.

(1) **DRIVE GEAR.** Replace the drive gear (fig. 39) (par. b below) if it is chipped or worn.

(2) **BALL BEARING BASE.** Replace the ball bearing base (fig. 37) (par. b below) if it is cracked or damaged in any way.

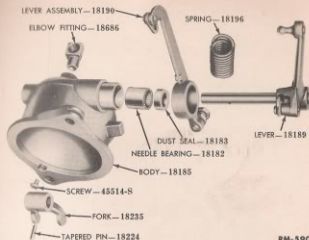


Fig. 36—Governor, Disassembled

(3) **LOWER RACE ASSEMBLY.** Replace the lower race assembly (fig. 37) if the plate is pitted, grooved or if the bearing is worn or damaged.

(4) **DRIVE SHAFT.** Replace the drive shaft (fig. 37) (par. c below) if the plate is loose on the shaft or if the slots in the plate are worn.

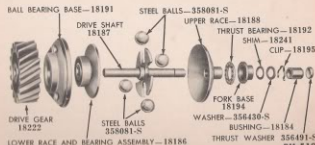


Fig. 37—Governor Drive Shaft, Disassembled



Fig. 38—Driving Grooved Pin from Fork and Lever



Fig. 39—Removing Governor Drive Gear

RM-632

RM-583

(5) **BALLS.** Replace a ball that has flat spots, pits, or that is damaged in any way. A discolored ball is due to a chemical reaction and does not effect the serviceability of a ball.

(6) **UPPER RACE.** Replace the upper race (fig. 37) if it is grooved or pitted.

(7) **THRUST WASHER.** Replace the thrust washer (fig. 37) if any of the balls are missing, or if any of the balls have flat spots.

(8) **FORK BASE.** Replace the fork base (fig. 36) if it is worn or damaged.

(9) **BODY.** Replace the body (fig. 36) if it is cracked or if the trunnion for the manual lever measures less than 0.916 inch. Replace the bushing (par. c below) (fig. 37) if there is more than 0.005 inch clearance between the shaft and bushing. Replace the needle bearing if any of the needles are flat, or if any are missing. Always replace the grease seal if the shaft has been removed. Replace the fork if the bearing surface is worn flat.



Fig. 40—Removing Governor Bushing



Fig. 41—Installing Governor Bushing

RM-634

RM-633

b. **Repair.** To replace the drive gear or ball bearing base, remove the drive gear from the shaft with a puller. Remove the ball bearing base and lower race from the shaft as an assembly. Press the lower race out of the ball bearing base. To assemble the shaft, press the lower race assembly in the ball bearing base. Install the ball bearing base assembly on the short end of the shaft (fig. 37). Press the gear on the shaft until the shaft is flush with the face of the gear.

To replace the bushing, remove the elbow connection from the body. Working through the elbow opening, drive the pin out of the fork and shaft with a small punch. Remove the levers from the body. Remove the bushing with an EZ-out type puller (fig. 40). To install the bushing, place the thrust washer in the body (fig. 37), and drive the bushing into the housing with a driver equipped with a pilot (fig. 41). Install the levers and fork in the body (fig. 36). Drive a new grooved pin in the fork and shaft. Install the elbow connection in the body.

c. **Assembly and Adjustments.** To assemble the shaft assembly, place the four balls in position on the shaft, and install the upper race (fig. 37) over the balls. Install the thrust bearings and fork base on the shaft (fig. 37). Install the flat washer, shims, and hairpin clip (fig. 36) on the shaft.

To adjust the shaft, clamp it and the driver assembly in the governor setting gauge as shown in fig. 42. The clearance between the washer and fork base should be 0.220 inch to 0.230 inch. Add



RM-629

Fig. 42—Measuring Clearance
Between Washer and
Fork Base

RM-630

Fig. 43—"Go" and "No Go" Gauge
Inserted Behind Governor
Lever

or remove the 0.010 inch spacers as required until the correct clearance is established.

To install the drive shaft assembly in the body, install the lever and fork in the body, securing it with a grooved pin. Position the drive shaft assembly in the body, and install the governor body screw in the body.

To check the governor arm adjustment, install the governor on the governor setting gauge, and tighten the wing nut on the gauge finger tight. Hold the governor lever in the wide open position, and insert the "GO" and "NO GO" gauge as shown in fig. 43. If the gauge cannot be inserted, the clearance is insufficient and must be adjusted. If only the first step can be inserted, the clearance is satisfactory. If the second step can be inserted, the clearance is excessive and must be adjusted.


If the clearance is either insufficient or excessive, lay the governor arm across the bosses on the gauge (figs. 44 and 45). Strike the center of the governor arm with a light hammer. Recheck the arm adjustment.

129. OIL PAN, INTAKE AND EXHAUST MANIFOLDS.

Clean the oil pan thoroughly. Replace an oil pan that has stripped threads in the drain plug hole, or one that is badly dented, distorted, or cracked. Replace the oil pan drain plug and oil pump screen if damaged.



RM-631

Fig. 44—Correcting Insufficient
Clearance on Governor
Arm

RM-628

Fig. 45—Correcting Excessive
Clearance on Governor
Arm

To clean the intake and exhaust manifolds, scrape off all the carbon and all parts of the old gaskets. Clean the manifolds thoroughly.

Replace a manifold that is cracked or broken. Replace broken or damaged manifold studs (sec. 122).

Chapter III

ASSEMBLY OF ENGINE

Assembly	131
Installation of Accessories	132

131. ASSEMBLY.

Before assembling the component parts of the engine, make sure that each part is in a satisfactory condition for use (Chapter II).

a. **Install Crankshaft.** Install the three upper halves of the main bearing inserts in the cylinder block. Install the three lower halves of the main bearing inserts in the two main bearing caps and oil pump body. Coat the main bearing inserts with a light film of oil. Install the crankshaft rear bearing oil seal retainer and seal in the rear of the cylinder block. Place the crankshaft in the cylinder block, and install the main bearing caps and oil pump body on the cylinder block. Install the main bearing cap nuts or self-locking nuts and tighten them from 80 to 90 pounds-feet if using self-locking nuts. Tighten from 75 to 80 pounds-feet if using castellated nuts. Pry the crankshaft forward and insert a feeler gauge as shown in Fig. 46.

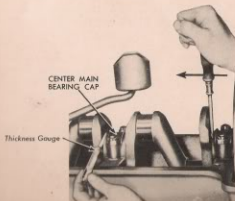


Fig. 46—Measuring Crankshaft End Play

Section

RM-586

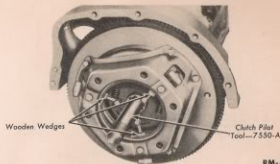


Fig. 47—Installing Clutch Disk and Pressure Plate

If the clearance exceeds 0.006 inch or is less than 0.002 inch, install a different center main bearing insert with a thicker flange to reduce the end play, or one with a thinner flange to increase the end play. Install lock wire in all of the main bearing caps.

b. **Install Flywheel.** Place the flywheel in place on the crankshaft. Make certain that there is no foreign matter or burrs between the flywheel and crankshaft. Install the dowel retainer and cap screws. Tighten the cap screws from 65 to 70 pounds-feet. If self locking cap screws are used, tighten from 75 to 80 pounds-feet. Check the flywheel runout with an indicator. If the flywheel has a runout of more than 0.005 inch, take the flywheel off and turn it one-half turn on the crankshaft, and install the dowel retainer and cap screws. If the runout is still more than 0.005 inch, replace or reface the flywheel. Install lock wire in the four cap screws.

c. **Install Clutch Disk and Pressure Plate.** Block the three clutch release levers down with wooden blocks (fig. 47). Position the clutch disk on the flywheel, and install a clutch pilot tool into the pilot bearing and disk. Position the pressure plate on the flywheel. Install and tighten the six lock washers and cap screws. Remove the clutch pilot tool and the wooden blocks from the pressure plate.

d. **Install Camshaft Assembly.** Install the camshaft in the cylinder block, being careful not to damage the camshaft bearing



Fig. 48—Timing Marks

RM-518

surface with the sharp corners of the cams. Make sure the timing mark on the camshaft gear is in line with the timing mark on the crankshaft gear (fig. 48).

e. **Install Push Rod and Valve Assemblies.** Place a push rod in each push rod bore. If any of the push rods stick in the bore, they are too tight and must be replaced. Place each valve assembly in its respective port, and install the valve guide bushing retainers (fig. 49). Turn the camshaft until No. 1 push rod is resting on the heel of the cam (fig. 50). With a thickness gauge, check the clearance between the push rod and the end of the valve stem (fig. 51). If the

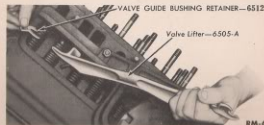


Fig. 49—Installing Valve Guide Bushing Retainer

RM-656

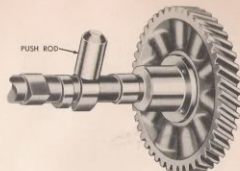


Fig. 50—Push Rod on Heel of Cam

RM-519

clearance exceeds 0.012 inch intake and 0.016 inch exhaust, select a longer valve, or reface the valve or valve seat to decrease the clearance. If the clearance is less than 0.010 inch intake or 0.014 inch exhaust, select a shorter valve or remove the valve assembly, and grind the lower end of the valve stem until 0.010 to 0.012 inch (intake) and 0.014 to 0.016 inch (exhaust) is established.

f. **Install Connecting Rod and Piston Assemblies.** Select the piston assemblies for each cylinder as outlined in section 123. Oil

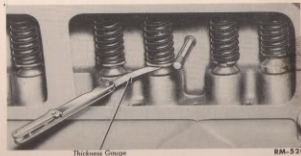


Fig. 51—Checking Clearance Between Valve Stem and Push Rod

RM-520

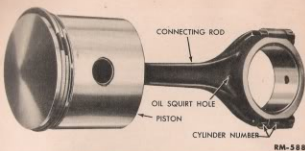


Fig. 52—Assembled Connecting Rod and Piston, Showing Oil Squir Hole

the piston rings. Place No. 1 connecting rod and piston assembly in the No. 1 cylinder with the oil squirt hole in the connecting rod facing toward the front of the engine (fig. 52). Install a piston ring compressor on the piston rings, and tap the piston down into the cylinder with the handle end of a hammer (fig. 53). Place one-half of the connecting rod insert bearing in the connecting rod and the other half in the connecting rod bearing cap. Coat the connecting rod insert bearings with a light film of oil. Carefully position the connecting rod on the crankpin, and install the bearing cap on the connecting rod, making sure the number on the bearing cap is toward the camshaft side of the engine. Make sure that the insert bearings are not jarred out of place. Install, but do not tighten, the nuts. Repeat the above procedure when installing the other connecting rod and piston assemblies. Tighten all the connecting rod nuts from 35 to 40 pounds-feet, and install a cotter pin in each rod

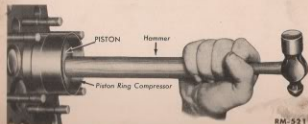


Fig. 53—Installing Connecting Rod and Piston Assembly



Fig. 54—Measuring Clearance Between Camshaft Gear and Cylinder Block

nut. If Marsden nuts (lock nuts) are used, tighten them from 40 to 45 pounds-feet.

g. Install Oil Pump Cover Assembly. Place the oil pump driven gear (fig. 31) on the shaft in the oil pump. Install the oil pump screen cover assembly and gasket onto the oil pump. Secure the screen cover assembly to the oil pump body with the three cap screws and lock wire.

h. Install Cylinder Front Cover and Camshaft Gear Side Cover. Hold the camshaft gear side cover and gasket in place on the cylinder block, and install the two lock washers and cap screws. Install the oil slinger on the crankshaft.

NOTE: Soak the crankshaft packing in oil for two hours before installation.

Install the crankshaft packing in the recess provided in the cylinder front cover. Insert a new gasket and cylinder front cover on the engine. Insert a thickness gauge between the camshaft gear and cylinder block while forcing the camshaft ahead with a hammer handle (fig. 54). If a clearance of more than 0.004 inch exists, replace the cylinder front cover.

i. Install Oil Pan.

NOTE: Soak the crankshaft packing in oil for two hours before installation.

Install the packing in the recess at each end of the oil pan. Coat the bottom machined surface of the crankcase with grease to hold the oil pan gasket in place. Install the oil pan gasket on the cylinder block. Position the oil pan on the cylinder block, and install the cap screws.

j. **Install Crankshaft Pulley.** Place the crankshaft pulley on the crankshaft. Turn the pulley by hand until the slot in the pulley is lined up with the woodruff key in the crankshaft. Drive the pulley on the crankshaft with a fiber block. Install the crankshaft ratchet.

k. **Install Cylinder Head.** Place a new head gasket on the cylinder block. Make sure there is no foreign matter either in the cylinders or on the surface of the cylinder head or block. Place the cylinder head on the cylinder block. Install and tighten the cylinder head nuts from 50 to 60 pounds-feet. When tightening nuts, start from a centrally located nut, and tighten alternately each way.

l. **Install Water Pump.** Position the water pump and gasket on the cylinder block, and install the nuts and cap screw.

m. **Install Intake and Exhaust Manifolds.** Place the intake and exhaust manifold gaskets on the cylinder block studs. Secure the manifold to the cylinder block with the four nuts.

132. INSTALLATION OF ACCESSORIES.

The following instructions are based on the assumption that the various accessories are in good working order. Overhaul or repair accessories before installation if required.

a. **Install Starting Motor.** Position the starting motor (fig. 1) on the cylinder block, and tighten the two starting motor cap screws.

b. **Install Carburetor.** Place the carburetor in place on the intake manifold (fig. 2). Install and tighten the two carburetor nuts and lock washers.

c. **Install Distributor and Spark Plug Wires.** Place the gasket in position on the distributor. Place the distributor in position on the cylinder front cover, making sure that the tang on the distributor shaft is entered in the slot in the camshaft. Secure the distributor to the cylinder front cover with two cap screws and lock washers. Secure the spark plug wire conduit to the cylinder head with the two cap screws.

d. **Install Oil Filter.** Secure the oil filter to the cylinder head (fig. 1) with the two cap screws. Connect the oil filter return line to the governor and oil filter. Connect the oil filter inlet line to the connection located at the right-hand side of the cylinder block and to the oil filter.

e. **Install Generator.** Hold the generator in place on the cylinder front cover (fig. 2). Install the cap screw and washer, but do not tighten until the fan belt is adjusted after the engine is installed.

Chapter
IV

FITS AND TOLERANCES

Definition of Fits	141
Fits and Tolerances	142
Torque Wrench Readings	143

141. DEFINITION OF FITS.

The Table of Fits and Tolerances (Sec. 142) gives the original clearance established between various parts at the time of manufacture, as well as wear and limit clearances that indicate to what point the clearance may increase before the parts must be replaced. These clearances are based on the parts involved, all being at 70° F. The following definitions of the various types of fits are given to assist in arriving at the correct amount of clearance between parts not included in section 142, as well as to give a better appreciation of why the various tolerances must be adhered to. Generally speaking, all bores are made to a standard size (so that standard reamers, plug gauges, etc., may be used) with a plus tolerance. The maximum size of the male parts is usually a standard size less the minimum clearance required for the type of fit desired. The minimum size for male parts is the maximum size minus the tolerance.

a. **Wring Fit.** A wring fit is the type of fit required between a bore and a plug gauge, when using the plug gauge, to determine the inside diameter of the bore. With a wring fit, it is necessary to turn or wring the plug gauge or part to force it through the bore. This type of fit does not provide space for a film of oil.

b. **Slip Fit.** A slip fit exists when the male part is slightly smaller than the female part and involves less clearance than a running fit (par. c below). An example of the minimum allowable clearance for a slip fit would be a piston pin that, from its own weight, would pass slowly through the connecting rod bushing (bushing and pin both in a vertical position). In most cases (except where only a limited move-

§ 141. b.

3095-47

ment of the parts is involved) slip fits are specified when, due to anticipated expansion (par. f below) of the female part, enough additional clearance will result to change this type of fit to a running fit (par. c below) and provide adequate clearance for a film of oil.

c. **Running Fit.** A running fit is a fit providing enough clearance for a continuous film of oil between the two parts. A running fit usually requires 0.001 inch for oil film plus a minimum of 0.001 inch for each 1 inch of diameter (par. f below).

d. **Press Fit.** A press fit is one that requires force to enter the male part into the bore. Accepted practice for press fits is to have the male part larger by 0.001 inch for each inch of diameter than the bore into which it is to be pressed.

e. **Shrink Fit.** Generally speaking, a shrink fit is tighter than a press fit. The amount of the shrink ranging from 0.001 inch to 0.002 inch for each 1 inch of diameter, and in some cases even more. The parts having a press fit may be assembled either by force or by the shrink method. There are two methods of shrinking two parts together, either one of which may be used (both may be used in some instances). One method involves expansion of the female member by heating. The other method involves contracting the male member by chilling with dry ice or liquid air.

f. **Effect of Expansion on Fits.** Allowances are made in establishing fits on parts that are exposed to higher temperatures in order to provide for the anticipated expansion of the part during operation and still provide adequate clearance for the type of fit required. Allowances must also be made for unequal expansion of dissimilar materials. Absolute minimum allowance for expansion of parts exposed to flame or exhaust gases (pistons, piston rings, and valves) is 0.001 inch for each 1 inch of diameter or length. In anticipating the expansion of a piston to make allowances for the additional clearance required in the cylinder, 0.001 inch for each 1 inch of diameter is added. In anticipating the expansion of a piston ring, to make allowances for the additional gap required between the ends of the piston ring, 0.001 inch for each linear inch of the part is added.

3095-47

§ 141. f.

142. FITS AND TOLERANCES.

CYLINDER BLOCK

<u>FIT LOCATION NAME</u>	<u>ORIGINAL FIT TOLERANCES</u>	<u>FIT WEAR LIMIT</u>	<u>TYPE OF FIT</u>
Cylinder bore out-of-round	—	0.003 in.	—
Cylinder bore taper or maximum wear	—	0.006 in.	—
Clearance between camshaft and bearing	0.001 in. to 0.002 in.	0.004 in.	Running
Clearance between push rod and push rod bore	0.0005 in. to 0.0015 in.	0.003 in.	—

CONNECTING ROD AND PISTON ASSEMBLY

<u>FIT LOCATION NAME</u>	<u>ORIGINAL FIT TOLERANCES</u>	<u>FIT WEAR LIMIT</u>	<u>TYPE OF FIT</u>
Connecting rod side clearance	0.004 in. to 0.008 in.	0.011 in.	—
Piston pin clearance in connecting rod	0.0002 in. to 0.0005 in.	0.0015 in.	Slip
Piston pin clearance in piston	0.000 in. to 0.0005 in.	0.0015 in.	(Light Push)
Piston and cylinder	6 pounds to 10 pounds pull with a thickness gauge 0.003 in. and 1/2 in. wide	6 pounds to 10 pounds pull with a thickness gauge 0.005 in. and 1/2 in. wide	—
Top piston ring to groove side clearance	0.0015 in. to 0.0030 in.	0.004 in.	—
Balance of piston ring to groove side clearance	0.0010 in. to 0.0025 in.	0.004 in.	—
Piston ring end gap	0.012 in. to 0.017 in.	0.035 in.	—

VALVES

<u>FIT LOCATION NAME</u>	<u>ORIGINAL FIT TOLERANCES</u>	<u>FIT WEAR LIMIT</u>	<u>TYPE OF FIT</u>
Stem to guide clearance (exhaust)	0.0025 in. to 0.0045 in.	0.006 in.	Running
Stem to guide clearance (intake)	0.0015 in. to 0.0035 in.	0.005 in.	Running
Valve seat angle	45 degrees	—	—
Spring tension at 2.125 inches	31 to 34 lbs.	30 lbs.	—
Clearance between valve stem and push rod (exhaust)	0.14 to 0.16 in.	0.015 in.	—
Clearance between valve stem and push rod (intake)	0.010 to 0.012 in.	0.013 in.	—

OIL PUMP

Clearance between driven gear and shaft	0.002 in. to 0.0035 in.	0.005 in.	Running
---	-------------------------	-----------	---------

CRANKSHAFT

<u>FIT LOCATION NAME</u>	<u>ORIGINAL FIT TOLERANCES</u>	<u>FIT WEAR LIMIT</u>	<u>TYPE OF FIT</u>
Crankshaft end play	0.002 in. to 0.006 in.	0.008 in.	—
Main bearing clearance	0.000 in. to 0.003 in.	0.005 in.	Running
Crankpin to connecting rod clearance	0.0013 in. to 0.0035 in.	0.005 in.	Running and Floating

143. TORQUE WRENCH READINGS.

Main bearing nuts	75 to 80 lbs.-ft.
Self-locking main bearing bolts	100 lbs.-ft.
Connecting rod castellated nuts	35 to 40 lbs.-ft.
Connecting rod self-locking nuts	40 to 45 lbs.-ft.
Cylinder head nuts	50 to 55 lbs.-ft.
Flywheel cap screws	65 to 75 lbs.-ft.
Flywheel self-locking cap screws	75 to 85 lbs.-ft.
Spark plugs	24 to 30 lbs.-ft.