



BRAKES

ALPHABETICAL INDEX

DESCRIPTION	PAGE
Brake Shoes (without cab)	7-221
Braking System (without cab)	7-219
Drums (without cab)	7-221
Hand Brake Lever (with cab)	7-231
Hand Brake Linkage (with cab)	7-229
Master Cylinders (with cab)	7-223
Pedals (with cab)	7-223
Slave Cylinders (with cab)	7-225
Tubes (with cab)	7-225

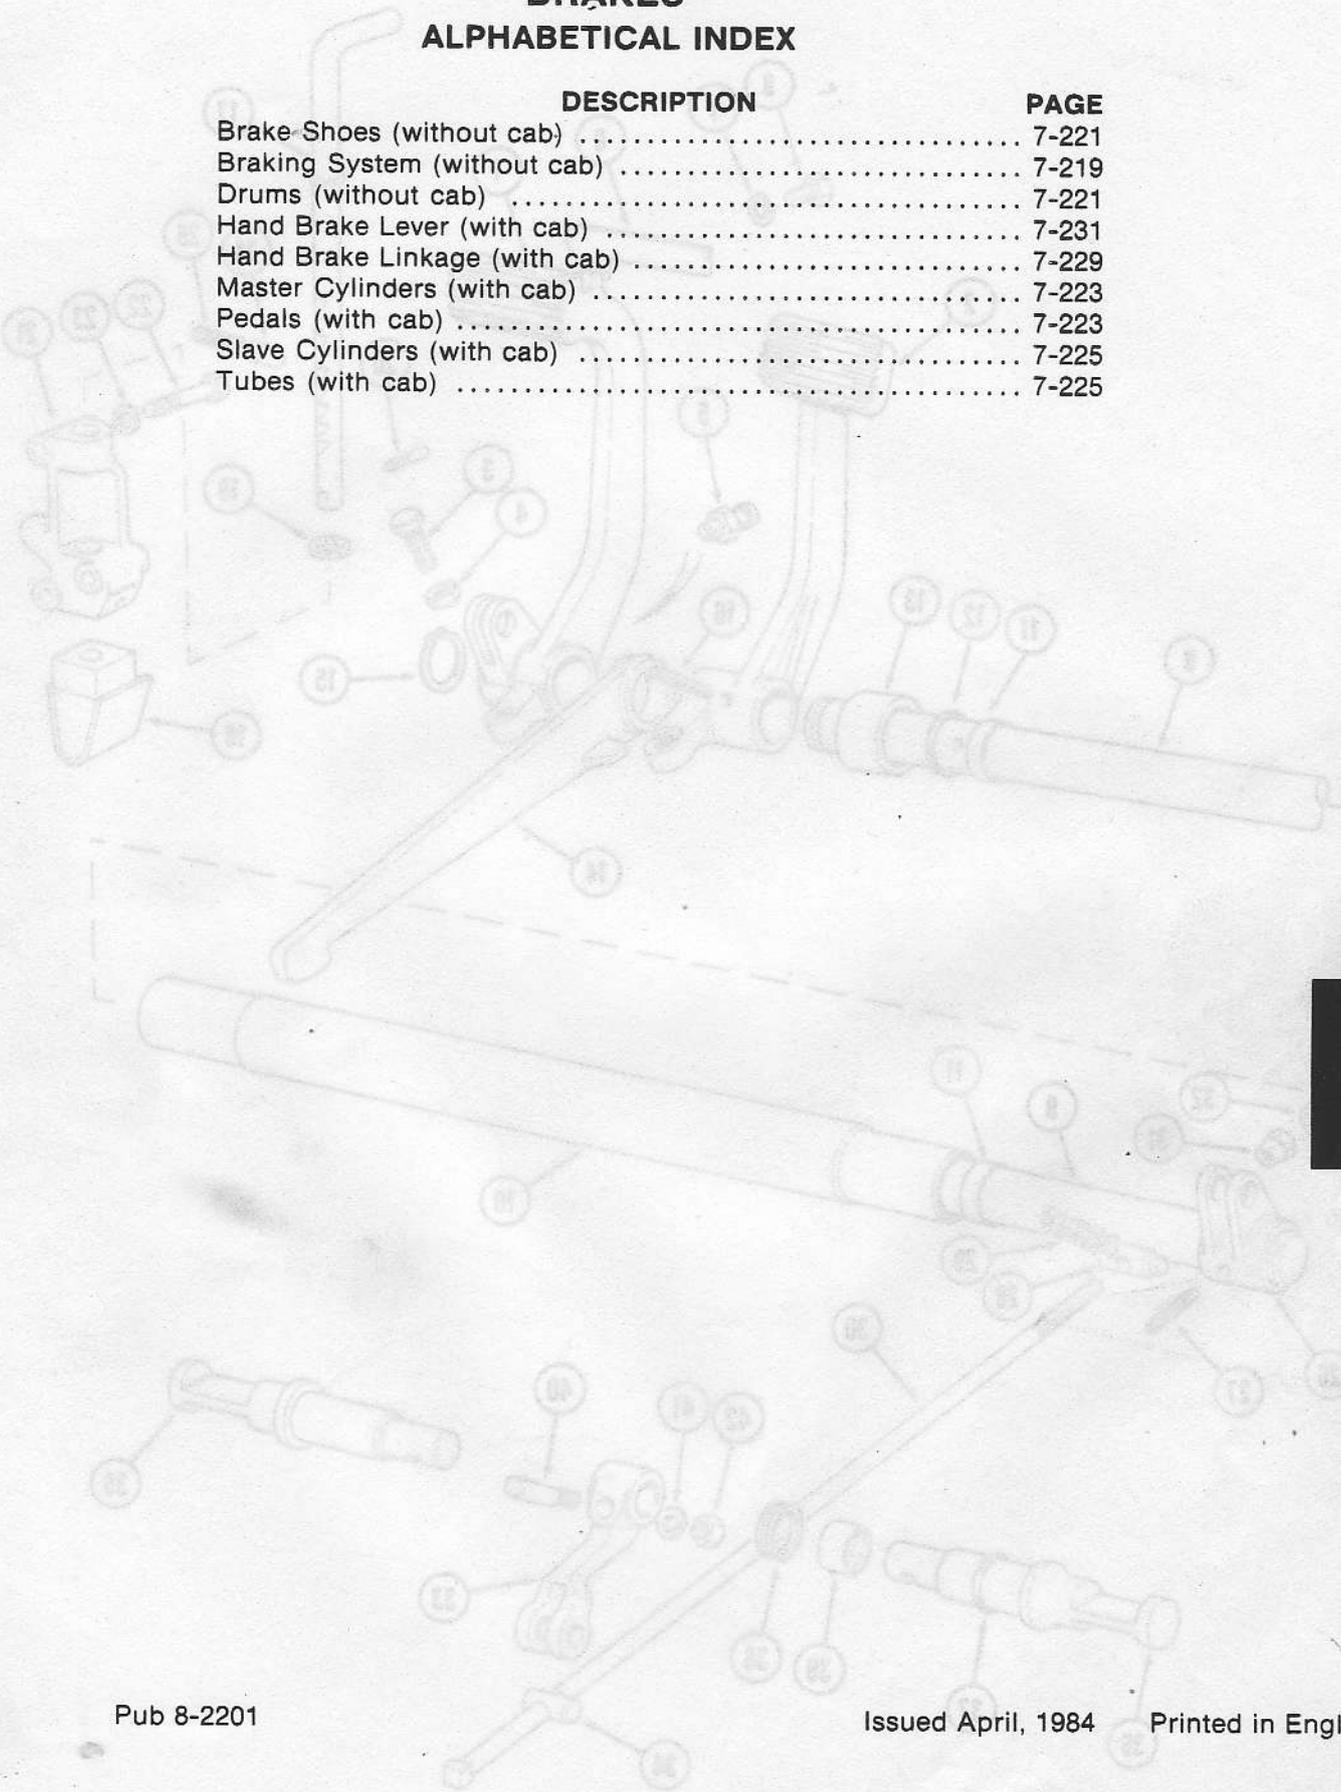

PAGE
7-251
7-219
7-221
7-227
7-228
7-233
7-235
7-238
7-239

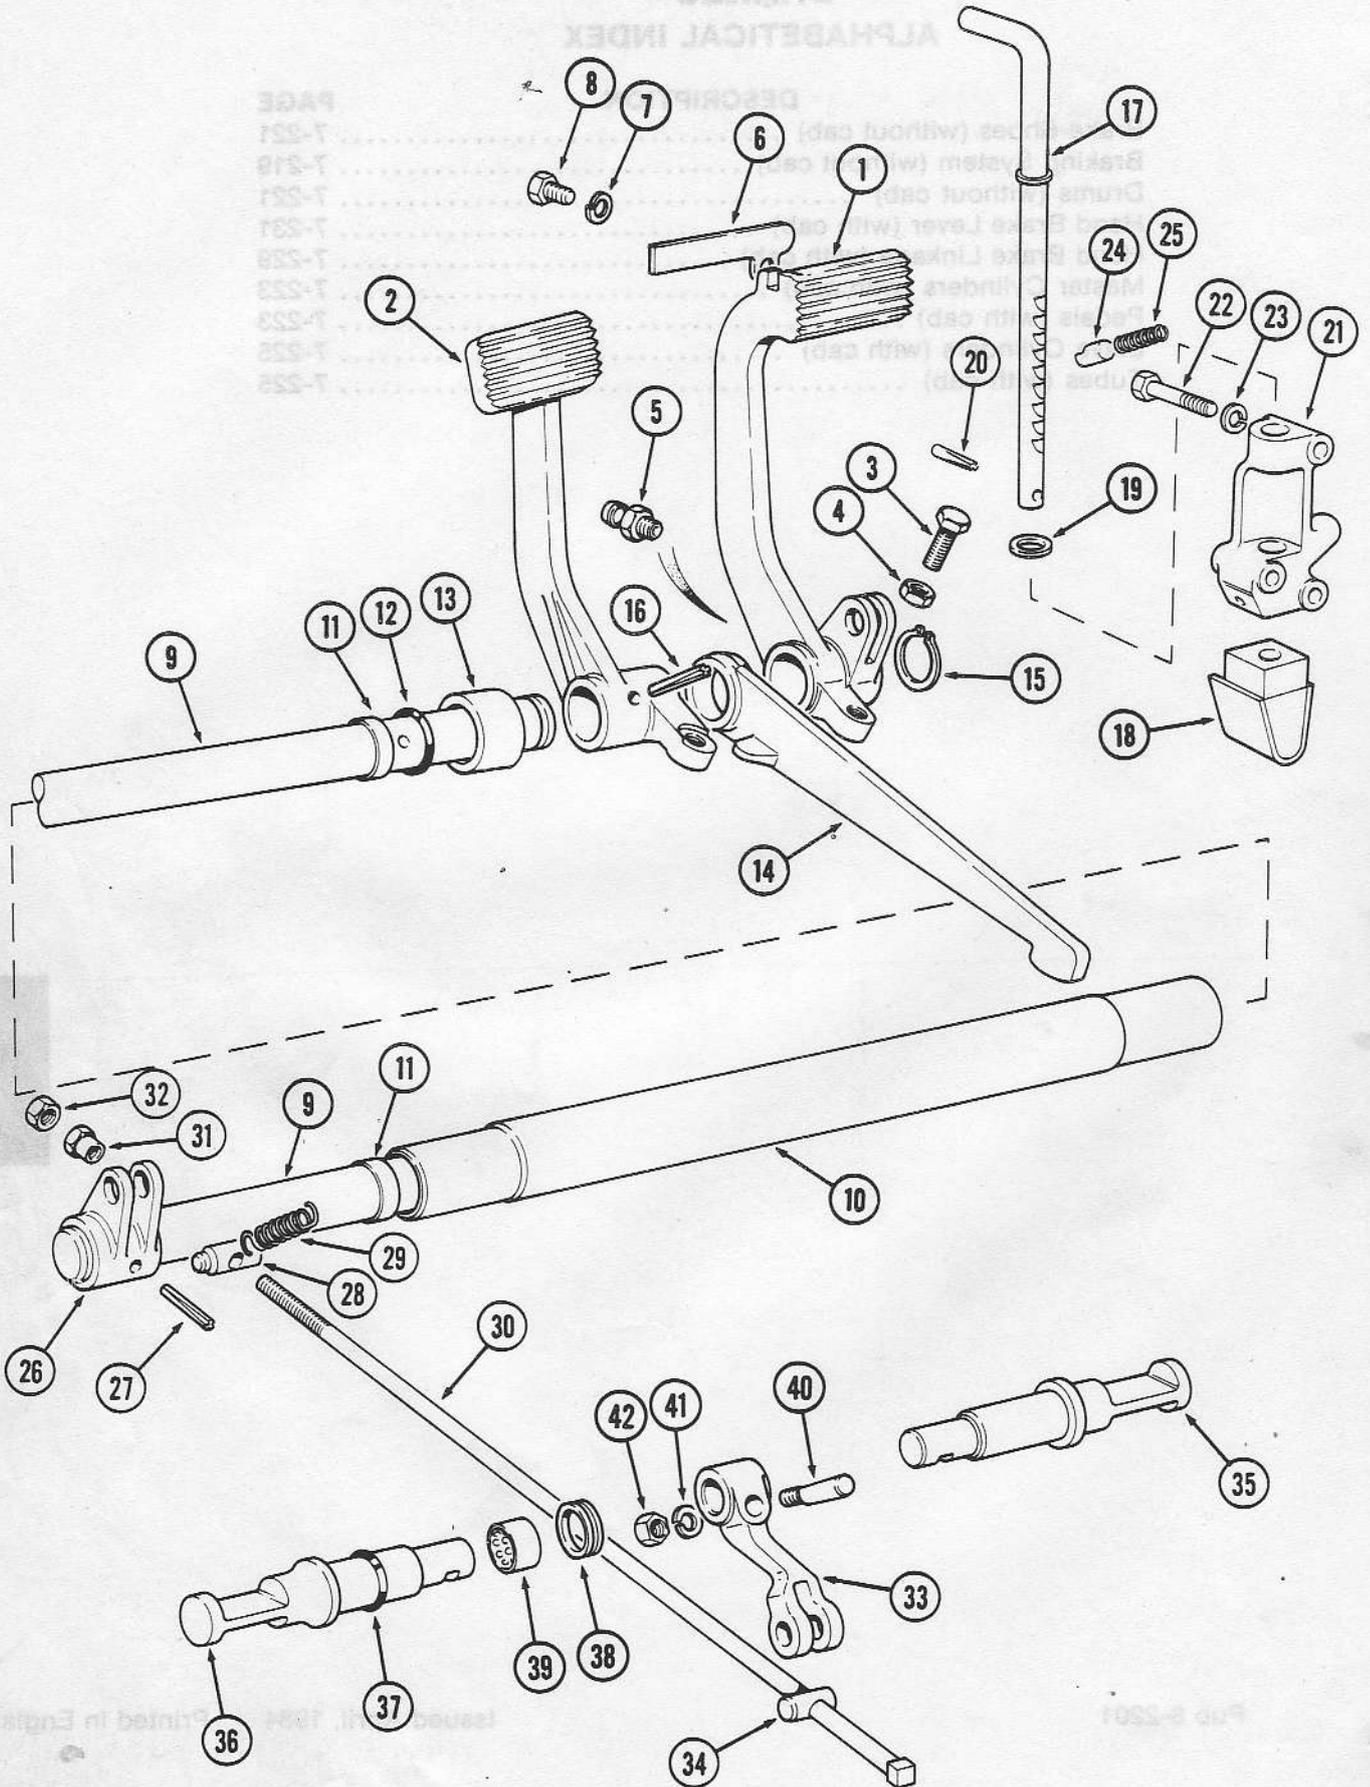


MECHANICAL BRAKING SYSTEM TRACTORS WITHOUT CAB

Ref.	Part No.	Description	Required
1	K 200756	PEDAL - brake, right-hand	1
2	K 200755	PEDAL - brake, left-hand	1
3	K 603009	BOLT - 7/16 UNC x 1-3/4 inch	1
4	K 607053	NUT - lock, 7/16 inch UNC	1
5	K 13176	FITTING - grease, 1/4 inch ANF	2
6	K 948974	PLATE - locating, pedals	1
7	K 626700	WASHER - lock, 3/8 inch	1
8	K 600500	BOLT - 3/8 inch UNC, special	1
9	K 200763	SHAFT - cross	1
10	K 200764	TUBE - cross shaft	1
11	K 947343	BUSHING - tube	2
12	K 68123	O-RING - 1-7/8 inch (47 mm) OD	2
13	K 627236	SPACER - cross shaft	1
14	K 307875	LEVER - operating, hand brake	1
15	K 11538	RING - snap, 1-1/2 inch (38 mm) external	1
16	K 11737	PIN - 3/8 x 2-1/4 inch	1
17	K 307902	LEVER - hand	1
18	K 949260	STIRRUP - lever	1
19	K 626736	WASHER - 5/8 inch (16 mm) special	1
20	K 623892	PIN - roll, 5/16 x 1-1/2 inch	2
21	K 307900	HOUSING - hand brake lever	1
22	K 650350	BOLT - M8 x 60 mm	3
23	K 651828	WASHER - lock, 8 mm	3
24	K 909588	PAWL - hand lever	1
25	K 14651	SPRING - pawl	1
26	K 916679	LEVER - cross shaft	1
27	K 11737	PIN - 3/8 x 2-1/4 inch	2
28	K 919706	PIN - shaft lever	2
29	K 624927	SPRING - return	2
30	K 940583	ROD - brake	2
31	K 607504	NUT - adjusting, 3/8 inch UNC	2
32	K 607002	NUT - 3/8 inch UNC	2
33	K 928589	LEVER - cam	2
34	K 14744	PIN - cam lever	2
35	K 954715	CAMSHAFT - brake, right-hand	1
36	K 954714	CAMSHAFT - brake, left-hand	1
37	K 15264	O-RING - 1-1/4 inch (31 mm) ID	2
38	K 204285	SEAL - dirt	2
39	K 621406	BUSHING - axle housing	4
40	K 609425	PIN - lock, 3/8 inch UNC	2
41	K 19482	WASHER - lock, 3/8 inch	2
42	K 607045	NUT - 3/8 inch UNC	2

BRAKE SHOES AND DRUMS TRACTORS WITHOUT CAB


Ref.	Part No.	Description	Required
1	K 954714	CAMSHAFT - brake, left-hand	1
2	K 954715	CAMSHAFT - brake, right-hand	1
3	K 621406	BUSHING - axle housing	4
4	K 204285	SEAL - dirt	2
5	K 15264	O-RING - 1-1/4 inch (31 mm) ID	2
6	K 920442	SHOE ASSEMBLY - brake, with lining	4
7	K 964542	LINING - brake (4) and rivets	1
8	K 920446	PIN - spring anchor	8
9	K 11933	PIN - cotter, 1/8 x 5/8 inch	16
10	K 624930	SPRING - brake shoes	4
11	K 954710	PIN - fulcrum	2
12	K 19497	WASHER - 7/8 inch (22 mm)	2
13	K 34454	RING - snap, 7/8 inch (22 mm) external	2
14	K 921829	DRUM - brake	2
15	K 928589	LEVER - brake camshaft	2
16	K 609425	PIN - lock, 3/8 inch UNC	2
17	K 19482	WASHER - lock, 3/8 inch	2
18	K 607002	NUT - 3/8 inch UNC	2

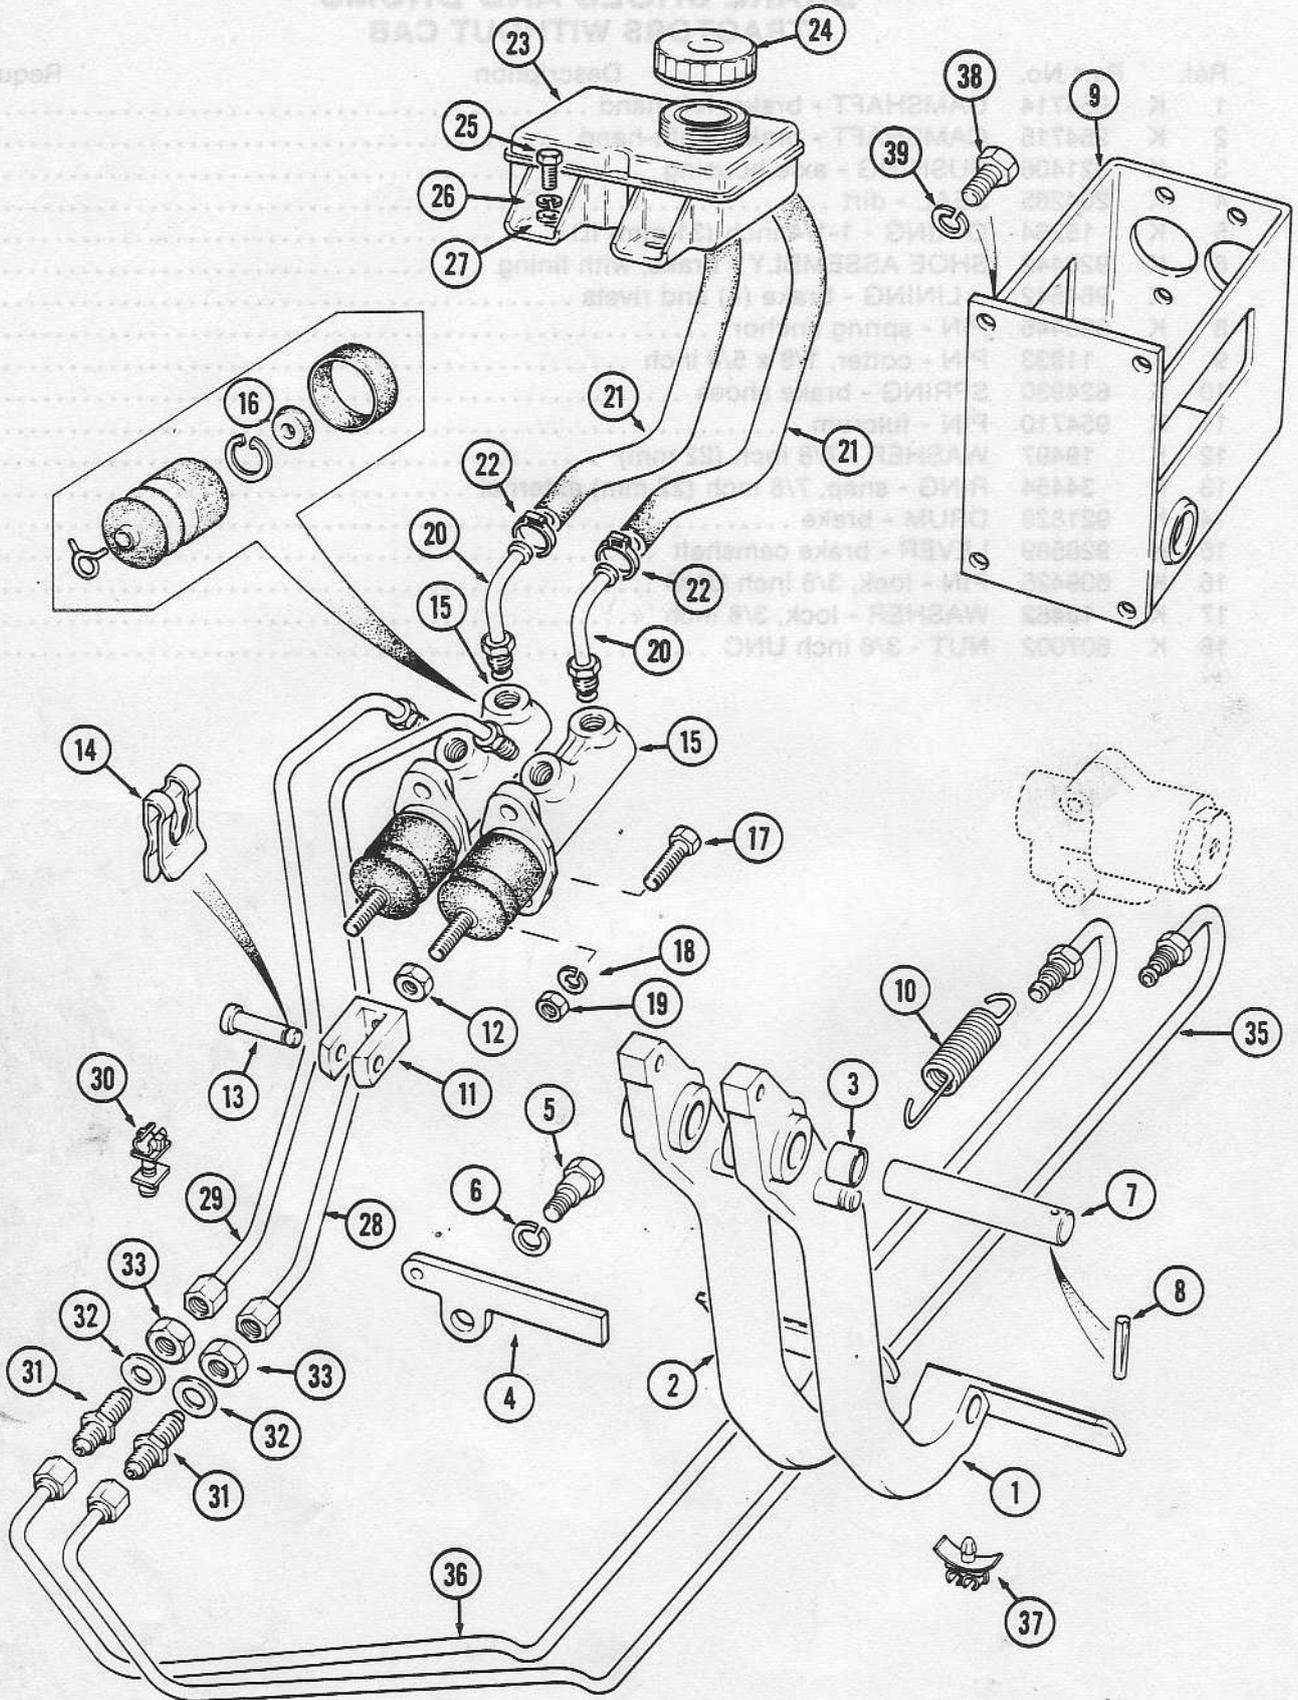

BRAKE PEDALS AND MASTER CYLINDERS TRACTORS WITH CAB

Ref.	Part No.	Description	Required
1	K 307854	PEDAL - brake, left-hand	1
2	K 307855	PEDAL - brake, right-hand	1
3	K 655525	BUSHING - pedal	2
4	K 948974	LOCK - pedals	1
5	K 600500	BOLT - special	1
6	K 626700	WASHER - lock	1
7	K 303546	PIN - pivot	1
8	K 690706	PIN - groove, 6 x 30 mm	1
9	K 303164	BRACKET - pedal	1
10	K 303540	SPRING - return	2
11	K 622212	END - fork, 5/16 inch UNC	2
12	K 616981	NUT - 5/16 inch UNC	2
13	K 625930	PIN - clevis, 5/16 x 1-3/16 inch	2
14	K 625040	CLIP - spring	2
15	K 950544	MASTER CYLINDER - (Girling 73067017)	2
16	K 964572	KIT - seals, mineral oil	1
17	K 602844	BOLT - 5/16 UNC x 1-1/8 inch	4
18	K 19481	WASHER - lock, 5/16 inch	4
19	K 607044	NUT - 5/16 inch UNC	4
20	K 302099	TUBE - master cylinder inlet	2
21	K 203032	HOSE - reservoir to master cylinder	2
22	K 656903	CLIP - hose	2
23	K 301441	RESERVOIR	1
24	K 301443	CAP - filler	1
25	K 652474	BOLT - M6 x 12 mm	2
26	K 651847	WASHER - lock, 6 mm	2
27	K 651777	WASHER - 6 mm	2
28	K 301270	TUBE - left-hand, master cylinder to union	1
29	K 301269	TUBE - right-hand, master cylinder to union	1
30	K 625008	CLIP - tube	2
31	K 301280	UNION - M12	2
32	K 626686	WASHER - 12 mm	2
33	K 652100	NUT - lock, M12	2
35	K 308225	TUBE - union to balance valve, left-hand	1
36	K 308226	TUBE - union to balance valve, right-hand	1
37	K 625024	CLIP - brake tube	2
38	K 650641	BOLT - M8 x 16 mm	4
39	K 651848	WASHER - lock, 8 mm	4


TRACTORS WITH CAB
BRAKE PEDALS AND MASTER CYLINDERS

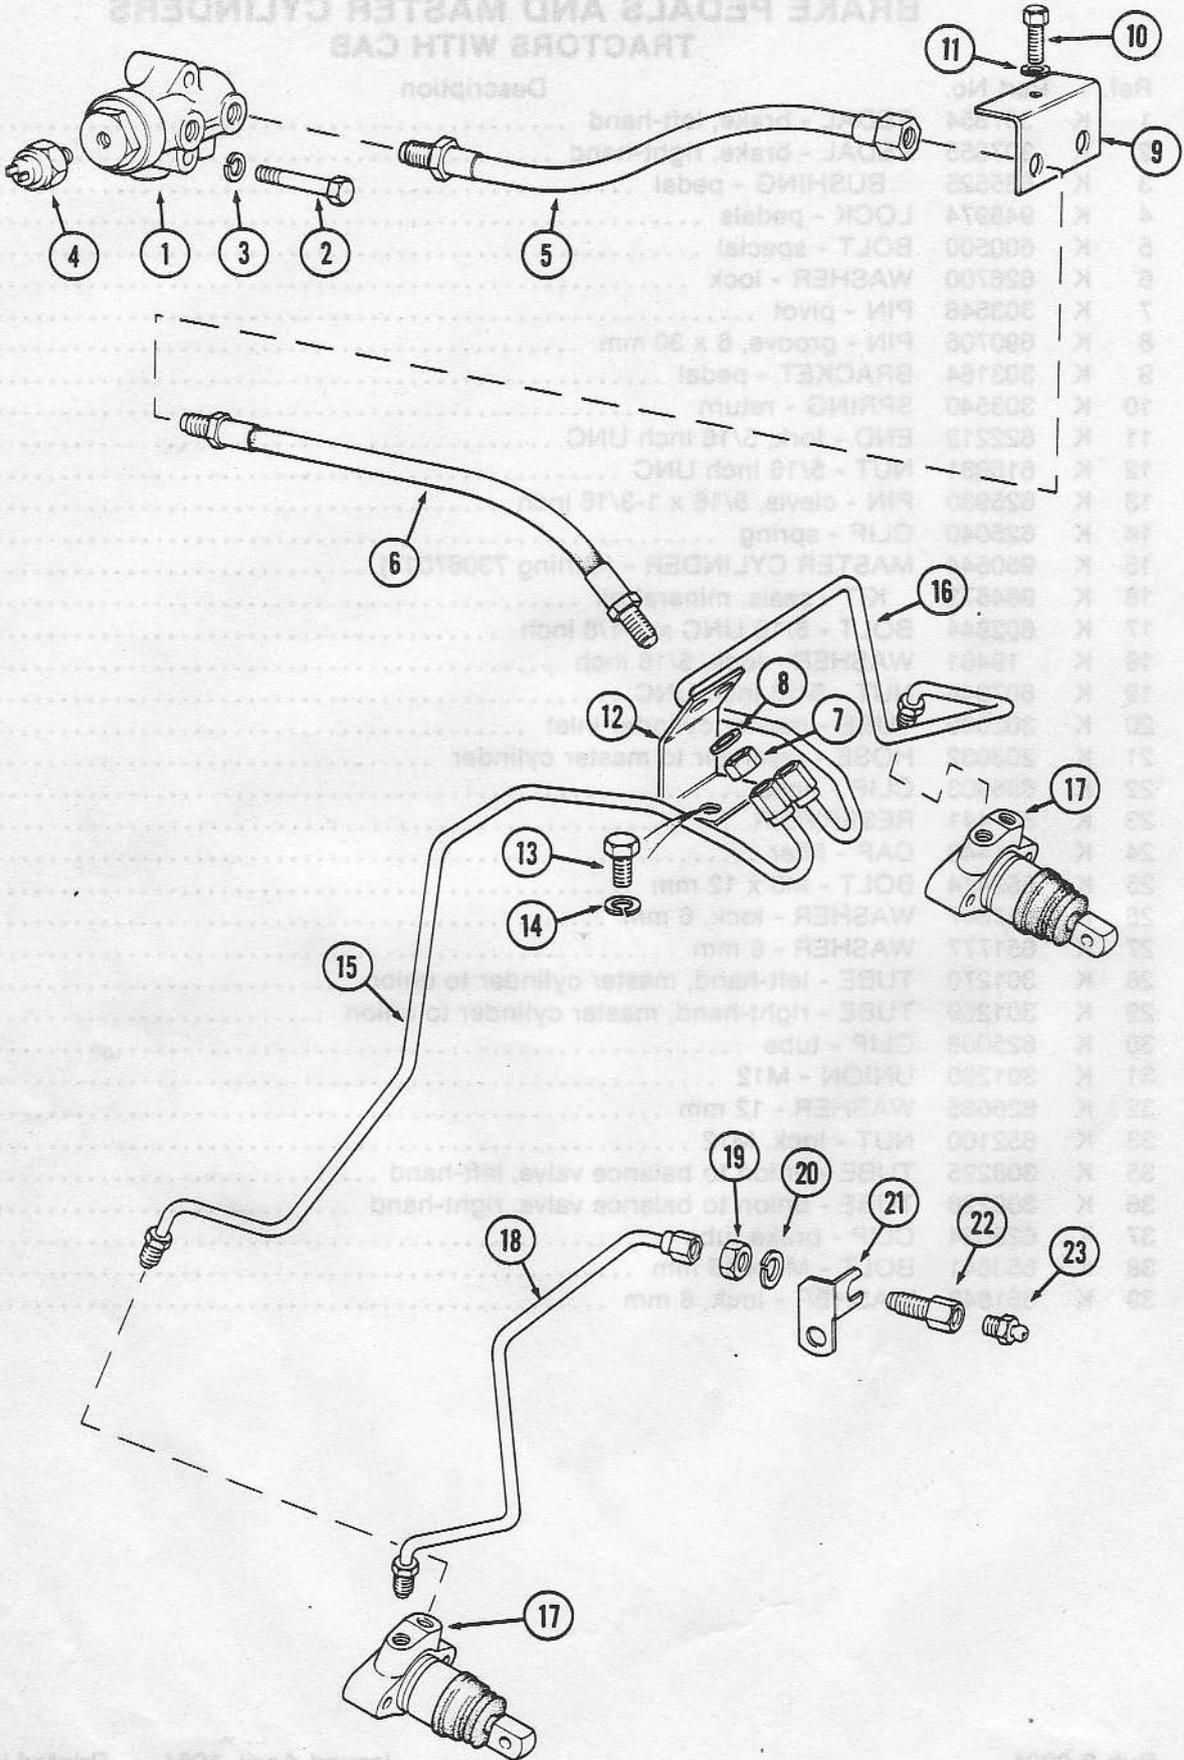

BRAKE TUBES AND SLAVE CYLINDERS TRACTORS WITH CAB

Ref.	Part No.	Description	Required
1	K 957107	VALVE - brake balance	1
2	K 650635	BOLT - M6 x 55 mm	2
3	K 651847	WASHER - lock, 6 mm	2
4	K 951976	SWITCH - stop lamps	1
5	K 305952	TUBE - balance valve to flexible	2
6	K 306308	TUBE - flexible	2
7	K 652100	NUT - lock, M12	2
8	K 626866	WASHER - 12 mm	2
9	K 303593	BRACKET - flexible tube	1
10	K 650628	BOLT - M6 x 20 mm	1
11	K 651847	WASHER - lock, 6 mm	1
12	K 951919	BRACKET - tube	1
13	K 602903	SCREW - 3/8 UNC x 7/8 inch	1
14	K 19482	WASHER - lock, 3/8 inch	1
15	K 203294	TUBE - slave cylinder, left-hand	1
16	K 203293	TUBE - slave cylinder, right-hand *	1
17	K 203416	CYLINDER - slave	2
18	K 302469	TUBE - air removal, left-hand	1
18	K 302470	TUBE - air removal, right-hand	1
19	K 652100	NUT - lock, M12	2
20	K 651850	WASHER - lock, 12 mm	2
21	K 204331	BRACKET - left-hand tube	1
21	K 204332	BRACKET - right-hand tube	1
22	K 302501	ADAPTOR - M12	2
23	K 964534	SCREW - air removal, M12	2

TRACTOR
BRAKE TUBES AND SLAVE CYLINDERS
TRACTORS WITH CAB

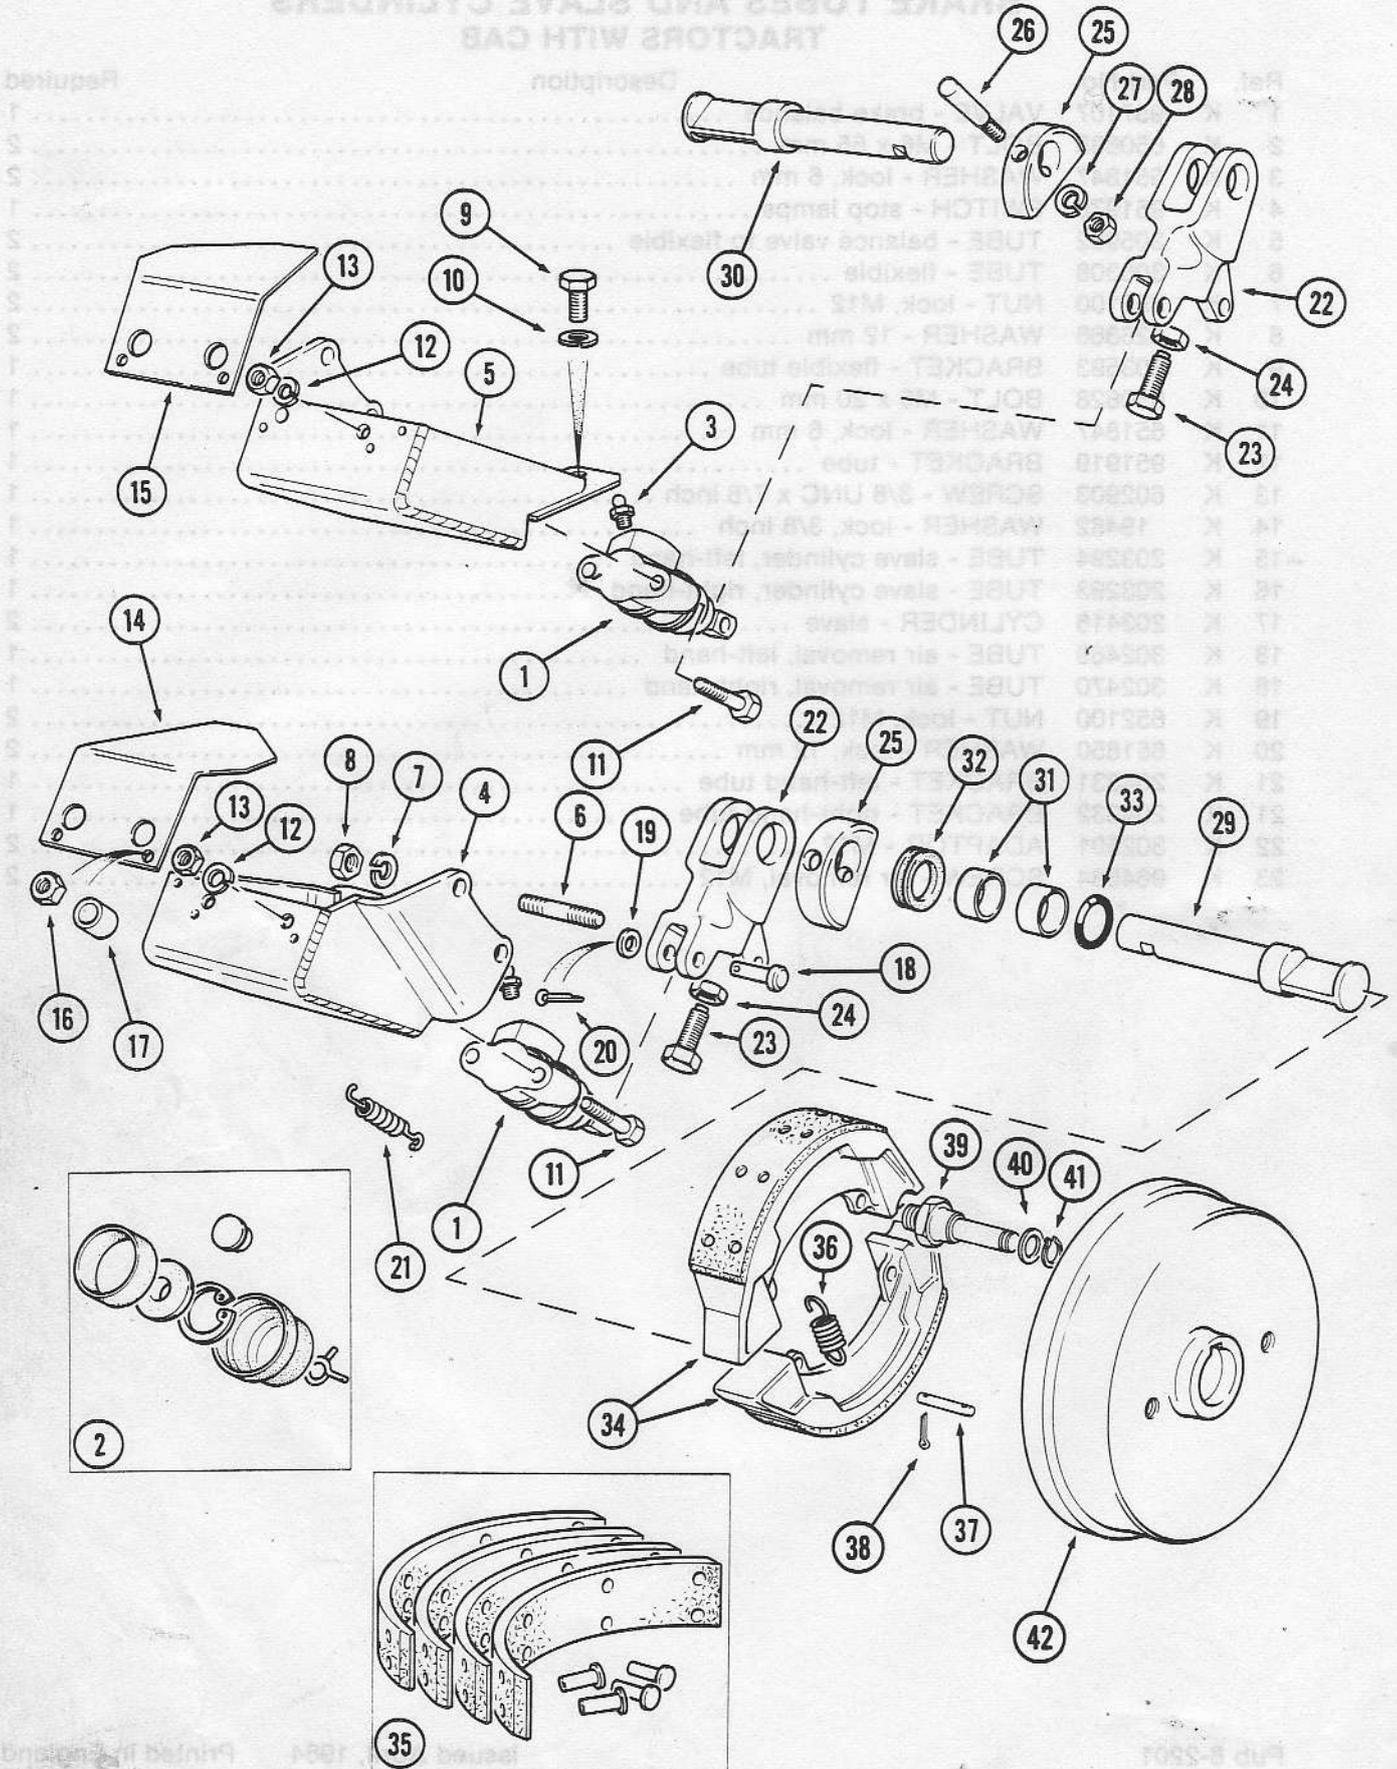

SLAVE CYLINDERS AND BRAKE SHOES TRACTORS WITH CAB


Ref.	Part No.	Description	Required
1	K 203416	CYLINDER - slave	2
2	K 965723	SEAL KIT - mineral oil seals	1
3	K 964534	SCREW - air removal	1
4	K 300228	BRACKET - left-hand cylinder	1
5	K 300233	BRACKET - right-hand cylinder	1
6	K 608413	STUD - 1/2 UNC x 2-1/2 inch	4
7	K 19484	WASHER - lock, 1/2 inch	4
8	K 607004	NUT - 1/2 inch UNC	4
9	K 602906	BOLT - 3/8 UNC x 1-1/4 inch	2
10	K 19482	WASHER - lock, 3/8 inch	2
11	K 602853	BOLT - 5/16 UNC x 2-1/4 inch	4
12	K 19481	WASHER - lock, 5/16 inch	4
13	K 607044	NUT - 5/16 inch UNC	4
14	K 308502	SHIELD - left-hand brake cylinder	1
15	K 308503	SHIELD - right-hand brake cylinder	1
16	K 607044	NUT - 5/16 inch UNC	4
17	K 304489	SPACER - shield	4
18	K 625955	PIN - clevis, 5/16 x 1-13/16 inch	2
19	K 626682	WASHER - 5/16 inch (8 mm)	2
20	K 11934	PIN - split, 1/16 x 1/2 inch	2
21	K 624946	SPRING - cam lever return	2
22	K 948977	LEVER - cam	2
23	K 951528	BOLT - adjusting, 5/8 inch UNC	2
24	K 607048	NUT - 5/8 inch UNC	2
25	K 948979	CAM - adjuster	2
26	K 609425	PIN - 3/8 inch UNC	2
27	K 19482	WASHER - lock, 3/8 inch	2
28	K 607002	NUT - 3/8 inch UNC	2
29	K 200171	CAMSHAFT - brake, left-hand	1
30	K 200172	CAMSHAFT - brake, right-hand	1
31	K 621406	BUSHING - axle housing	4
32	K 204285	SEAL - dirt	2
33	K 15264	O-RING - 1-1/4 inch (32 mm) external diameter	2
34	K 920442	SHOE - brake (with lining)	4
35	K 964542	LINING KIT - brake (4) with rivets	1
36	K 624930	SPRING - brake shoes	4
37	K 920446	PIN - spring anchor	8
38	K 11933	PIN - cotter, 1/8 x 5/8 inch	16
39	K 954710	PIN - shoe anchor	2
40	K 19497	WASHER - 7/8 inch	4
41	K 34454	RING - snap, 7/8 inch (22 mm) external	2
42	K 921829	DRUM - brake	2

200219

SLAVE CYLINDERS AND BRAKE SHOES
TRACTORS WITH CAB

Required


Description

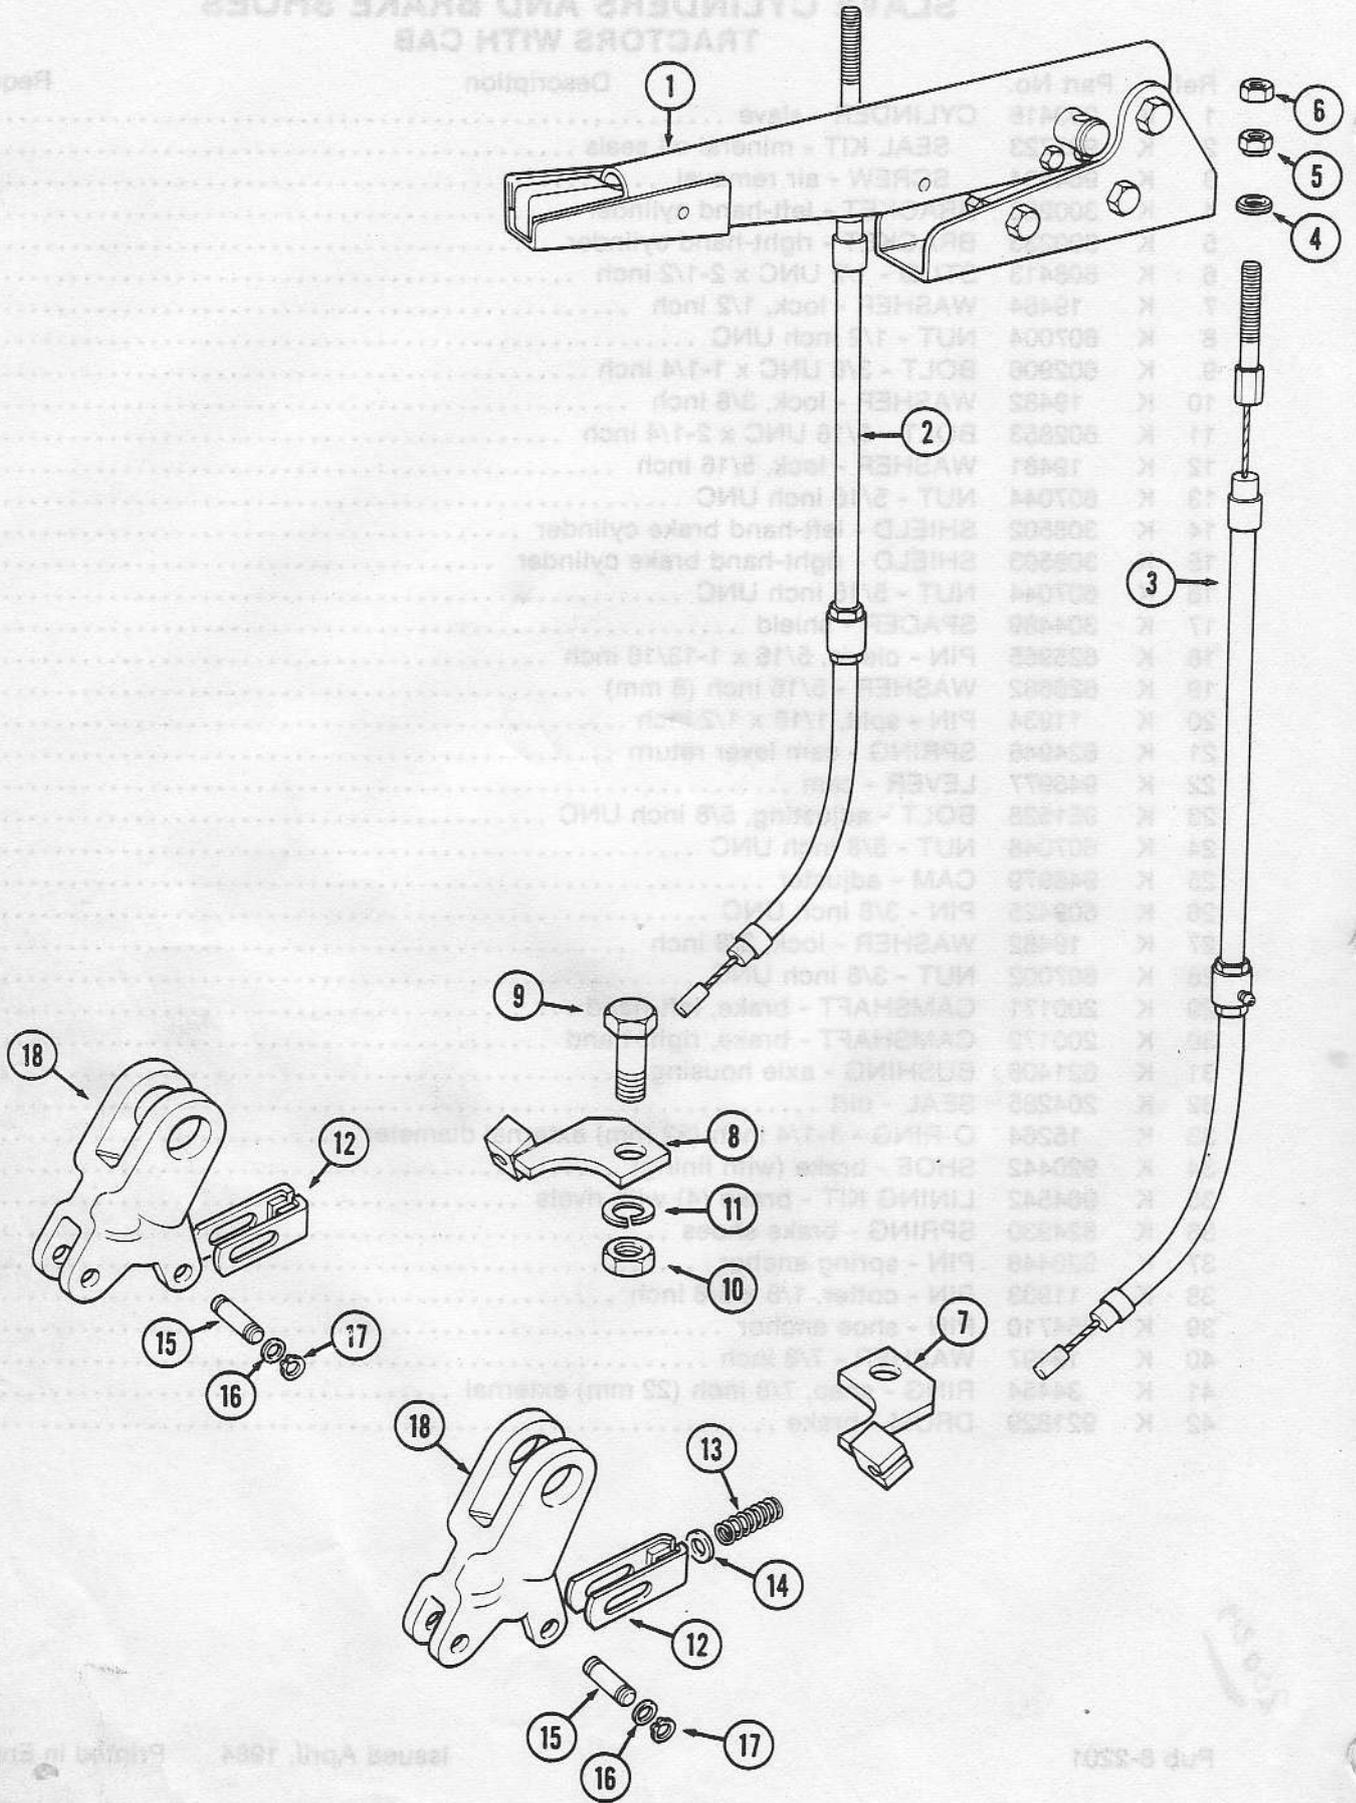

HAND BRAKE LINKAGE TRACTORS WITH CAB

Ref.	Part No.	Description	Required
1	REF	LEVER - hand (See Page 7-231)	1
2	K 949504	CABLE - inner and outer, right-hand	1
3	K 949505	CABLE - inner and outer left-hand	1
4	K 949503	WASHER - spherical, 5/16 inch	2
5	K 617285	NUT - 5/16 inch UNF, special	2
6	K 622807	NUT - lock, 5/16 inch UNF	2
7	K 304429	BRACKET - left-hand cable anchor	1
8	K 304430	BRACKET - right-hand cable anchor	1
9	K 603308	BOLT - 5/8 UNC x 1-3/4 inch	2
10	K 607006	NUT - 5/8 inch UNC	2
11	K 19485	WASHER - lock, 5/8 inch	2
12	K 949523	FORK END - brake cable	2
13	K 625259	SPRING - cable return	2
14	K 626911	WASHER - 11/32 inch (9 mm)	2
15	K 949552	PIN - grooved, 5/16 x 1-1/4 inch	2
16	K 626682	WASHER - 5/16 inch (8 mm)	4
17	K 621482	RING - retaining, 5/16 inch (8 mm) external	4
18	K 948977	LEVER - cam	2

TRACTOR
HAND BRAKE LINKAGE
TRACTORS WITH CAB

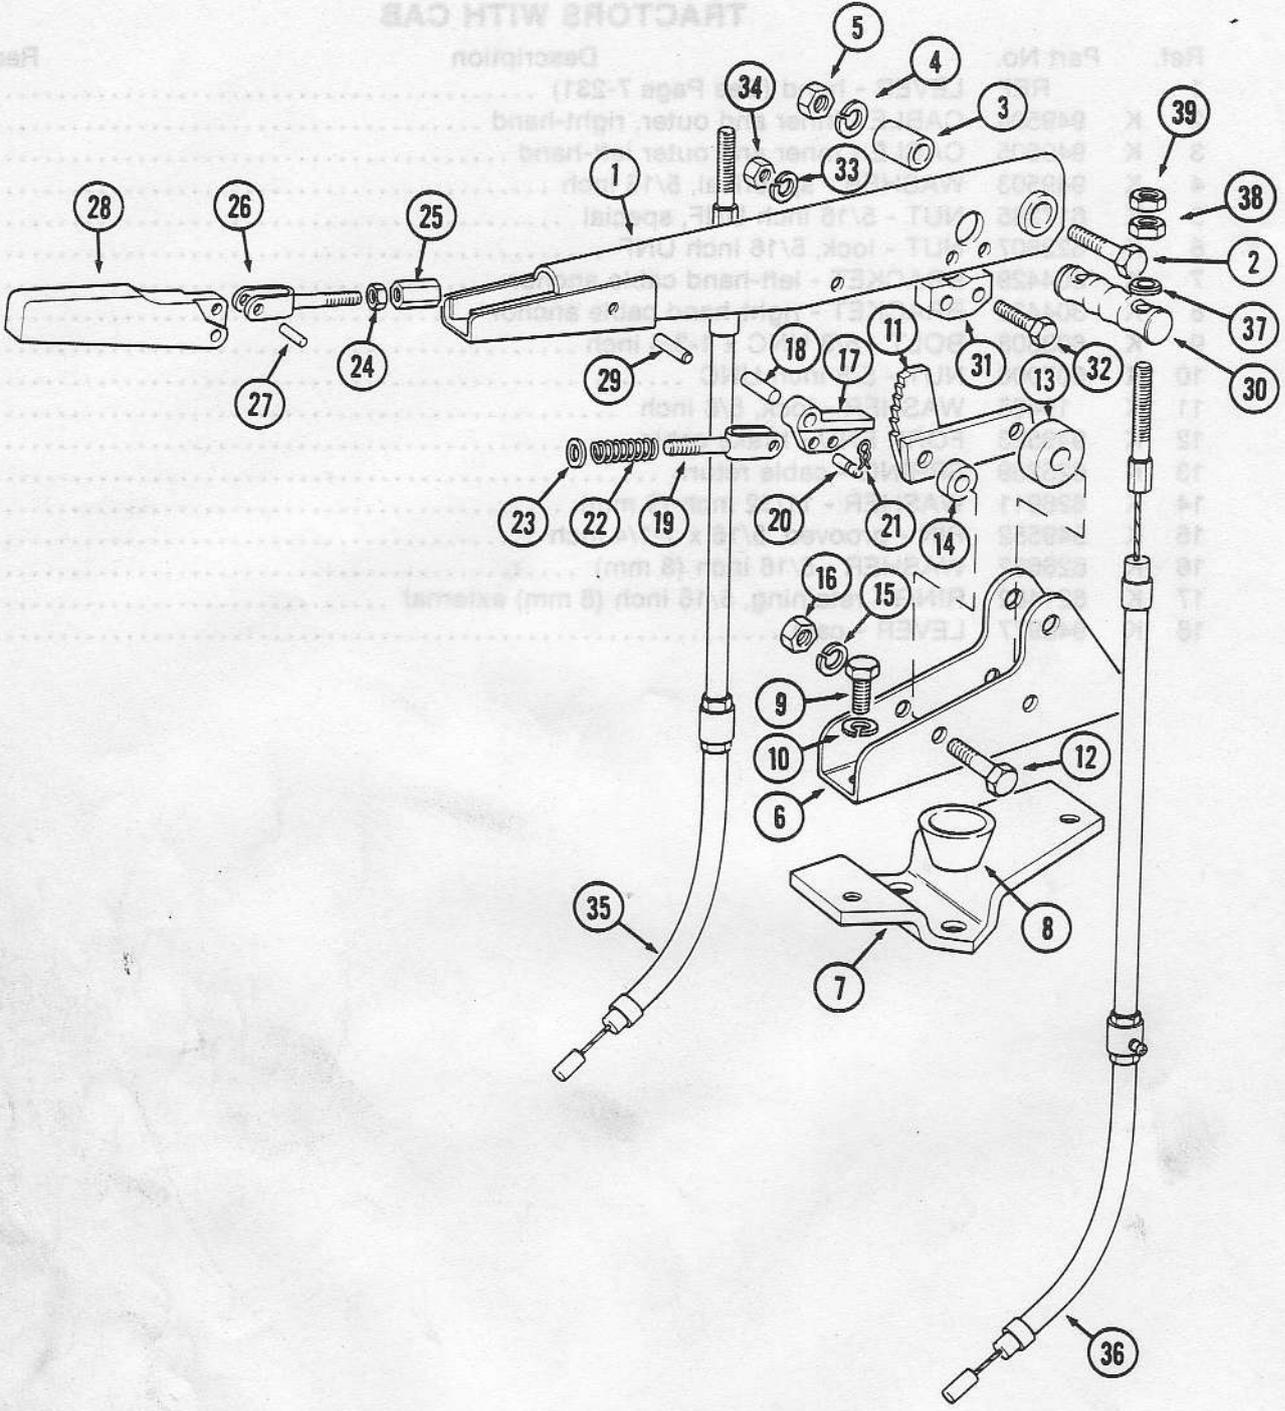

HAND BRAKE LEVER TRACTORS WITH CAB

Ref.	Part No.	Description	Required
1	K 955643	LEVER - hand	1
2	K 600526	BOLT - 3/8 UNC x 1-7/8 inch	1
3	K 627052	SPACER	1
4	K 19482	WASHER - lock, 3/8 inch	1
5	K 607045	NUT - 3/8 inch	1
6	K 955244	BRACKET - hand lever support	1
7	K 949506	PLATE - retaining	1
8	K 949507	SEAL - rubber	2
9	K 602845	BOLT - 5/16 UNC x 3/4 inch	2
10	K 19481	WASHER - lock, 5/16 inch	2
11	K 307481	RATCHET	2
12	K 600369	BOLT - 5/16 UNC x 1-3/4 inch, special	2
13	K 627109	SPACER - 1-3/8 inch (35 mm)	1
14	K 627110	SPACER - 3/4 inch (19 mm)	1
15	K 19481	WASHER - lock, 5/16 inch	2
16	K 607044	NUT - 5/16 inch UNC	2
17	K 307484	PAWL	1
18	K 623924	PIN - spring, 1/4 x 7/8 inch	1
19	K 950033	ROD - pull	1
20	K 949499	PIN - grooved 3/16 x 1/2 inch	1
21	K 621572	CLIP - spring	1
22	K 625099	SPRING	1
23	K 626310	WASHER - 3/16 inch (5 mm)	1
24	K 617080	NUT - No. 10 UNF	2
25	K 617297	SLEEVE - adjusting, No. 10 UNF	1
26	K 950033	ROD - pull	1
27	K 949498	PIN - 3/16 x 1/2 inch	1
28	K 950026	LEVER - release	1
29	K 623773	PIN - 3/16 x 7/8 inch	1
30	K 949501	BAR - balance	1
31	K 949502	BLOCK - support	1
32	K 602739	BOLT - 1/4 UNC x 1-1/8 inch	2
33	K 19480	WASHER - lock, 1/4 inch	2
34	K 607043	NUT - 1/4 inch UNC	2
35	K 949504	CABLE - inner and outer, right-hand	1
36	K 949505	CABLE - inner and outer left-hand	1
37	K 949503	WASHER - spherical, 5/16 inch	2
38	K 617285	NUT - 5/16 inch UNF, special	2
39	K 622807	NUT - lock, 5/16 inch UNF	2

1331 TRACTOR
HAND BRAKE LEVER
TRACTORS WITH CAB

Quantity	Description	Part No.	Ref.
1	LEVER - hand	925849	1
1	BOLT - 3/8 UNC x 1-7/8 inch	900908	2
1	SPACER	927052	3
1	WASHER - lock, 3/8 inch	19482	4
1	NUT - 3/8 inch	907045	5
1	BRACKET - hand lever support	925244	6
1	PLATE - retaining	949806	7
2	SEAL - rubber	949507	8
2	BOLT - 5/16 UNC x 3/4 inch	902845	9
2	WASHER - lock, 5/16 inch	19481	10
2	RATCHET	307481	11
2	BOLT - 5/16 UNC x 1-3/4 inch, special	900989	12
1	SPACER - 1-3/8 inch (35 mm)	927189	13
1	SPACER - 3/4 inch (19 mm)	927110	14
2	WASHER - lock, 5/16 inch	19481	15
2	NUT - 5/16 inch UNC	907044	16
	PAWL	307484	17
	PIN - spring, 1/4 x 1/8 inch	925924	18
	ROD - pull	920093	19
	PIN - grooved 3/16 x 1/2 inch	949499	20
	CLIP - spring	921872	21
	SPRING	925089	22
	WASHER - 3/8 inch (8 mm)	925970	23
	NUT - No. 10 UNF	917089	24
	SLEEVE - adjusting, No. 10 UNF	917287	25
	ROD - pull	920093	26
	PIN - 3/16 x 1/2 inch	949488	27
	LEVER - release	920026	28
	PIN - 3/16 x 1/8 inch	923778	29
	BAR - balance	949501	30
	BLOCK - support	949502	31
	BOLT - 1/4 UNC x 1-1/8 inch	902739	32
	WASHER - lock, 1/4 inch	19480	33
	NUT - 1/4 inch UNC	907043	34
	CABLE - inner and outer, right-hand	949504	35
	CABLE - inner and outer, left-hand	949505	36
	WASHER - spherical, 5/16 inch	949503	37
	NUT - 5/16 inch UNF, special	917385	38
	NUT - lock, 5/16 inch UNF	922897	39